

GX-1 5/GX-15R


GX-25/GX-25R

*Professional
Guitar Amplifier*


OWNER'S MANUAL



FRONT PANEL

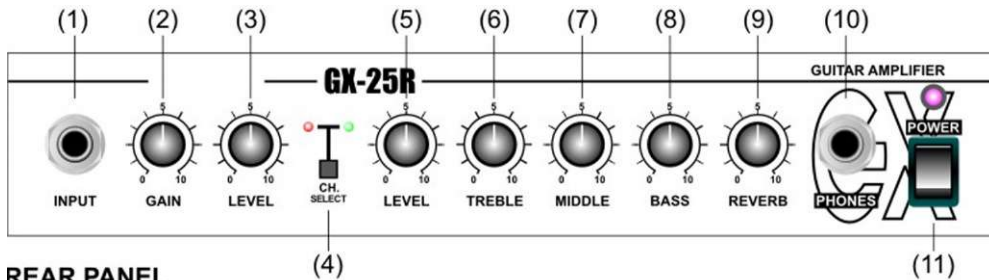

REAR PANEL

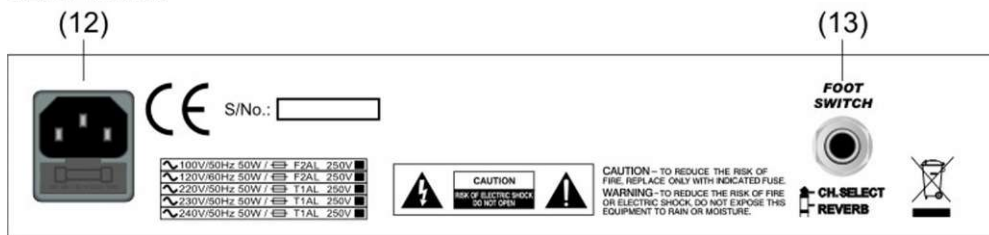

FEATURES:

Front Panel

- (1) **INPUT:**
Connects the electric guitar.
- (2) **GAIN:**
Adjusts the degree of distortion for boost channel.
- (3) **LEVEL (BOOST CHANNEL):**
Controls the complete signal of the channel.
- (4) **CHANNEL SELECTOR BUTTON:**
Chooses between boost channel and normal channel.
- (5) **LEVEL (NORMAL CHANNEL):**
Controls the complete signal of the channel.
- (6) **TREBLE:**
Provides high frequency equalization as required.
- (7) **MIDDLE:**
Provides active midrange equalization with cut and boost.
- (8) **BASS:**
Provides desired amount of bass response.

(9) REVERB:

Adjusts the reverberation effect (Optional).

(10) PHONES:

Allows signal to flow to both sides of any stereo headphone (Impedance>8Q).

(11) POWER :

Turns amplifier On and Off.

Rear Panel

(12) AC SOCKET:

Connects AC power cable.

(13) FootSwitchc

The reverb and channel can be operated with a remote footswitch for hands free operation.

SPECIFICATIONS

	GX-25/GX-25R	GX-15/GX-15R
Output Power	25Wrms	15Wrms
Frequency Range	90-8KHZ	90-8KHZ
Speaker	8"	8"
Input Impedance	1MΠ	220KΠ
Dimensions (WxHxD mm)	332x331x230	311x322x210
Weights	8.5Kg	7.1 Kg

IMPORTANT SAFETY INSTRUCTION

1. Read these instructions.
2. Keep these instructions.
3. Read all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a damp cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not defeat the safety purpose of the polarized-type plug. A grounding type plug has two blades and a third grounding prong. The third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
9. Do not install near any heat sources such as radiators, heat registers, stoves. Or other apparatus (including amplifiers) that produce heat.
10. Protect the power cord from being walked on or pinched particularly at plug. Convenience receptacles. And the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart. Stand. Tripod. Bracket. Or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way. Such as power-supply cord or plug is damaged. Liquid has been spilled or objects have fallen into the apparatus. The apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids. Such as vases, shall be placed on the apparatus. The unit shall be not installed in the wooden case or where operate the power switch uneasily/ inconveniently. Do not install this equipment in a confined space such as a book case or similar unit.