

INVOLIGHT


LED FS150



INVOLIGHT
LED FS150

USER MANUAL

Button Instruction

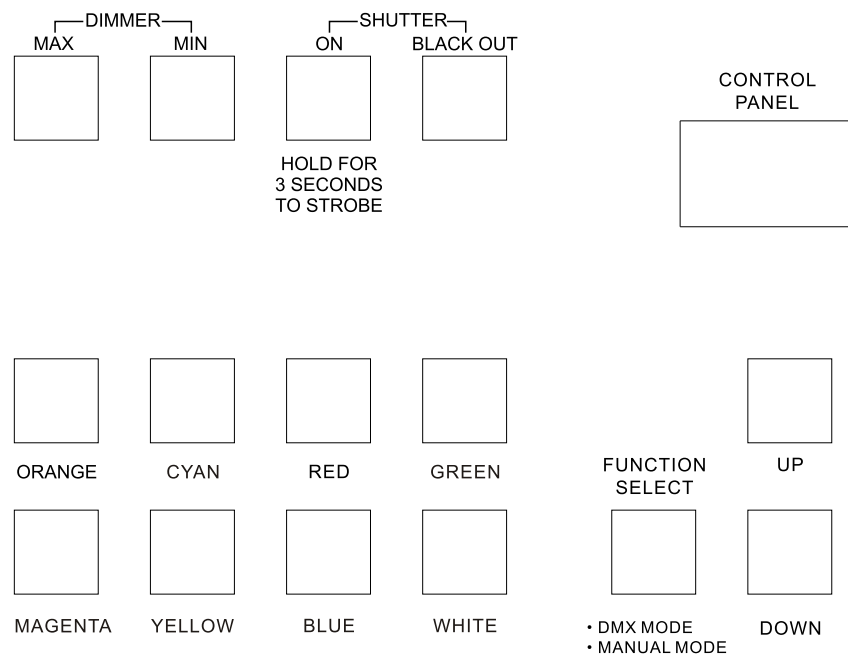

2 Buttons of Dimmer: The left button is to increase and the right one is to decrease. (It works after the fixture is open)

2 Buttons of shutter: The left button is to open when you press it. If hold the button for 2 seconds it will change to Shutter. The shutter will be closed if press the button again. The right button is to close.

The left eight rectangular buttons are corresponding to the eight colors of the color wheel. The right three buttons are menu buttons.

DMX menu display: 001~512

Manual menu display: Nan (Short of Manual)

When you are pressing the dimmer button it is shown 000~100, and it will be back to Nan after 3 seconds.

It will get into color fine function when hold the mode button for 8 seconds. And it will automatically save and exit if hold the button for 8 seconds again.

TABLE OF CONTENTS

Maintenance-----	1
Statement-----	1
Attention Item -----	2
Product introduction -----	2
3 Control Channel -----	3
Button Instruction-----	4

Maintenance

1. Please keep the light in dryness and avoiding use in wet place.
2. Using intermittently can be extended the life.
3. Attention to clean the fan and lens usually in order to get the ventilating effects and lighting effects better.
4. Please do not wipe the crust using organic menstruum for avoid to damage the product.

Statement

The product has well capability and intact packing when leave factory. All of the user should comply with above warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can not be responsible for any malfunction & problem owing to ignore the manual.

Please forgive that we will not be notice for technical change.

Attention Item

1. For guarantee the life of product, please don't put it on the wet place and also not use it in the place over 40 degree.
2. Please don't lay the product on the unfixable or shakable place.
3. Ask for the professional to maintain the product in order to avoid the danger of get an electric shock.
4. Power supply should not be changed over $\pm 10\%$ while the light is using, it will be decreased the life of lamp if the power is too high, but it will be influenced the luminosity if the power is too low.
5. Please look round the manual for ensure the product can be used normally.

Product introduction

Power supply: AC 120-230V 60Hz/50Hz

Power consumption: 200W

Fiting lamp: 150W white color LED

Control: Manual mode or DMX-512 3 channels

Display: LED display

Color wheel:7 colors + white

Shutter: 0-20Hz

Dimmer: Variable electronic dimmer (0-100%)

Lris:2-100% manual iris

3 Control Channel

Accept DMX512 control channel, detail as follow:

Channel	DMX-value	Feature
1 Dimmer	0~255	0~100% mecnanic dimmer
2 Color	0~31	white
	32~63	Dark blue
	64~95	Yellow
	96~127	Pink
	128~159	Green
	160~191	Red
	192~223	Light blue
	224~255	Orange
3 Shutter	0~3	Colse
	4~7	Open
	8~215	Strobe effect with increasing speed
	216~255	Open