

JVC

HD-ILA TV

HD-65DS8DDU

HD-58DS8DDU

INSTRUCTIONS
BEDIENUNGSANLEITUNG
MANUEL D'INSTRUCTIONS
MANUAL DE INSTRUCCIONES
KÄYTTÖOHJE
BRUKSANVISNING

ENGLISH
DEUTSCH
FRANÇAIS
CASTELLANO
SUOMI
SVENSKA

HD-ILA™
Powered by **D-ILA**

Full HD

DynaPiX HD
Powered by **D.L.S.T.**

T-V LINK

**HD
ready**

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

**MAXX
Bass**

DVB®
Digital Video
Broadcasting



Trade Mark of the DVB Digital Video Broadcasting
Project (1991 to 1996) Number : 4345, 4346

ENGLISH

Dear Customer,

This apparatus is in conformance with the valid European directives and standards regarding electromagnetic compatibility and electrical safety.

European representative of Victor Company of Japan, Limited is:

JVC Technology Centre Europe GmbH

Postfach 10 05 52

61145 Friedberg

Germany

DEUTSCH

Sehr geehrter Kunde, sehr geehrte Kundin,

dieses Gerät stimmt mit den gültigen europäischen Richtlinien und Normen bezüglich elektromagnetischer Verträglichkeit und elektrischer Sicherheit überein.

Die europäische Vertretung für die Victor Company of Japan, Limited ist:

JVC Technology Centre Europe GmbH

Postfach 10 05 52

61145 Friedberg

Deutschland

FRANÇAIS

Cher(e) client(e),

Cet appareil est conforme aux directives et normes européennes en vigueur concernant la compatibilité électromagnétique et à la sécurité électrique.

Représentant européen de la société Victor Company of Japan, Limited:

JVC Technology Centre Europe GmbH

Postfach 10 05 52

61145 Friedberg

Allemagne

CASTELLANO

Apreciado cliente,

Este aparato cumple con las normativas y normas europeas respecto a la seguridad eléctrica y a la compatibilidad electromagnética.

El representante europeo de Victor Company of Japan, Limited es:

JVC Technology Centre Europe GmbH

Postfach 10 05 52

61145 Friedberg

Alemania

SUOMI

Hyvä asiakas,

Tämä laite on yhdenmukainen niiden voimassa olevien eurooppalaisten direktiivien ja standardien kanssa, jotka koskevat sähkömagneettista yhteensopivuutta ja sähköturvallisuutta.

Victor Company of Japan, Limited:in Euroopan edustaja on:

JVC Technology Centre Europe GmbH

Postfach 10 05 52

61145 Friedberg

Saksa

SVENSKA

Bästa kund!

Denna apparat överensstämmer med gällande EU-direktiv och standarder beträffande elektromagnetisk kompatibilitet och elsäkerhet.

Europarepresentant för Victor Company of Japan, Limited är:

JVC Technology Centre Europe GmbH

Postfach 10 05 52

61145 Friedberg

Tyskland

Information for Users on Disposal of Old Equipment

ENGLISH

[European Union]

This symbol indicates that the electrical and electronic equipment should not be disposed as general household waste at its end-of-life. Instead, the product should be handed over to the applicable collection point for the recycling of electrical and electronic equipment for proper treatment, recovery and recycling in accordance with your national legislation.

By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of this product. For more information about collection point and recycling of this product, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.



Attention:

This symbol is only valid in the European Union.

[Business users]

If you wish to dispose of this product, please visit our web page www.jvc-europe.com to obtain information about the take-back of the product.

[Other Countries outside the European Union]

If you wish to dispose of this product, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical and electronic equipment.

Informations relatives à l'élimination des appareils usagés, à l'intention des utilisateurs


FRANÇAIS

[Union européenne]

Lorsque ce symbole figure sur un appareil électrique et électronique, cela signifie qu'il ne doit pas être éliminé en tant que déchet ménager à la fin de son cycle de vie. Le produit doit être porté au point de pré-collecte approprié au recyclage des appareils électriques et électroniques pour y subir un traitement, une récupération et un recyclage, conformément à la législation nationale.

En éliminant correctement ce produit, vous contribuez à la conservation des ressources naturelles et à la prévention des éventuels effets négatifs sur l'environnement et la santé humaine, pouvant être dus à la manipulation inappropriée des déchets de ce produit. Pour plus d'informations sur le point de pré-collecte et le recyclage de ce produit, contactez votre mairie, le service d'évacuation des ordures ménagères ou le magasin dans lequel vous avez acheté le produit.

Des amendes peuvent être infligées en cas d'élimination incorrecte de ce produit, conformément à la législation nationale.

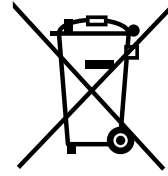

Attention:

Ce symbole n'est reconnu que dans l'Union européenne.

[Utilisateurs professionnels]

Si vous souhaitez éliminer ce produit, visitez notre page Web www.jvc-europe.com afin d'obtenir des informations sur sa récupération.

[Pays ne faisant pas partie de l'Union européenne]

Si vous souhaitez éliminer ce produit, faites-le conformément à la législation nationale ou autres règles en vigueur dans votre pays pour le traitement des appareils électriques et électroniques usagés.

Benutzerinformationen zur Entsorgung alter Geräte

DEUTSCH

[Europäische Union]

Dieses Symbol zeigt an, dass das elektrische bzw. elektronische Gerät nicht als normaler Haushaltsabfall entsorgt werden soll. Stattdessen sollte das Produkt zur fachgerechten Entsorgung, Weiterverwendung und Wiederverwertung in Übereinstimmung mit der Landesgesetzgebung einer entsprechenden Sammelstelle für das Recycling elektrischer und elektronischer Geräte zugeführt werden.

Die korrekte Entsorgung dieses Produkts dient dem Umweltschutz und verhindert mögliche Schäden für die Umwelt und die menschliche Gesundheit, welche durch unsachgemäße Behandlung des Produkts auftreten können. Weitere Informationen zu Sammelstellen und dem Recycling dieses Produkts erhalten Sie bei Ihrer Gemeindeverwaltung, Ihrem örtlichen Entsorgungsunternehmen oder in dem Geschäft, in dem Sie das Produkt gekauft haben.

Für die nicht fachgerechte Entsorgung dieses Abfalls können gemäß der Landesgesetzgebung Strafen ausgesprochen werden.



Hinweis:

Dieses Symbol ist nur in der Europäischen Union gültig.

[Geschäftskunden]

Wenn Sie dieses Produkt entsorgen möchten, besuchen Sie bitte unsere Webseite www.jvc-europe.com, um Informationen zur Rücknahme des Produkts zu erhalten.

[Andere Länder außerhalb der Europäischen Union]

Wenn Sie dieses Produkt entsorgen möchten, halten Sie sich dabei bitte an die entsprechenden Landesgesetze und andere Regelungen in Ihrem Land zur Behandlung elektrischer und elektronischer Geräte.

Información para los usuarios sobre la eliminación de equipos usados


CASTELLANO

[Unión Europea]

Este símbolo indica que los aparatos eléctricos y electrónicos no deben desecharse junto con la basura doméstica al final de su vida útil. El producto deberá llevarse al punto de recogida correspondiente para el reciclaje y el tratamiento adecuado de equipos eléctricos y electrónicos de conformidad con la legislación nacional.

Si desecha el producto correctamente, estará contribuyendo a conservar los recursos naturales y a prevenir los posibles efectos negativos en el medio ambiente y en la salud de las personas que podría causar el tratamiento inadecuado del producto desechado. Para obtener más información sobre el punto de recogida y el reciclaje de este producto, póngase en contacto con su oficina municipal, su servicio de recogida de basura doméstica o la tienda en la que haya adquirido el producto.

De acuerdo con la legislación nacional, podrían aplicarse multas por la eliminación incorrecta de estos desechos.

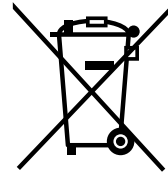

Atención:

Este símbolo sólo es válido en la Unión Europea.

[Empresas]

Si desea desechar este producto, visite nuestra página Web www.jvc-europe.com para obtener información acerca de la retirada del producto.

[Otros países no pertenecientes a la Unión Europea]

Si desea desechar este producto, hágalo de conformidad con la legislación nacional vigente u otras normativas de su país para el tratamiento de equipos eléctricos y electrónicos usados.

[Euroopan unioni]

Tämä symboli tarkoittaa, että sähkö- ja elektroniikkalaitteita ei tule laittaa talousjätteisiin, kun ne poistetaan käytöstä. Sen sijaan tuotteet tulee toimittaa asianmukaiseen sähkö- ja elektroniikkalaitteiden kierrätyspisteeseen, jossa ne käsitellään uusiokäyttöä ja kierrätystä varten paikallisen lainsäädännön mukaan.

Kun hävität tuotteen asianmukaisella tavalla, autat säästämään luonnonvaroja ja estämään mahdollisia ympäristö- ja terveyshaittoja, joita voisi aiheutua tämän tuotteen vääränlaisesta hävittämisestä. Lisätietoja keräyspisteistä ja tämän tuotteen kierrätyksestä saat paikkakuntasi viranomaisilta, kotitalousjätteiden keräyksestä huolehtivasta yrityksestä tai liikkeestä, josta ostit tuotteen.


Tuotteen vääränlaisesta hävittämisestä voi seurata paikallisen lainsäädännön mukaisia rangaistuksia.

(Yrityskäyttäjät)

Jos haluat hävittää tämän tuotteen, web-sivustoltamme osoitteessa www.jvc-europe.com löydät tietoja käytetyn tuotteen palautuksesta.

[Muut maat Euroopan unionin ulkopuolella]

Jos haluat hävittää tämän tuotteen, tee se kansallisen lainsäädännön tai muiden maassasi voimassa olevien määräysten mukaan, jotka koskevat vanhojen sähkö- ja elektroniikkalaitteiden käsittelyä.

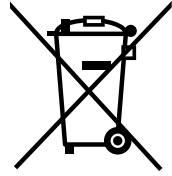**Huomio:**

Tämä symboli on voimassa vain Euroopan unionissa.

[Europeiska gemenskapen]

Denna symbol anger att elektrisk och elektronisk utrustning inte ska kasseras som vanligt hushållsavfall, när de inte ska användas mer. Istället ska produkten lämnas in på lämplig återvinningsstation för elektrisk eller elektronisk utrustning, så att den kan tas om hand och återvinnas i enlighet med ert lands lagstiftning.

Genom att avyttra denna produkt på rätt sätt, bidrar du till att bevara naturen och förhindrar potentiellt negativa effekter på miljön och den mänskliga hälsan, som annars kan bli resultatet vid felaktig hantering av denna produkt. Kontakta ditt kommunkontor, det företag som hanterar dina hushållssopor eller butiken där du köpt produkten, för mer information om återvinningscentraler.


Det kan hända att du bötfalls i enlighet med ert lands lagstiftning om detta avfall kasseras på fel sätt.

(Företagsanvändare)

Om ni vill kassera denna produkt, besök vår webbsida www.jvc-europe.com för att få information om returnering av produkten.


[Övriga länder utanför den Europeiska gemenskapen]

Om du vill kassera denna produkt, ska detta göras i enlighet med gällande lagstiftning i landet, eller enligt andra bestämmelser i ditt land, för behandling av gammal elektrisk eller elektronisk utrustning.

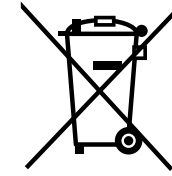
**Tänk på:**

Att denna symbol endast gäller inom den Europeiska gemenskapen.

Expanding the world of beautiful images

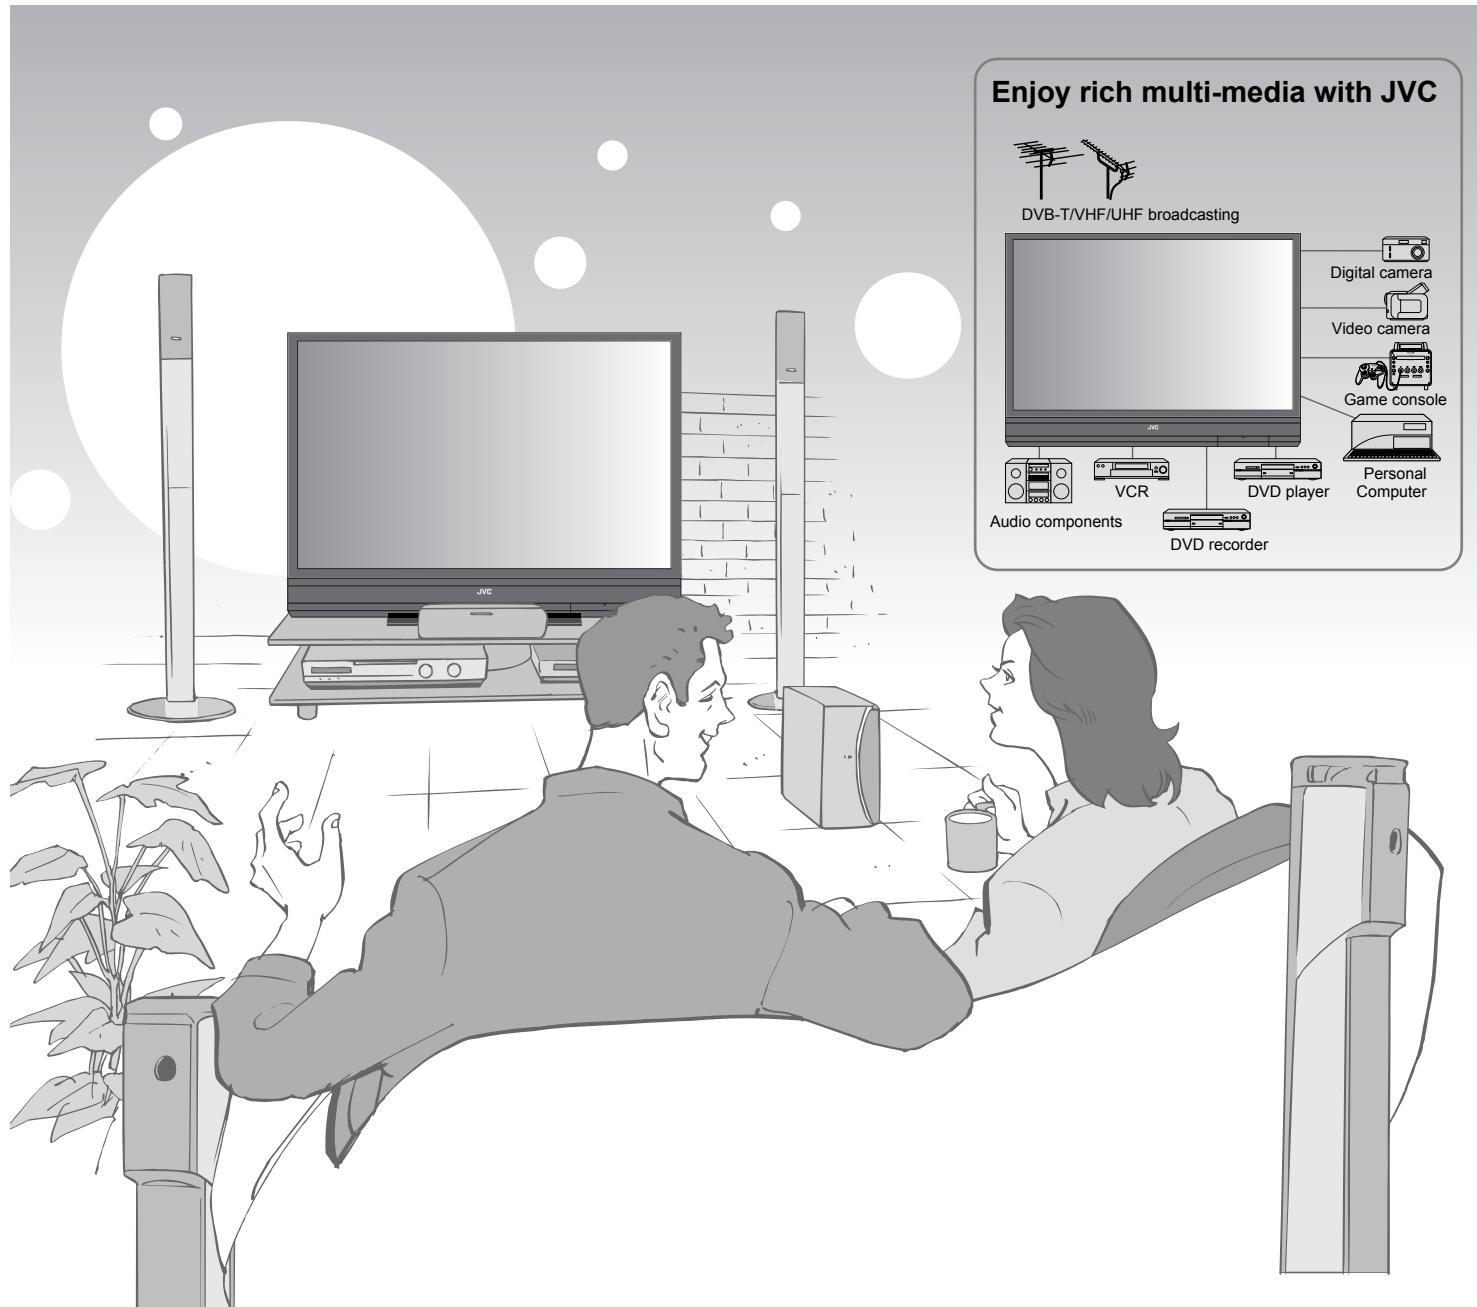

Enjoy rich multi-media with JVC

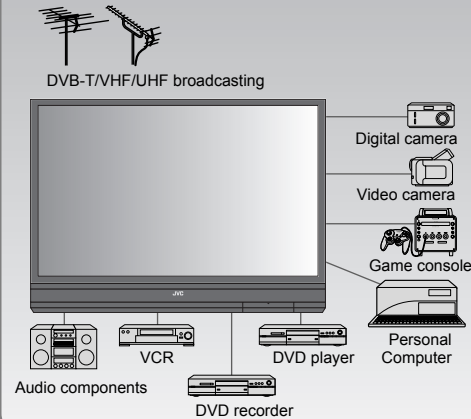

- Digital terrestrial broadcasting (DVB-T)
 - ⇒ Digital channels
- Analogue terrestrial broadcasting (VHF / UHF) and analogue cable TV
 - ⇒ Analogue channels

Contents

First things first!

- Warning 2
- Precautions 3
- Replacing the lamp 4

Getting started

- Names of all the parts 6
- Basic connections 7
- Installation 8
- Connecting external devices 9
- Initial settings 10

Let's try it out

- Enjoying your new TV! 12
- Watching digital channels 13
- Using EPG 14
- Viewing teletext 15
- Watching analogue channels 16
- Watching videos / DVDs 17
- Using timer-record 18
- Useful functions 19
 - Subtitle / Audio selection / Sleep timer / Zoom / Multi-picture, etc.
- Operate JVC recorders and other devices 21

Just the way you like it

- Customising your TV 22
- Using DTV menu 23
- Advanced picture adjustment 24
 - Watch a more natural picture / Reduce noise
 - Set the aspect ratio, etc.
- DTV configuration 25
- DTV setup 26
- DTV installation 27
- Editing digital channels 28
- Editing analogue channels 29

When you have trouble

- Troubleshooting 30
- "CH/CC" List 32
- Technical information 33
- Specifications 34

Warning

Please follow all the guidelines below

Follow this manual regarding setup!

- Connect only to a 220-240V, 50Hz AC outlet.


Make enough room for inserting and removing the power plug!

Place the TV as close to the outlet as possible!

- The main power supply for this TV is controlled by inserting or removing the power plug.

Never cut or damage the power cord!

- If the power plug is not the right shape, or the power cord is not long enough, use an appropriate plug adapter or extension cable. (Consult your retailer.)

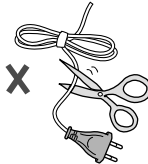

Do not allow the TV to fall or drop down!

- Follow the instructions below to avoid serious injuries.
 - ① Remove the pedestals on the TV only in the cases allowed in "Installation" (P. 8).
 - ② Do not lean or rest your elbows on the TV.
 - ③ Do not allow children to hang from the TV.

On disposal of the TV!

- Follow the instruction in "Information for Users on Disposal of Old Equipment" (P.ii to iii).



Never place anything on the TV!

- Placing liquids, naked flames, cloths, paper, etc. on the TV may cause a fire.



Never expose to rain or moisture!

- To prevent fire or electric shock, never allow liquids to enter the unit.



Never insert objects into the cabinet openings!

- It may cause a fatal electric shock. Take care when children are near.




Never try to repair the TV yourself!

⇒ If the problem cannot be solved in "Troubleshooting" (P. 30), unplug the power cord and contact your retailer.


If the TV is damaged or behaving strangely, stop using it at once!

⇒ Unplug the power cord and contact your retailer.

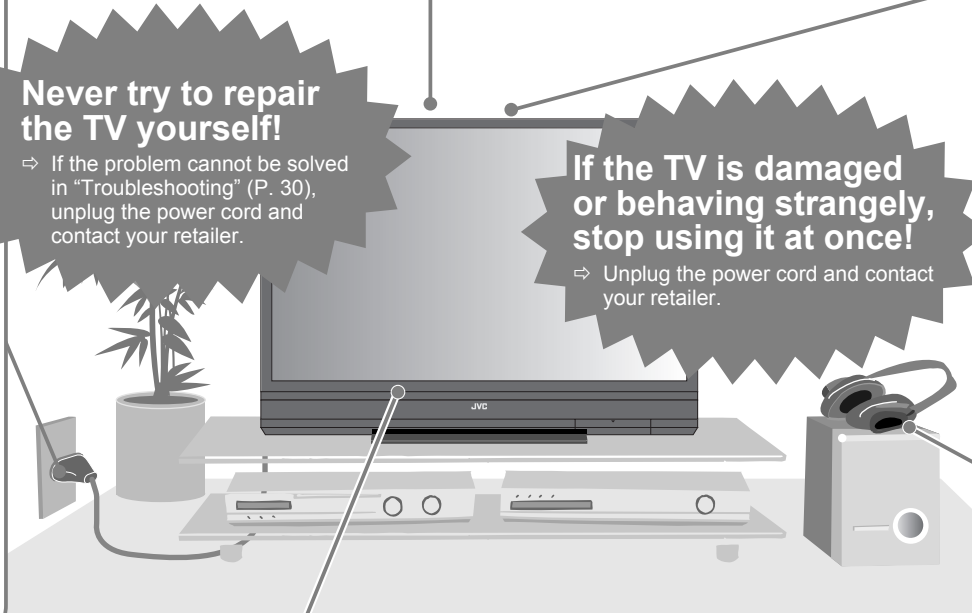

Unplug the power cord when going out!

- The power buttons on the remote control and the TV unit cannot completely turn off the TV. (Make appropriate arrangements for bedridden people.)
- Make sure that the cooling process (P. 3) has completed before unplugging the power cord.

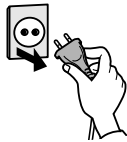

Ensure ample room to avoid overheating!

- "Care when setting" (P. 8)

Never dismantle the rear panel!

- It may cause an electric shock.

Never block the ventilation holes!

- It may cause overheating or a fire.

Handle screen with care!


- Use a soft, dry cloth when cleaning.

Hold the TV so as not to scratch the screen!

- Do not touch the screen when carrying the TV.

Do not hold by the screen frame when moving the TV!

- This could cause the screen frame to detach, causing the TV to fall. Hold the TV as illustrated on the right.

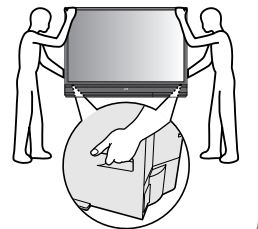

■ For more details on installation, usage and safety ⇒ Consult your retailer

Precautions

This TV uses a lamp to project the picture on the screen. Misoperations may shorten the lamp life or cause malfunction of the lamp.


Before operating the TV, read all the instructions below.

This TV has a fan to cool the lamp

- When the lamp is hotter, the fan works harder to cool the lamp. In such a case, the noise of the fan becomes louder but it is not malfunction.

Keep children or pets away from the air ducts

- Long exposure to the warm air from the ducts may cause a minor burn.

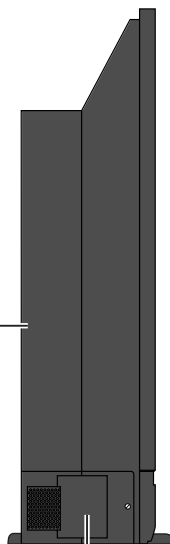

The lamp is a consumable item

- When the lamp has blown, replace the lamp; otherwise, the picture cannot be displayed. For details ⇒ “Replacing the lamp” (P. 4, 5)

Follow the instructions on “Replacing the lamp” when replacing the lamp (P. 4, 5)

- Handle the lamp carefully and correctly; otherwise, it may cause a burn or an electric shock. In addition, it may shorten lamp life or cause malfunction of the TV.

Never open the lamp cover except when replacing the lamp

- Exposing the lamp is dangerous because...
 - The lamp becomes extremely hot while in use, it may cause a burn.
 - Touching metallic portion of the lamp may cause electric shock.
 - Ultraviolet rays are emitted from the lamp.

Never replace the lamp immediately after use

- Since the lamp becomes extremely hot while in use, it may cause a burn.

Never touch the lamp glass

- Dirt or oil from the finger may cause the lamp to break.

Please follow all the guidelines below

When the power is turned on, the warming up commences

- Immediately after the TV is turned on, the picture is displayed only dimly. It takes about one minute for the lamp to warm up. Once the lamp has warmed up, you can enjoy the pictures at their normal brightness.
- During this warming-up period, the LAMP indicator blinks every 2 seconds.

While the LAMP indicator is blinking, the TV cannot be turned off

When the power is turned off, the cooling down is performed

- When the TV is turned off, the picture on the screen disappears gradually. Once the screen is dark, cooling down is performed for about 1 minute.
- During this cooling-down period, the LAMP indicator blinks every 2 seconds.
- Do not unplug the TV while the lamp is cooling down. This may cause the internal circuits and the lamp to overheat and shorten the lamp life.

While the LAMP indicator is blinking, the TV cannot be turned on

- You can turn on the TV within 15 seconds after turning off.

Condensation on the lamp and screen

- When the heater is turned on or the TV is moved from a cold place to a warm place, droplets of water may form on the lamp and screen. This is called condensation. If the TV is used while this condensation is still present, the picture may seem distorted, and the inside of the screen may become dirty. In this case, wait until the condensation has gone before using the TV.

Do not turn the power on and off repeatedly in a short amount of time

- It subjects the TV and the lamp to stress and may lead to malfunctions and shorten the lamp life.

Do not keep the TV on for more than 24 hours consecutively

- The lamp life may be shortened.

Do not project a still picture for a long time

- Because of the ILA characteristics, still picture may remain on the screen. (The picture will disappear over time.)

■ For more details on installation, usage and safety ⇒ Consult your retailer

Replacing the lamp

The TV uses a lamp to project the picture onto the screen. When the lamp has blown or when the picture becomes dark, replace the lamp.

Before replacing the lamp, read all the instructions carefully.

■ If you feel unsure about replacing the lamp yourself ⇒ Consult your retailer

Preparation


Prepare the Replacement Lamp Kit

- For purchasing the Replacement Lamp Kit, consult your retailer.



Use only the specified Replacement Lamp Kit!

This lamp is for use with JVC model televisions. Using the lamp with a different television or other product could cause a malfunction and/or damage to the television or lamp.

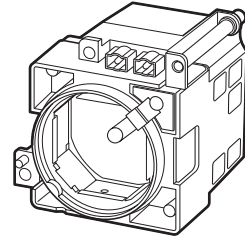

Replacement Lamp Kit:
PK-CL120E

- High-pressure 120 W mercury lamp

When the lamp is near to its end...

- The following message appears on the screen.

Lamp needs to be replaced.
Please refer to the manual
for replacement instructions.

After replacing the lamp,
please reset the timer in the
TV menu.

Press OK, if you do not want
to see this message again.

■ To make the message disappear



After the usage time of the lamp has reached 6500 hours, this message appears every time you turn on the TV.

■ Possible causes of shortened lamp life

- Turning on/off the TV repeatedly in a short amount of time.
- Keeping the TV turned on for more than 24 hours consecutively.

Before replacing the lamp, read all the instructions.


1

Turn the TV off



Wait until the
LAMP indicator
stops blinking

Unplug the TV

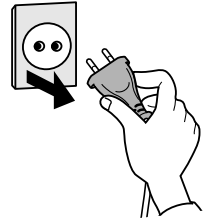

2

Wait for at least 1 hour until the lamp
has fully cooled

3

Remove the lamp unit



Never replace the lamp before it has fully cooled!

The lamp becomes extremely hot while in use, which may cause a burn. After turning off the TV, wait for at least 1 hour.




Never attempt to replace the lamp with the TV plugged in!

Attempting to replace the lamp with the TV plugged in could lead to a severe electrical shock.

1

Remove the lamp cover

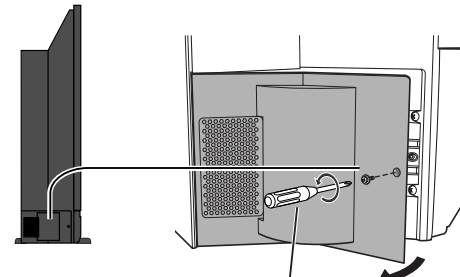

Philips head type screw
driver (cross-head type)




**If you feel any
warmth near the
lamp, DO NOT
TOUCH IT!**


2

Remove the lamp unit

Loosen

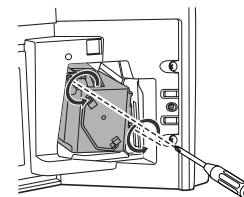


Remove

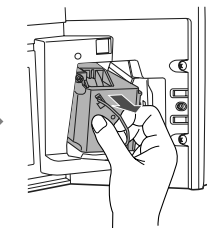

**Do not drop
the lamp!**

4 Install the NEW lamp unit

1 Unpack

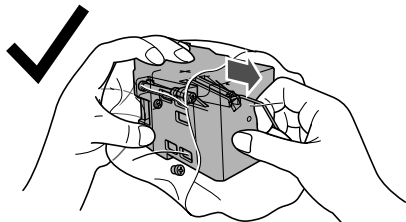


Do not drop the lamp!
Do not shock the glass surface of the lamp!
It may shatter the lamp causing injuries.




2 Insert

- Make sure the lamp sits securely and flat in the housing area.

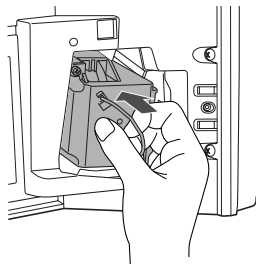


Re-tighten

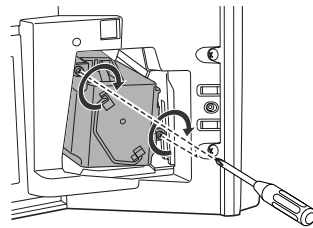

3 Reinstall the lamp cover

- Tighten the screw.

5 Plug in the TV

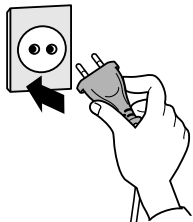


Turn the TV on



- If the lamp unit is not installed securely (e.g. flat in the lamp housing area), the TV won't turn on. In this case, reinstall the lamp unit.

6 Reset the lamp timer


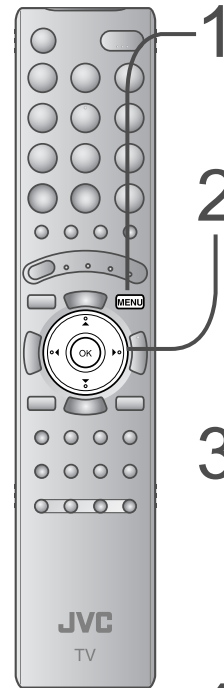


1 Display the menu bar



MENU



2 Select "Set Up"

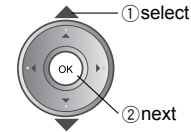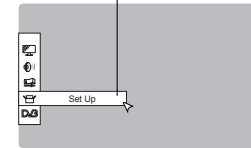


3 Select "Lamp Timer Reset"

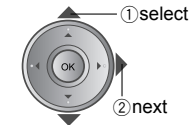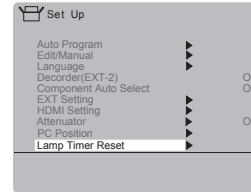

4 Finish

 Press OK to reset the lamp timer.



The lamp timer is reset successfully.

7 Finally, the lamp has been replaced!




Never dispose of the lamp with normal trash!


The lamp contains a small amount of mercury. Follow the instruction in "Information for Users on Disposal of Old Equipment" (P.ii to iii).

- If the power lamp and LAMP indicator blink rapidly after turning on the TV ⇒ "Lamp" (P. 31)

Names of all the parts

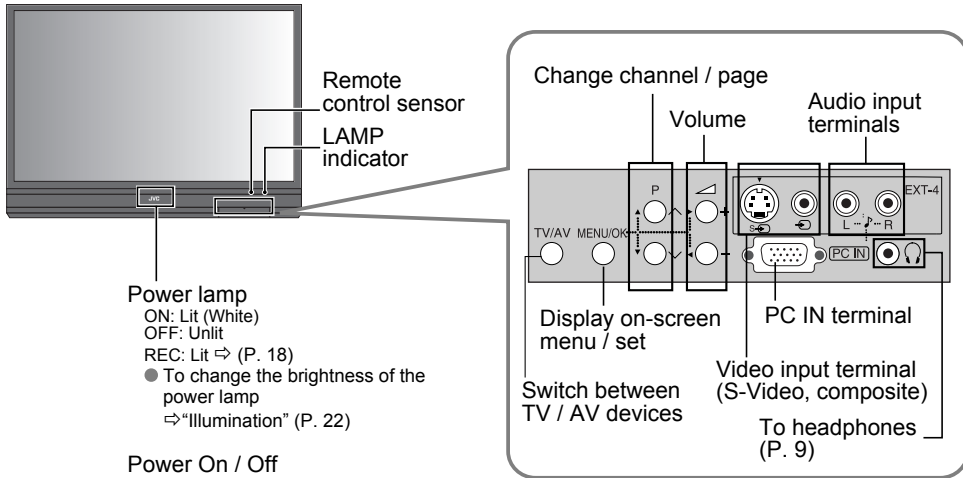

Remove the terminal cover

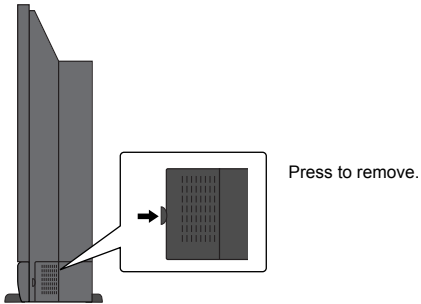


- Connecting terminals on the back of the TV
⇒ "Connecting external devices" (P. 9)

About the LAMP indicator


- The LAMP indicator blinks as follows.
- When turning on the TV, the LAMP indicator blinks for about 1 minute every 2 seconds.
⇒ The lamp is warming up. During this period, the TV cannot be turned off.
 - After turning off the TV, the LAMP indicator blinks in orange for about 1 minute every 2 seconds.
⇒ Cooling is performed. During the cooling period, the TV cannot be operated.
 - If the LAMP indicator blinks rapidly
⇒ "Lamp" (P. 31)

Check accessories

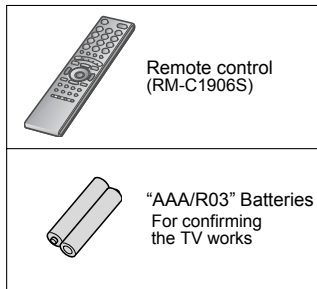


Insert the batteries

Use two "AAA/R03" dry cell batteries. Insert the batteries from the ⊖ end, making sure the ⊕ and ⊖ polarities are correct.

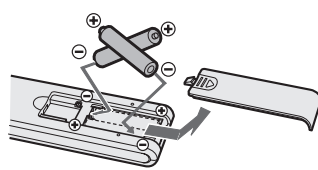

WARNING:
Batteries shall not be exposed to excessive heat such as direct sunshine, fire or the like.

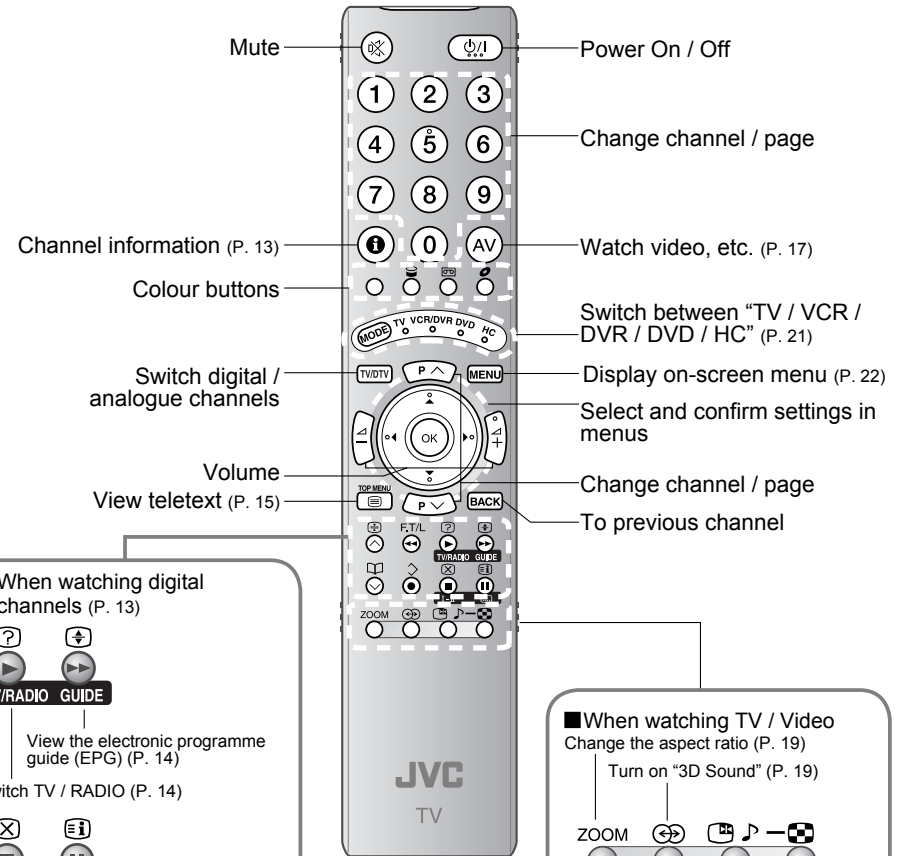

■ When watching digital channels (P. 13)

TV/RADIO GUIDE
View the electronic programme guide (EPG) (P. 14)
Switch TV / RADIO (P. 14)

I-II
View subtitles (P. 19)
Audio selection (P. 19)

■ When viewing teletext (P. 15)

■ When choosing a favourite channel (analogue channel) (P. 16)

■ When operating a JVC recorders or DVD (P. 21)

■ When watching TV / Video
Change the aspect ratio (P. 19)
Turn on "3D Sound" (P. 19)


ZOOM
Take a snapshot of the screen (P. 20)
View in multi-picture mode (P. 20)

Basic connections

Please read the user manuals of each device carefully before setup.
It is necessary to connect an aerial to watch TV.


■ Connect with other devices ⇒ “Connecting external devices” (P. 9)

Connect the aerial

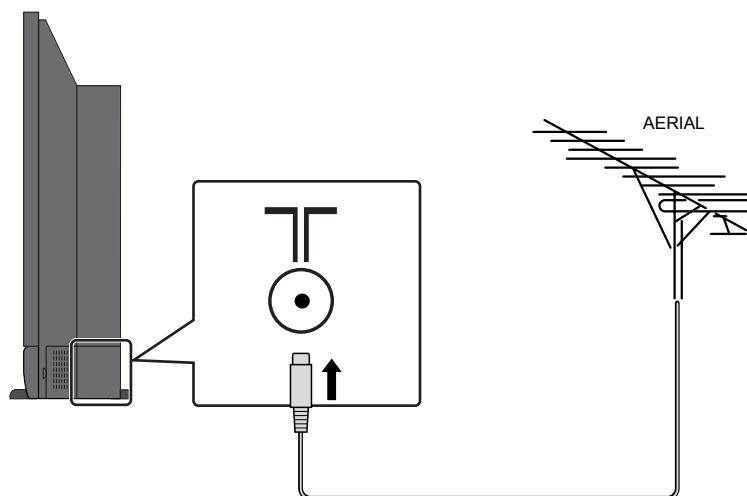

- After all the connections have been made, insert the plug into an AC outlet.
- When using an aerial which needs external power ⇒ “Power supply for the indoor aerial” (P. 33)

Connect a VCR / DVD recorder

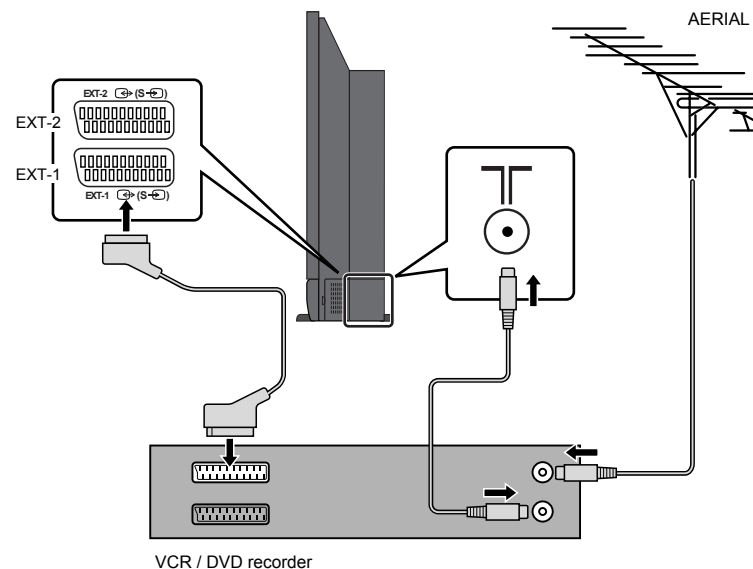


- After all the connections have been made, insert the plug into an AC outlet.
- Connect “T-V LINK” compatible recording device to “EXT-2”.
- “T-V LINK” ⇒ “What is “T-V LINK”?” (P. 10)
- When using an indoor aerial which needs external power, connect the aerial directly to the TV.
⇒ “Power supply for the indoor aerial” (P. 33)

Watch pay-TV digital channels

Subscribe to a broadcasting company beforehand. A Smart Card (B) will be sent by the broadcasting company after subscribing to it. It may be necessary for you to purchase a Conditional Access Module (A) in addition to the Smart Card. Consult your broadcasting company or retailer.

- ① Unplug the power cord
- ② Insert (B) into (A).
- ③ Insert (A).
- ④ Plug the power cord, and turn the power on.
- ⑤ Perform necessary settings ⇒ “Common Interface” (P. 26)
 - Pay-TV analogue channels cannot be watched.

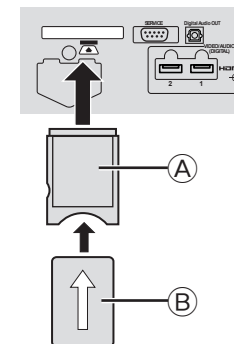


Installation

Care when setting

When installing the TV, install it according to the instructions below:


- Install the TV on a level and stable surface.
- Never expose to rain or moisture.
To prevent fire or electric shock, never allow liquids to enter the unit.
- Make enough room for inserting and removing the power plug!
- Place the TV as close to the outlet as possible!
The main power supply for this TV is controlled by inserting or removing the power plug.
- To avoid overheating, ensure that the unit has ample room.

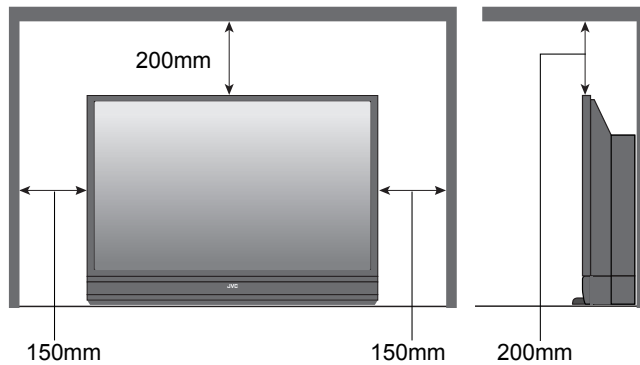

- Connect the power cord only to a 220-240 V, 50 Hz AC outlet

Warning

On the front and rear of the TV, pedestals are attached to prevent the TV from falling over. Do not remove the pedestals for normal use; otherwise, the TV may fall over and it could cause serious injuries.

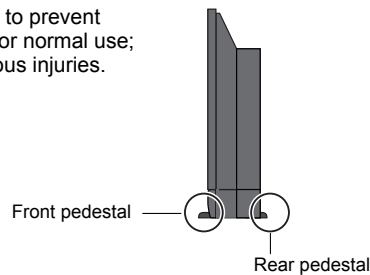

Remove the pedestal(s) only in the following cases;


- When attaching the TV to the wall
- When the instructions supplied for JVC optional goods require you to remove the pedestal(s)

When installing the TV right on the wall


Remove the rear pedestal and install the TV as in the procedure below.

CAUTION:
Remove the rear pedestal on a level and stable surface.


① Remove the cover.

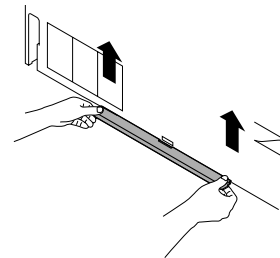


② Remove the screws with a Phillips type screwdriver.

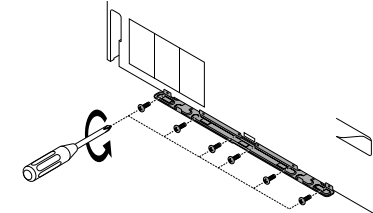

③ Slide out the rear pedestal gently.

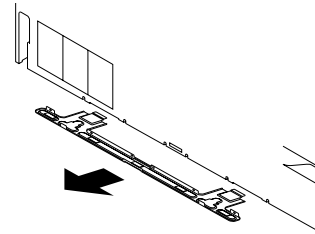

④ Attach the TV to the wall.

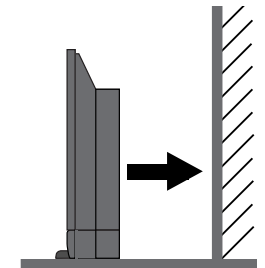

Be sure to install the TV by two persons.

When installing the TV on a TV stand

Use the optional JVC TV stand

- Refer to the instructions supplied for the JVC TV stand for installation.


Connecting external devices

VCR / DVD / other devices

You can connect many different devices to the rear panel of the TV.
Please read the user manuals of each device before setting up.
(Connecting cables are not supplied for this TV.)

⇒ : signal direction

- Connect "DVI" devices ⇒ (P. 33)
- "T-V LINK" ⇒ (P. 10)

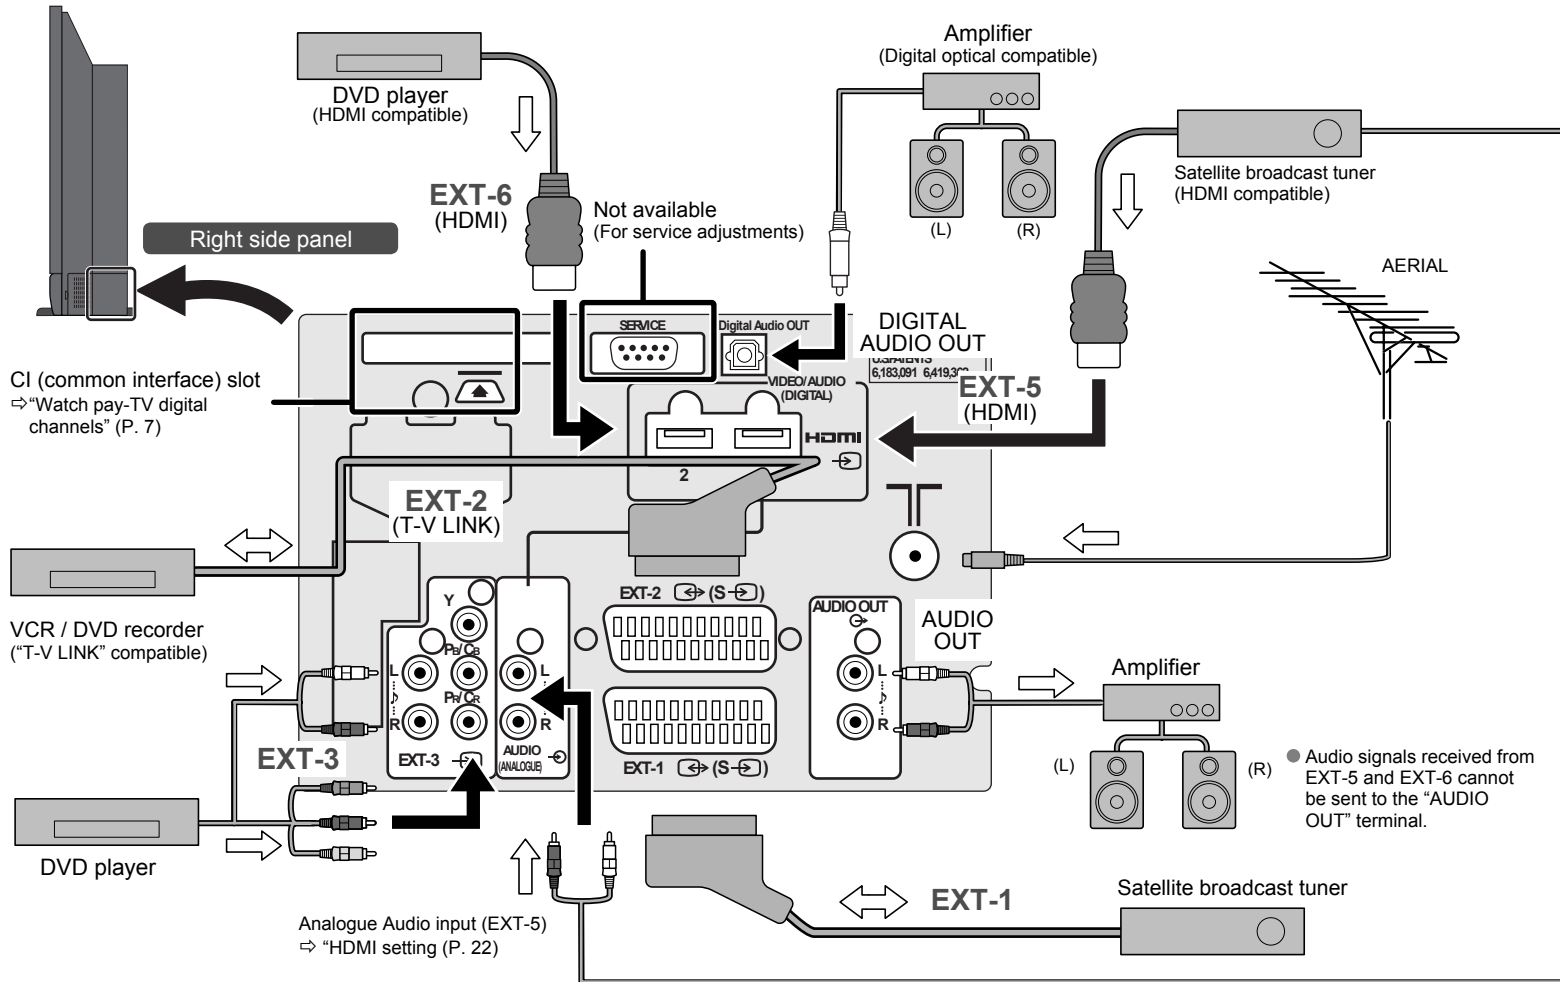


CI (common interface) slot
⇒ "Watch pay-TV digital channels" (P. 7)

VCR / DVD recorder
("T-V LINK" compatible)


DVD player

Analogue Audio input (EXT-5)
⇒ "HDMI setting (P. 22)

● Audio signals received from
EXT-5 and EXT-6 cannot
be sent to the "AUDIO
OUT" terminal.

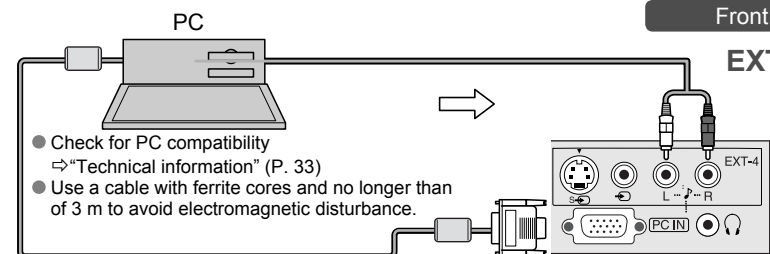

- Check for PC compatibility
⇒ "Technical information" (P. 33)
- Use a cable with ferrite cores and no longer than
of 3 m to avoid electromagnetic disturbance.

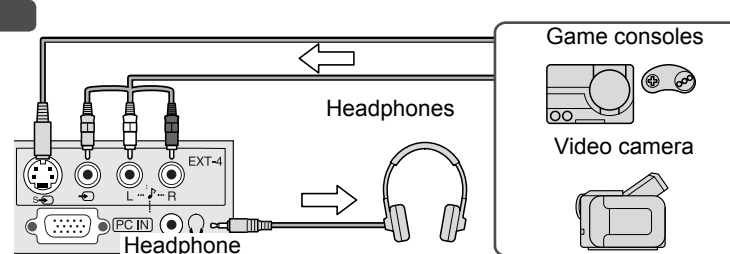

EXT-1 Watching videos

Output ↑	Input ↓
· Composite signal · Sound L / R	· Composite signal / RGB / S-VIDEO · Sound L / R

- Use S-VIDEO ⇒ "S-IN" (P. 17)

EXT-2 Dubbing videos Using "T-V LINK"

Output ↑	Input ↓
· Composite signal · Sound L / R	· Composite signal / RGB / S-VIDEO · Sound L / R
· T-V LINK	

- Use S-VIDEO ⇒ "S-IN" (P. 17)
- Select dubbing sources
⇒ "DUBBING" (P. 17)
- Connect a decoder
⇒ "Decoder (EXT-2)" (P. 22)

EXT-3 Watching DVDs

Output ↑	Input ↓
	· Component signal (P. 34) · Sound L / R

- "Component Auto Select" ⇒ (P. 22)

EXT-4 Watching videos (front panel)

Output ↑	Input ↓
	· Composite signal / S-VIDEO · Sound L / R

- Use S-VIDEO ⇒ "S-IN" (P. 17)

EXT-5 Connecting EXT-6 HDMI devices

Output ↑	Input ↓
	· HDMI signal (P. 34) · Sound L / R (EXT-5 only)

- "HDMI Setting" ⇒ (P. 22)
- EXT-6 input does not support
analogue sound.
- Use HDMI CEC
⇒ "What is "HDMI CEC"?" (P. 34)

AUDIO OUT

Listening to the TV on external speakers

Output ↑
· Sound L / R

DIGITAL AUDIO OUT

Listening to the digital audio of digital channels through external speakers

Output ↑
· Digital sound (P. 34)

- The sound from analogue channels
and external devices cannot be output.
⇒ "Dolby Digital output from the
DIGITAL AUDIO OUT terminal" (P. 33)

Initial settings

Register digital / analogue channels on TV. These channels can be edited later.
(In this manual, digital terrestrial broadcasting is indicated as digital channels,
analogue terrestrial broadcasting and analogue cable TV as analogue channels.)

■ When turning on the TV, it takes about 1 minute to project the picture to its full brightness.

■ When turning off the TV, it takes about 5 seconds to make the screen dark. After that, cooling is performed for about 1 minute.

⇒ "About the LAMP indicator" (P. 6)

■ To the previous screen ⇒ **BACK**

■ Exit ⇒ **TV/DTV**

■ If the "JVC" logo does not appear or if you wish to make changes later

⇒ Digital channel settings : "DTV Configuration" (P. 25)
"DTV Installation" (P. 27)

Analogue channel settings : "Set Up" (P. 22)

What is "T-V LINK"?


Connecting the TV to a "T-V LINK" compatible device allows :

- Analogue channels to be instantly registered on the device.
- The "DIRECT REC" function to be used.

⇒ "Technical information" (P. 33)

■ "T-V LINK" variations

"T-V LINK" (JVC) "Q-LINK" (Panasonic)
"Megalogic" (Grundig) "Data Logic" (Metz)
"SMARTLINK" (Sony) "Easy Link" (Philips)

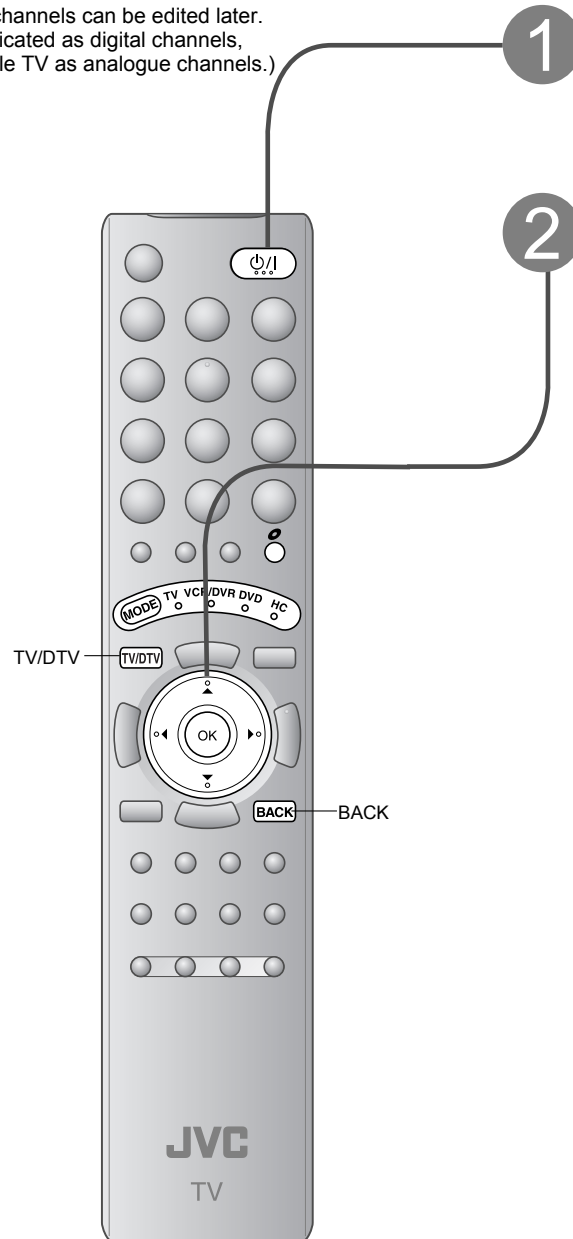

Begin



- Shown only when powering on for the first time.
- The power button on the unit can also be used.

 

■ The remote control doesn't work



- Confirm the mode is set to "TV".



Set digital channels

1 Select a language

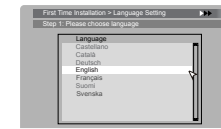



- Language for on-screen displays when watching digital channel including the DTV menu.

 2 Select the country of installation

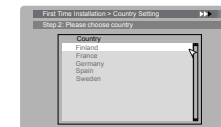



- Receivable digital channels will differ depending on the country setting.
- The illustrations are for Finland

  3 Set the aerial power supply




- Only when using an aerial which needs external power, select "On".
⇒ "Power supply for the indoor aerial" (P. 33)


4 Scan digital channels

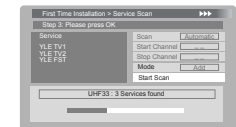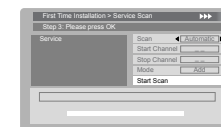

5 Register digital channels

 

 ■ If digital channels are not found, the following message will appear.




⇒ **3** (Next page)

- After completing following steps, read "When the TV cannot find the digital channels" (P. 11) and try scanning digital channels again

Initial settings (continued)


3

Confirm the language

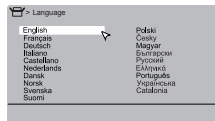

● Language for on-screen analogue channel displays and menus (excluding the DTV menu)


■ When changing a language

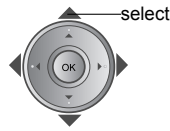

■ When not using analogue channels ⇒ TV/DTV ⇒ 5



 
■ When using analogue channels (or cable TV) ⇒ 4





4

Set analogue channels

 1 Register analogue channels




■ When changing a country

  

● If "ACI Start" appears, select and start settings. (This will set up cable television channels.)
⇒ "What is "ACI" (Automatic Channel Installation)?" (P. 33)

2 Check what was registered

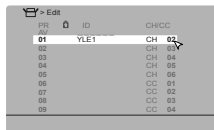


■ Edit analogue channels
⇒ 5 in "Editing analogue channels" (P. 29)

■ Confirm



 3 Set TV-LINK



■ When using T-V LINK



● If "Feature Not Available" appears:
⇒ Is a T-V LINK compatible device connected to EXT-2?
⇒ Is the device turned on?

■ When not using T-V LINK



5

Initial setting is complete

■ Edit digital channels ⇒ "Editing digital channels" (P. 28)

■ If digital channel reception is poor
⇒ When the digital channel reception is poor (right column)

■ If analogue channel reception is poor ⇒ "Troubleshooting" (P. 30)

■ Some digital channels cannot be watched on this TV.
⇒ "Digital channels that cannot be watched on this TV" (P.33)

When the TV cannot find the digital channels

Check the following points

- Is the TV connected correctly to the aerial?
- Change the direction of the indoor aerial.
- Is there a digital channel transmission tower nearby?
⇒ Turn "Attenuator" to "On" (P. 22), since the radio waves are too strong.

- Register digital channels again. ⇒ "Service Scan" (P. 27)

■ If you cannot yet watch digital channels after following the steps above, there may be a problem with your aerial or its cable. Or, the signal may be too weak. ⇒ Consult your retailer

When the digital channel reception is poor

The "Missing or weak signal" message appears.

Check the following points

- Is the TV connected correctly to the aerial?
- Change the direction of the indoor aerial.
- Is there a digital channel transmission tower nearby?
⇒ Turn "Attenuator" to "On" (P. 22), since the radio waves are too strong.

■ Check digital channels signal. ⇒ "Signal Check" (P. 27)

■ If you cannot yet watch digital channels after following the steps above, there may be a problem with your aerial or its cable. Or, the signal may be too weak. ⇒ Consult your retailer

When "RF Attenuator" setting screen is displayed

- Set "Attenuator" (P. 22) from this setting screen.
To set the "Attenuator" on, select "On." To set it off, select "Off."
- This setting screen will appear during the "Factory Settings (P. 27) with "Attenuator" set to "On."

Enjoying your new TV!

PAGE
13


Watching digital channels

- View channel information
- Select a channel
- Listen to the radio, etc.

PAGE
16

Watching analogue channels

- View channel information
- Register your favourite channels, etc.

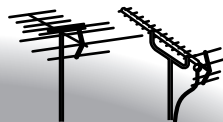

PAGE

17

Watching videos/DVDs

- PC position adjustment
- Watch high quality video (S-VIDEO)
- Name connected devices
- Dub videos


AV

MENU

Customising your TV

PAGE
22


- Adjust the picture
- Adjust the sound
- Advanced settings (sleep-timer / child lock, etc.)
- Basic settings (channel settings, etc.)
- Digital channel settings (timer-record / configuration / channel settings, etc.)

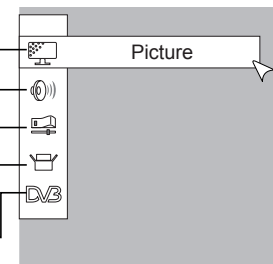

PAGE
15

Viewing teletext

- Bookmark your favourite pages
- Reveal hidden pages
- Enlarge the text, etc.

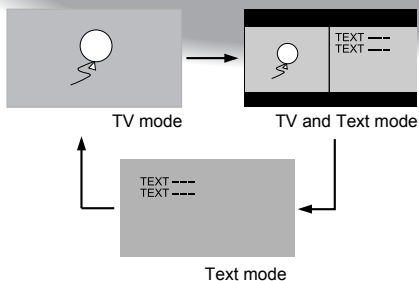


TOP MENU

GUIDE

PAGE
14

Using EPG

- View the programme list for 8 days
- Search from a genre
- Reserve a programme to watch / record, etc.

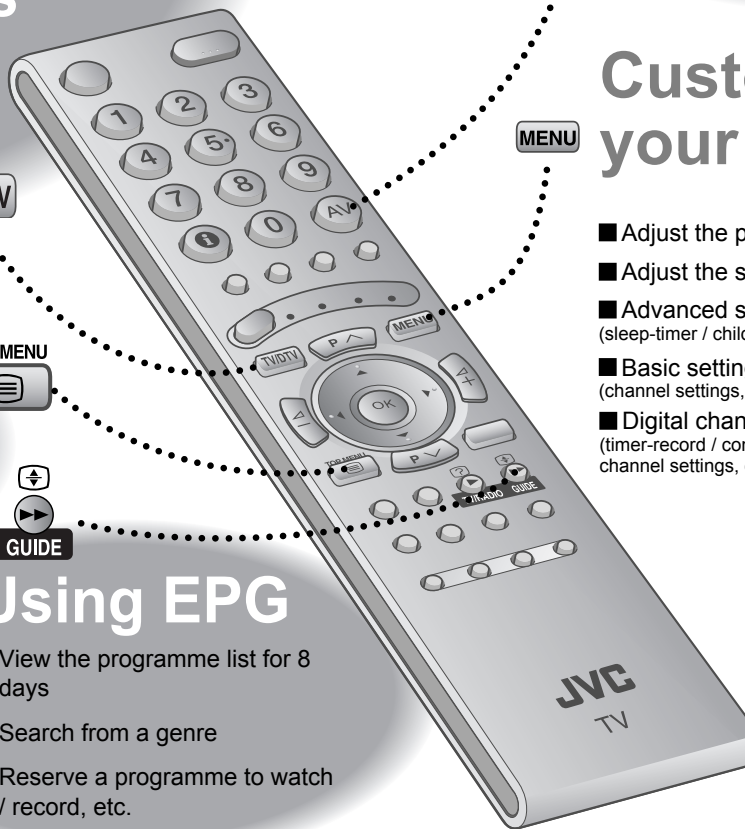

Watching digital channels

- 1 Set to "TV"**
MODE VCR/DVR DVD HC
- 2 Power on**
The white power lamp on the TV lights.
Press again to turn the screen off and put the TV into standby mode.
- 3 Switch to digital channels**
TV/DTV
- 4 Switch TV / RADIO**
RADIO
- 5 Select a channel**
To the previous screen ⇒ BACK
View subtitles / Select audio language ⇒ (P. 19)

Note

- To completely turn off the TV, unplug the power plug.
- Watch pay-TV digital channels ⇒ (P. 7)
- Add a new station ⇒ (P. 27)
- Some digital channels cannot be watched on this TV. ⇒ (P.33)

Basic operations using the front buttons

- 1 Power on**
JVC
- 2 Change the channel**
TV/AV MENU/OK P + -

Volume

- To switch between digital / analogue channels, or TV / radio, use remote control.

- When turning on the TV, it takes about 1 minute to project the picture to its full brightness.
- When turning off the TV, it takes about 5 seconds to make the screen dark. After that, cooling is performed for about 1 minute.
⇒ "About the LAMP indicator" (P. 6)

Channel information

Whenever changing the channel, "Channel Information" is displayed.

More information

Symbols description

- Reception level: Red (Poor), Yellow (Acceptable), Green (Excellent)
- TV programme (TV icon), Radio programme (R icon)
- Teletext is available (TEXT icon)
- Pay-TV channel (5 icon)
- Minimum viewing age limit of the programme. Set viewing age limit. ⇒ (P. 25)
- Subtitles are available (S icon)
- More information about the programme is available (i icon)
- I-II: I: Audio in another language is not available. II: Other audio languages are available (P. 22).

Dolby Digital : Dolby Digital signal is output from the "DIGITAL AUDIO OUT" terminal (P.33)

- The information displayed may differ from programme to programme.
- When the clock is wrong ⇒ "Set the clock to the right time" (P.33).
- Select the default language for programme name and programme information ⇒ "EPG Language" (P.25).

Using PR list

Channels registered in "Initial settings" will appear here.
You can select only from your favourite channels ⇒ "Favourite Mode" (P. 25)

Using EPG

Display only programmes which match your selected genre ⇒ "Genre" (P. 14)

Using the number buttons, up / down buttons

- Enter a channel number: E.g. 15: 0 ⇒ 1 ⇒ 5
- Move up or down a channel: P ^ up, P v down
- You can select only from your favourite channels ⇒ "Favourite Mode" (P. 25)

The channels and programme names shown in the illustrations here are examples only.

Using EPG (Electronic Programme Guide)

You can find a digital channel programme from an eight-day programme guide, check its information, and make a reservation.

ENGLISH

1 Switch to digital channels **TV/DTV**

2 Display EPG **GUIDE**

■ When switching TV / RADIO **TV/RADIO**

Genre **TV** **Radio**

Date	Channel	Programme
05/05	1. YLE TV1	14:00 Uutiset
06/05	2. YLE TV2	15:00 Golf
07/05	3. MTV3	17:00 Uutiset
08/05	4. Nelonen	17:15 Musiikki
09/05	5. YLE FST	18:00 Saa
10/05	6. Subtv	18:20 Uutiset
11/05	7. Urheilukanava	18:50 Jalkapallo
12/05	8. YLE24	20:20 Uutiset
	9. YLE Teema	20:30 Saa

- When the clock is wrong ⇒ "Set the clock to the right time" (P.33).
- Select the default language for programme name and programme information ⇒ "EPG Language" (P.25).

■ Check programme information



■ Close EPG



■ Search from genre

Genre icon

General	Music
Movie	Culture
News	Current Affairs
Entertainment	Education
Sports	Leisure
Children	Special

- The genre may differ depending on your country.
- Above illustrations are Genre icons for Finland.

3 Find a programme

■ Watch / listen to the programme ⇒ (P. 13)

■ Reserve the programme

select a date / a channel / a programme

select a column (date ⇒ channel ⇒ programme)

■ The channels and programme names shown in the illustrations here are examples only.


Display only programmes which match your selected genre

Genre


1 Display the genre List



2 Select a genre

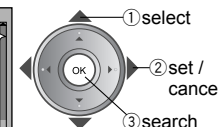

■ Quick search

 


- Only one genre can be selected.

- More than one genre can be selected.

3 Find a programme

Your selected genres are displayed

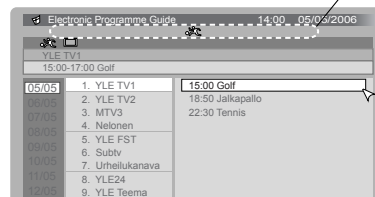


- Only programmes in the selected genre are displayed.

Reserve a programme to watch and record

Timer

 
1 Display "Timer"



- Select the reserved programme beforehand.

2 Set "Timer" ⇒ 6 in "Using timer-record" (P. 18)

3 Confirm the reservation

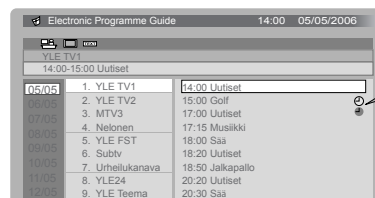

(red) : Reserve to record
(blue) : Reserve to watch

⌚ : Reservation time is shorter than the broadcasting time

- For more details about the timer-record setting ⇒ "Using timer-record" (P. 18)

Viewing teletext

This TV can display TV broadcasts and teletext on the same channel in two windows.

1 TV/DTV

2 TOP MENU

■ When watching TV

- Enter a teletext page
 - ① ② ③
 - ④ ⑤ ⑥
 - ⑦ ⑧ ⑨
 - ⑩
- Move up or down a page
 - P ▲ up
 - P ▼ down
- View sub-pages
 - to sub-page
- To change the default language for teletext in digital channels
 - ⇒ "Teletext Language" (P. 25)

Bookmark your favourite page

LIST MODE

- 1** F.T/L Display your favourites list
(RED) (GREEN) (YELLOW) (BLUE)
- 2** Select a coloured button to save your page to
(red) (green) (yellow) (blue)
- 3** Enter the number of the page to save
1 2 3
4 5 6
7 8 9
0
- 4** Save

■ Recall your favourite page ⇒ Press the coloured button as in step 2

Hold the current page
HOLD
Hold the current page
■ Release ⇒ Press "OK" again.

Reveal hidden pages
REVEAL
Display hidden information (answers to quizzes, etc.)

Enlarge the text
SIZE
Double the size of the displayed text

To the index page
INDEX
Returns to page "100" or a previously designated page

Switch briefly from teletext to TV
CANCEL
Leave the current page open, while you switch to watch TV
● Useful when running a page search.

Watching analogue channels

- 1 Set to "TV"**
 MODE TV VCR/DVR DVD HC
- 2 Power on**
 The white power lamp on the TV lights.
 ● Press again to turn the screen off and put the TV into standby mode.
- 3 Switch to analogue channels**
 TV/DTV
- 4 Select a channel**
 ● To the previous channel ⇒ BACK

■ Switch between mono / stereo / bilingual broadcasting ⇒ "Stereo / I-II" (P. 22)

Note

- To completely turn off the TV, unplug the power plug.
- To watch analogue channels you must register them beforehand. ⇒ "Auto Program" (P. 22)

■ Mute

■ Volume

■ When turning on the TV, it takes about 1 minute to project the picture to its full brightness.
 ■ When turning off the TV, it takes about 5 seconds to make the screen dark. After that, cooling is performed for about 1 minute.
 ⇒ "About the LAMP indicator" (P. 6)

Channel information and clock

● "Time" is displayed only when teletext broadcasting can be received.

Using PR list

● Channels registered in "Initial settings" will appear here.
 ● Select a page ⇒ select

■ Close PR list (3 times)

Using the number buttons, up / down buttons

■ Press a channel number

E.g.
 1 : 0 ⇒ 1
 15 : 1 ⇒ 5

■ Move up or down a channel

up
 down

Basic operations using the front buttons

- 1 Power on**
- 2 Change the channel**

■ Volume

Register a channel to a FAVOURITE CHANNEL

While the channel is displayed
 Hold down for 3 seconds
 Press the number to register it on
 Disappears after a few seconds

■ Recall the favourite channel

Press the number you registered

■ Check your favourite channels ⇒ Press "i" and confirm that the channels you have registered have a beside them

■ Delete a favourite channel
 ⇒ "MENU" ⇒ "Features" ⇒ "Favourite Setting"

delete

Watching videos / DVDs

1 Select the video source

AV → EXT Mode

0	AV
1	EXT-1
2	EXT-2
3	EXT-3
4	EXT-4
5	HDMI1
6	HDMI2
7	PC
8	DTV

E.g. For EXT-1

2 Operate the connected device and play a video

■ Operate JVC recorders and other devices (P. 21)

Select the video source using the front buttons

1 TV/AV

2 P Select the video source

3 MENU/OK

■ To TV

PC position adjustment

1 MENU Display the menu bar

2 Select "Set Up" → Select "PC Position"

Set Up → PC Position

3 PC Position

● Reset position ⇒

Advanced functions

1 Display the menu bar

MENU

2 Select "Set Up" → Select "EXT Setting"

Set Up → EXT Setting

Switch to S-VIDEO input

S-IN

① Select the "EXT" connected to S-VIDEO ② Set the S-VIDEO mode

EXT Setting → select → S-VIDEO mode

● The device selection display will change from "E1" to "S1".

■ Cancel this mode ⇒ Press "0" in ② again

Edit names of connected devices

ID LIST

① Select an "EXT" to assign a name to ② Show the name list

EXT Setting → select → ID List

③ Select a name from the list

EXT Setting → select → set

■ Clear the name ⇒ Select the blank space in ③

Set up dubbing on "EXT-2"

DUBBING

① Select the arrow ② Select the dubbing source

EXT Setting → select → select

Using timer-record

DTV original function and setting, such as a recorder-linked timer-record setting, can be selected from the DTV menu.

ENGLISH

- Switch to digital channels**
 ■ When switching TV / RADIO
 TV/DTV
- Display the menu bar**
 MENU
- Select "DTV"**
 select next
- Select "Timer"**
 select next
- Set "Timer"**
 (red)
- Select an item**
 select set
 ● Up to 20 programmes can be reserved.
- MENU**

■ To the previous screen
 ⇒ BACK

■ Exit
 ⇒ MENU

● DTV menu cannot be operated with the front buttons.

■ Cancel a reservation
 ⇒ Select the reservation. Press . Select "Yes" and press "OK" button.

■ Change a reservation
 ⇒ Select the reservation and press "OK".

■ Search for a channel using EPG
 ⇒ Press

Reserve a programme to record

Reserve a programme to watch

1 Input / confirm timer-record settings

- Select the channel
- Enter the time and date with number buttons
- Select the reservation mode (Once / Daily / Weekly)
- Normally set to "PCM / Analogue" (PCM / Analogue, Dolby Digital) ⇒ (P. 33)
- Set subtitle recording (Off / On)
- Lock the recording with the maturity rating (Lock / Unlock)

- A message will be displayed if there is problem with the reservation.
- In the following cases, enter the PIN code ⇒ "When entering the PIN Code" (P. 23)
 - When changing the "Maturity Rating" (P. 25)
 - When reserving the channel which is set to "Lock" (P. 28)

2 Set

- At the start time, the channel will automatically change and the device connected to EXT-2 will begin recording the programme.

- If you reserved the programme using EPG, the screen will return to EPG instead. ⇒ Step 3 in "Timer" (P. 14)

3 Prepare for recording

- Set the recording device to external input mode before the start time.
- Manually set the timer on T-V LINK incompatible devices. For details, refer to the device's manual.
- Make sure that recording times on the recording device do not overlap with recording times on the TV.
- Some T-V LINK compatible DVD recorders may not work correctly.
- When the recording timer has been set, the LAMP indicator on the TV lights up orange 30 seconds before the recording starts, and will stay lit throughout the recording.

1 Input / confirm timer-record settings

- Select the channel
- Enter the time and date with number buttons
- Select the reservation mode (Once / Daily / Weekly)

- A message will be displayed if there is problem with the reservation.

2 Set

- If the TV's power is off at the start time, nothing happens.
- At the start time, the channel will automatically change.


- If you reserved the programme using EPG, the screen will return to EPG instead. ⇒ Step 3 in "Timer" (P. 14)

Useful functions

View subtitles

SUBTITLE



(Digital channels)

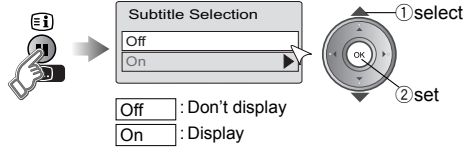

Off : Don't display
On : Display

- By default, the language set in "Subtitle Language" (P. 25) is automatically selected. When not broadcast in that language, another broadcast language is automatically selected.
- When no subtitles are broadcasted, "No Subtitles" is displayed.

  Switch to another language




Ⓢ : Special subtitles for the hearing impaired
Undefined : When the subtitle's language cannot be identified

- The language that can be selected depends on the broadcast.

Select audio language

AUDIO SELECTION

 (Digital channels)



Ⓢ : Special audio track for the visually impaired
Undefined : When the audio's language cannot be identified


Dolby : Dolby Digital

- The language that can be selected depends on the broadcast.
- Please read "Dolby Digital" output from the "DIGITAL AUDIO OUT" terminal" (P. 33) before selecting "Dolby."



Set a time for the TV to turn itself off

SLEEP TIMER

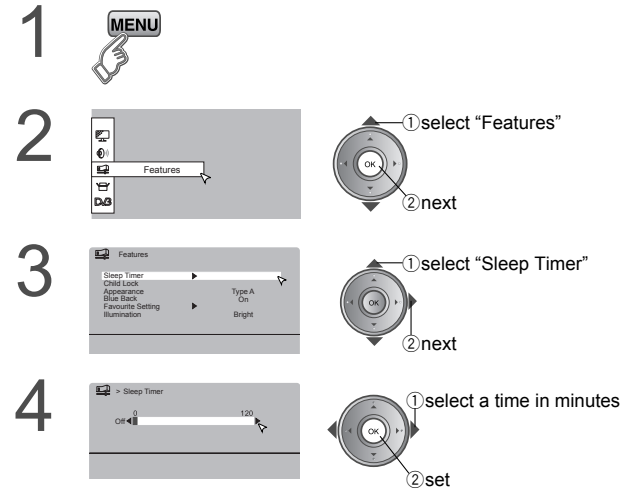


- Cancel ⇒ Set the time to "0" in step 4

Remaining time

⇒ You can confirm the remaining time in step 4, after repeating this process.


Enjoy ambient sound

3D SOUND

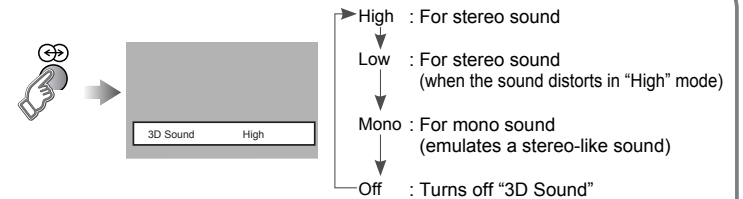


Change the aspect ratio

ZOOM

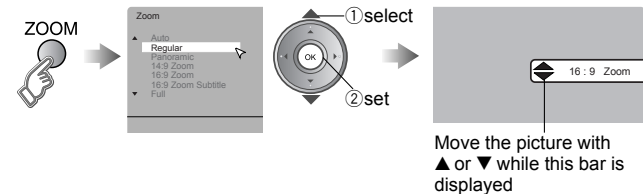

- Using "Auto" ⇒ "Auto in "Zoom"" (P. 33)
- When 1080p (1125p) / 1080i (1125i) / 720p (750p) signal is received, the signal will be displayed as "Full". The zoom menu will not be displayed.
- In PC mode, "Regular" or "Full" can be selected.

Useful functions (continued)

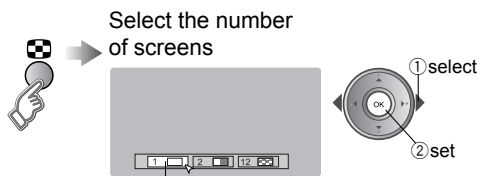

Select the number of screens

Selecting "1" returns to normal viewing mode

- Not available in the following cases:
 - when in PC mode
 - when 1080p (1125p) signal is received

Watch in dual-picture mode

E.g. You can watch TV and video at the same time.

(For wide aspect ratio signals)



 
- Switch between the sound sources
⇒

- Change the channel
⇒ (Main)
⇒ (Sub)

- When watching digital channels, there may be occasions where the aspect ratio changes, for example during commercials. In this case, the layout of the screen in dual-picture mode changes automatically according to the aspect ratio signal.


Select an analogue channel in 12-screen mode

All registered channels are displayed as still images.



Only the selected frame has a moving picture.




- Move up or down a page ⇒
- Not available when in digital channels, EXT-5 or EXT-6 input.

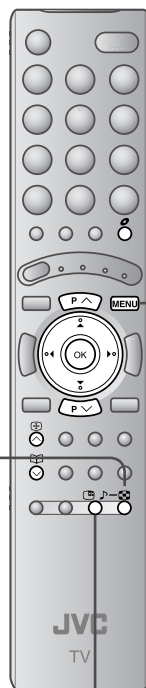

Stop children from watching specific channels

CHILD LOCK
(Analogue channels)

 1 Display "Features" menu
⇒ "Customising your TV" (P. 22)

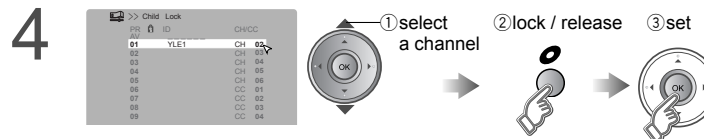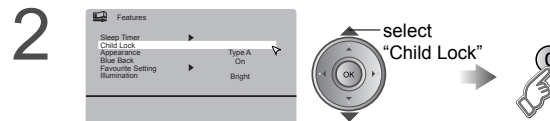


View a locked channel

⇒ Use the numerical buttons to enter the channel number. When appears, press and enter your "ID No."
(If you forget your "ID No.", check it in step 3.)

Take snapshots of the screen

FREEZE
(Analogue channels)

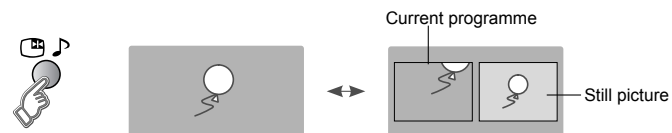

■ Cancel ⇒ Press again, or change the channel

- Not available in the following cases:
 - when the SUB-PICTURE is displayed
 - when watching digital channels
 - when in PC mode
 - when 1080p (1125p) signal is received
- You cannot save or export the snapshot.

Operate JVC recorders and other devices

The included remote control can be used to operate JVC recorders and other devices.



- 1 Select a device**

VCRs
DVD recorders
HDD recorders

Home cinema system

TV (P. 13, 16) DVD players


TV → VCR/DVR
TV → DVD

 - The indicator lights for 3 seconds each time the remote control is operated.
- 2 Turn on the device**
- 3 Operate the device**
 - Other buttons can be used to operate the TV at any time.


Operate the VCR, DVD recorder or HDD recorder

VCR/DVR


Select VCR / DVD recorder / HDD recorder

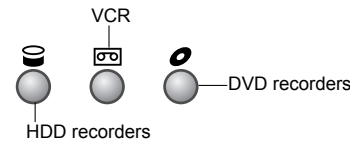

■ Operate DVD / HDD recorder menus

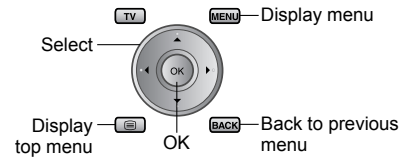

■ Playback / Record etc.

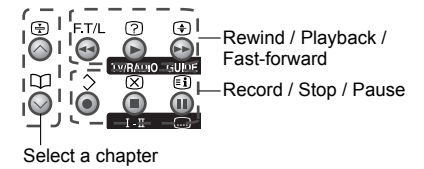


■ Display the subtitle (DVD / HDD recorder mode) ⇒ Press "i"


Operate the DVD player

DVD

■ Operate DVD menus

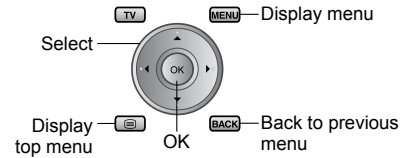

■ Playback etc.

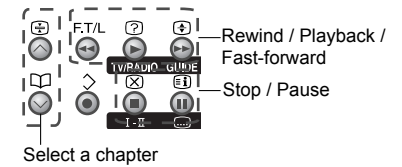


■ Display the subtitle ⇒ Press "i"


Operate the home cinema system

HC

■ Operate HC menus

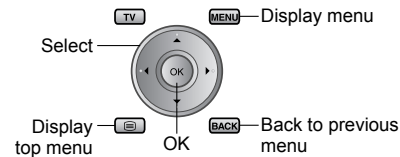

■ Playback etc.

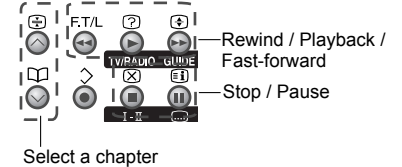

■ Display the subtitle ⇒ Press "i"

■ Mute ⇒ Press "MUTE"

 
■ Volume ⇒ Press "VOL + / -"

■ Select a surround mode ⇒ Press "SURROUND"

Try changing the remote control code if you cannot operate a recorder.

■ Code A or 1 (Default)

■ Code C or 3



Press and hold

Press and hold

- Confirm the code for your recorder by checking the manual it came with.
- Some models of JVC devices cannot be operated with this remote control.
- JVC DVD recorders and HDD recorders are set to code "C" or "3" by default.

Note

- If the battery is removed, the remote control code reverts back to code A or 1.

Customising your TV


ENGLISH




1 Display the menu bar





2 Select a menu

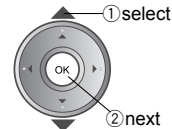


3 Select an item

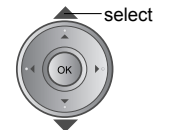


4 Adjust / Configure

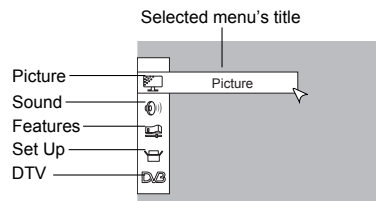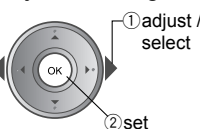

● DTV menu is available only when watching digital channels. ⇨ (P. 23)

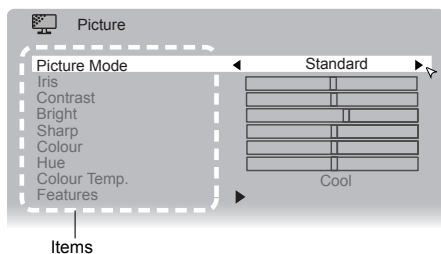

■ When adjusting with the sliding-bar

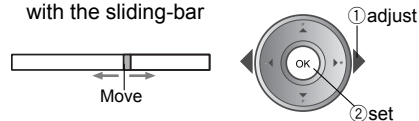

■ When selecting from presets



● Some items have a sub-menu.

■ To the previous screen
⇨ **BACK**

■ Exit
⇨ **MENU**

● The menu disappears after one minute of inactivity.

Menu	Item	Adjustments / Configurations	
Picture	Picture Mode	Picture mode (Bright / Standard / Soft)	
	Iris	Adjust the amount of light projected on the screen (Darker ⇨ Brighter)	
	Contrast	Contrast (Lower ⇨ Higher)	
	Bright	Brightness (Darker ⇨ Brighter)	
	Sharp	Sharpness (Softer ⇨ Sharper)	
	Colour	Colour (Lighter ⇨ Deeper)	
	Hue	Tint for NTSC (Reddish ⇨ Greenish)	
	Colour Temp.	Colour temperature (Warm / Normal / Cool)	
	Features	Finer picture adjustments (P. 24)	
	Sound	Stereo / I · II	Mode / Language (O : MONO / ∞ : STEREO / I : SUB1 / II : SUB2)
Bass		Low tones (Weaker ⇨ Stronger)	
Treble		High tones (Weaker ⇨ Stronger)	
Balance		Speaker balance (Left Stronger ⇨ Right Stronger)	
3D Sound		Ambience level (High / Low / Mono / Off)	
MaxxBass **		Emphasize the bass sound (Off / Low / High)	
Features	Sleep Timer	Timer for turning off the TV (P. 19)	
	Child Lock	Stops children from watching specific channels (P. 20)	
	Appearance	Format for displaying the channel number (Type A / Type B)	
	Blue Back	Displays a blue screen and mute the sound when the signal is weak or absent (On / Off)	
	Favourite Setting	Clear favourite channel settings (P. 16)	
	Illumination	Changes the brightness of the power lamp (P. 6) (Bright / Soft)	
	Set Up	Auto Program	Select a country, it automatically registers channels (P. 11, 4)
		Edit / Manual	Change registered channels or add new ones (P. 29)
		Language	Select a language for on-screen analogue channel displays and menus (excluding the DTV menu) (P. 11, 5)
		Decoder (EXT-2)	When connected to VCR with "T-V LINK" (On / Off)
Component Auto Select		Changes the TV input to "EXT-3" when a component signal is input to "EXT-3" (On / Off) (Not available when viewing PC)	
EXT Setting		For use with video players and other devices (P. 17)	
HDMI Setting		HDMI CEC : Connect and control multiple HDMI CEC enabled devices with a single remote (On / Off) (P. 34) HDMI-1 (EXT-5) : Size (1 / 2 / Auto), Audio (Digital / Analogue / Auto) HDMI-2 (EXT-6) : Size (1 / 2 / Auto)	
Attenuator		When digital channels are not received because of too strong radio waves (On / Off)	
PC Position		PC position adjustment (P. 17)	
Lamp Timer Reset		Resets the lamp timer (P. 5)	

● Other settings · Change the aspect ratio ⇨ "ZOOM" (P. 19)
· Turn on "3D Sound" ⇨ "3D SOUND" (P. 19)

*1 MaxxBass is a registered trademark of Waves Audio Ltd. in the USA, Japan and other countries.

Using DTV menu

Digital channels original function and setting can be selected from the DTV menu.

- 1 Switch to digital channels
- 2 Display the menu bar
- 3 Select "DTV"
- 4 Select "Setup"
- 5 Select an item

E.g. "Antenna Power"
- 6 Change setting

E.g. "Antenna Power"
- 7 Finish

■ To the previous screen
⇒ **BACK**

■ Exit
⇒ **MENU**

● DTV menu cannot be operated with the front buttons.

Menu	Item	Adjustments / Configurations	
DVB DTV	Timer	Reserve a programme to record / watch (P. 18)	
	Edit PR	Edit / Delete / Lock registered digital channels or add them to favourites (P. 28)	
	Configuration	Country	Select the country of installation (P. 25)
		Time Zone	Select the time zone when the clock is off time ⇒ "Set the clock to the right time" (P.33)
		Menu Language	Select a language for on-screen menus (P. 25)
		Audio Language	Select a default language for audio (P. 25)
		Subtitle Language	Select a default language for subtitle (P. 25)
	Teletext Language	Select a default language for teletext (P. 25)	
	EPG Language	Select the default language for programme name and programme information (P.25)	
	Enter PIN Code	Change PIN code (P. 25)	
Favourite Mode	Enable your favourite channels (P. 25)		
Maturity Rating	Restrict programmes according to the age (P. 25)		
Setup	Digital Audio Output	When the Dolby Digital signal is received, you can select to output the signal from the DIGITAL AUDIO OUTPUT terminal (P. 26)	
	Banner Duration	Select the display time for channel information (2 sec / 5 sec / 8 sec)	
	Receiver Upgrade	Upgrade your tuner software as newer versions becomes available (P. 26)	
	Common Interface	Set Conditional Access Module (P. 26)	
Installation	Antenna Power	Power supply for the indoor aerial (P. 26)	
	Service Scan	Register channels (P. 27)	
	Signal Check	Check the broadcast signal (P. 27)	
	Factory Settings	Initialise the DTV settings (P. 27)	

When entering the PIN code

When watching digital channels or changing DTV menu settings, it may be necessary for you to enter a PIN code.

Once a PIN code has been entered, there is no need to enter it again until the TV is turned off.


● The default PIN code is "0000".







● You can set your own PIN code. ⇒ "Enter PIN Code" (P. 25)

Advanced picture adjustment

By default, the TV automatically adjusts itself for the best picture.

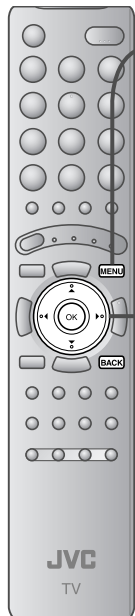ENGLISH

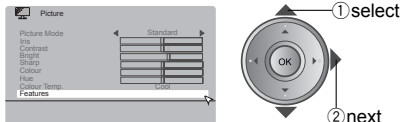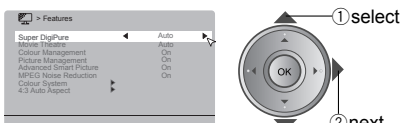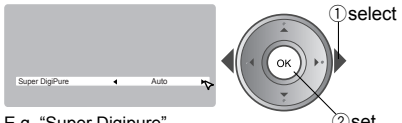

 
 
 

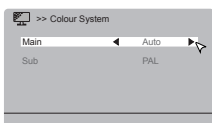
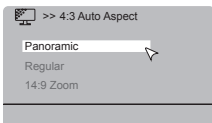


- 1 Display the menu bar

- 2 Select "Picture"

- 3 Select "Features"

- 4 Select an item

- 5 Change settings

- 6 Finish


■ To the previous screen
 ⇨ **BACK**

■ Exit
 ⇨ **MENU**

● The menu disappears after one minute of inactivity.

Super DigiPure	For natural-looking outlines		<input type="checkbox"/> Off : Function is turned off	<input type="checkbox"/> Min : When the picture loses sharpness	<input type="checkbox"/> Max : When noise appears	<input type="checkbox"/> Auto : Automatically adjusts
Movie Theatre	For smooth cinema film		<input type="checkbox"/> Off : Function is turned off	<input type="checkbox"/> On : Function is always on	<input type="checkbox"/> Auto : Automatically adjusts	
Colour Management	For natural-looking pictures		<input type="checkbox"/> Off : Function is turned off	<input type="checkbox"/> On : Maintain a natural colour balance		
Picture Management	Fix bright / dark pictures		<input type="checkbox"/> Off : Function is turned off	<input type="checkbox"/> On : Make it easier to view bright / dark pictures		
Advanced Smart Picture	Fix brightness of white areas		<input type="checkbox"/> Off : Function is turned off	<input type="checkbox"/> On : Make it easier to view white areas	● Not available when "Picture Mode" is set to "Bright" (P. 22).	
MPEG Noise Reduction	To reduce MPEG video noise		<input type="checkbox"/> Off : Function is turned off	<input type="checkbox"/> On : When noise appears		
Colour System	When there is no colour		① Select the screen to change settings on <input type="checkbox"/> Main : Main picture <input type="checkbox"/> Sub : Sub-picture in MULTI-PICTURE mode (P. 20) ② Select the colour system <input type="checkbox"/> PAL : Western Europe <input type="checkbox"/> SECAM : Eastern Europe / France <input type="checkbox"/> NTSC 3.58 : USA 3.58 MHz <input type="checkbox"/> NTSC 4.43 : USA 4.43 MHz <input type="checkbox"/> Auto : When watching videos, etc.			
4:3 Auto Aspect	Set a default aspect ratio		Select a default aspect ratio for "Auto" in "Zoom" (P. 19) <input type="checkbox"/> Panoramic : 16 : 9 <input type="checkbox"/> Regular : 4 : 3 <input type="checkbox"/> 14:9 Zoom : 14 : 9			

DTV configuration

Available for favourite channel selection, changing PIN code, and selecting maturity rating, etc.

- Switch to digital channels
- Display the menu bar
- Select "DTV"
- Select "Configuration"
- Select an item
- Finish

■ To the previous screen
⇒ **BACK**

■ Exit
⇒ **MENU**

Country	Select the country of installation Finland Germany Spain Sweden France
Menu Language	Select a language for on-screen menus English Suomi Svenska Français Castellano Català Deutsch
Audio Language	Select a default language for audio*1 Finnish Swedish English ● For visually impaired
Subtitle Language	Select a default language for subtitle*1 Finnish Swedish English ● For hearing impaired
Teletext Language	Select a default language for teletext*1 Finnish Swedish English
EPG Language	Select the default language for programme name and programme information*1 Finnish Swedish English
Change PIN code	<p>① Select "Enter Pin Code" </p> <p>② Input the current code ● Default is "0000". ⇒ "When entering the PIN code" (P. 23) ● If you forget the code, input "0081"</p> <p>③ Input a new code twice </p>
Enable your favourite channels	<p>① Select "Favourite Mode" </p> <p>② Select "On" </p> <p>● If you cannot select "On", register channels in "favourites" first ⇒ "Favourites" (P. 28)</p>
Set the viewing age limit	<p>① Select "Maturity Rating" </p> <p>② Select age*2 </p> <p>● Only programmes with a maturity rating can be restricted. ● To watch the restricted programme, the PIN code must be entered.</p>

● Time Zone: Select the time zone when the clock is wrong ⇒ "Set the clock to the right time" (P.33)

Note
When not broadcast in the default language, on-screen displays and audio output in that language are not available. In this case, the language that can be displayed and heard depends on the broadcast.

*1 The languages will differ depending on the Country setting.
(The illustrations are for Finland)


*2 The maturity rating may differ depending on the Country setting.
(The illustrations are for Finland)



 
 
 
 

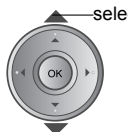

ENGLISH
IMPORTANT!
PREPARE
USE
SETTINGS
TROUBLE?


DTV setup


Available for setting power supply for the aerial, and upgrading the tuner software, etc.

ENGLISH



 
- 1 Switch to digital channels

- 2 Display the menu bar

- 3 Select "DTV"


 - ① select
 - ② next
- 4 Select "Setup"


 - ① select
 - ② next
- 5 Select an item


 - select
- 6 Finish


■ To the previous screen
 ⇒ 

■ Exit
 ⇒ 

Output the Dolby Digital signal

Digital Audio Output



PCM

: The Linear PCM signal is output

 
Dolby Digital

: The Dolby Digital signal is output

● Only when the Dolby Digital signal is received

● Please read "Dolby Digital output from the "DIGITAL AUDIO OUT" terminal" (P. 33) before setting.

You can upgrade the tuner software as newer versions become available. Normally set to "Auto".



Auto

 
 
: Automatically download and install software upgrades
 ● This occurs at midnight when the TV's power is off.

Manual



: Manually download and install software upgrades
 ● When you change the setting, enter PIN code.

■ When JVC or the broadcasting station informs you of the new software, download it as follows.

① Select "Manual"




② Select "Search for new"

  

● If upgrading is not necessary, select "OK" to finish.

 ③ Select "Yes"



"Software upgraded successfully! TV will now reset!"



● If the TV has upgrade to the latest tuner software, the message "Search completed. No new software found" will appear.
 ● Select "In standby" instead of "Yes" if you want to upgrade the software automatically when the TV is turned off.

 
Upgrade tuner

Receiver Upgrade

Set Conditional Access Module

Common Interface

To watch pay-TV digital channels, use the Conditional Access Module menu. This function can only be used when pay-TV can be received in your region.



No CI Module

: Function is not available

● When the Conditional Access Module etc. is inserted after subscribing to the broadcasting company, this function is available. ⇒ "Watch pay-TV digital channels" (P. 7)

① Press "OK" button to display the Conditional Access Module menu

② Follow the instructions on the screen to set up pay-TV

● The content of the menu is different depending on the broadcasting company.
 ⇒ For details, consult your broadcasting company
 ● The language shown in the menu may differ to the "Menu Language" set for the TV. (P. 23)

Power supply for the indoor aerial

Antenna Power



Off

: Power not supplied

On

: Power supplied

● Please read "Power supply for the indoor aerial" (P. 33) before setting.

● Banner Duration: Select the display time for channel information (2 sec / 5 sec / 8 sec).

DTV installation

Available for registration of digital channels, checking of digital channel signal, and initialisation of all digital channel settings.

- 1** Switch to digital channels
- 2** Display the menu bar
- 3** Select "DTV"
- 4** Select "Installation"
- 5** Select an item
- 6** Finish

■ To the previous screen
 ⇨ **BACK**


■ Exit
 ⇨ **MENU**

Register a new channel


Service Scan

① Set items

Scan	Automatic : Scan automatically Manual : Scan a specified channel range Network : You can select and register only necessary networks.
Start Channel	Specify a scanning channel range (For "Manual")
Stop Channel	
Mode	Add : Add a new channel to the registered channel Reinstall : Register all channels again

 

② Select "Start scan"

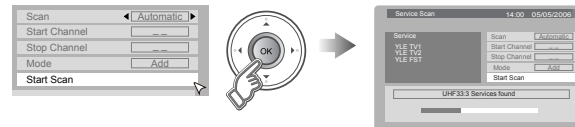


③ Select "Yes"



■ For "Network"

 Select broadcasting stations from a list




Check the broadcast signal

Signal Check



- This channel is the frequency of the digital broadcasting. It differs from the channel number displayed on the TV.
- Select another broadcast channel ⇨

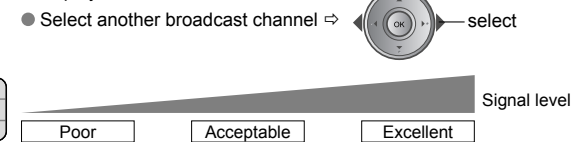


Initialise the DTV settings

Factory Settings


All registered digital channels are deleted and the DTV menu settings are initialised. Digital channels are reregistered.

 ① Enter PIN code



- Default is "0000".
⇨ "When entering the PIN code" (P. 23)

 ② Select "Yes"



⇨ **2** in "Initial settings" (P. 10)

Editing digital channels

Edit the digital channels registered with "Initial settings" (P. 10).

ENGLISH

- Switch to digital channels
 - When switching TV / RADIO
- Display the menu bar
- Select "DTV"
- Select "Edit PR"
- Select a channel
- Edit
- Finish

To the previous screen
 Exit

Edit a channel name

Name

- Select "Name"
- Change the name
- Set

Edit channel number

Number

- Select "Number"
- Change the number
- Select "OK"

- Only when the same channel number exists.
- The channels are rearranged in numerical order.

Delete a channel

Delete

- Select "Delete"
- Select "Yes"

Stop Children from watching specific channels

Lock

- Select "Lock"
- Lock

- To release, press "OK" button again.
- To enable "Lock" function, turns the TV off and on again.
- To watch the locked channels, the PIN code must be entered.

Lock icon

Register your favourite channel

Favourites

- Select "Favourites"
- set

- To move through only your favourite channels and have them appear in the PR list. ⇒ "Favourite Mode" (P. 25)

Favourite icon

To release, press "OK" button again.

Editing analogue channels

Edit the channels registered with "Auto Program" in "Initial settings" (P. 11).

When coming from "Initial settings" (P. 11), skip to ⑥.

- 1 **Switch to analogue broadcasting**
TV/DTV
- 2 **Display the menu bar**
MENU
- 3 **Select "Set Up"**
Set Up
- 4 **Select "Edit / Manual"**
Edit/Manual
- 5 **Select a row**
[Up/Down]
- 6 **Edit**
[Left/Right]
- 7 **Confirm settings**
OK
- 8 **Finish**
T-V LINK

■ To the previous screen
⇨ BACK

■ Exit
⇨ MENU

■ When using "T-V LINK"
OK

■ When not using "T-V LINK"
TV/DTV

● If "Feature Not Available" appears:
⇨ Is a "T-V LINK" compatible device connected to "EXT-2"?
⇨ Is the device turned on?
● "T-V LINK" ⇨ (P. 10)

Move a channel's position

MOVE

- ① Begin
move out
- ② Select a destination
select
- ③ Finish
move in

Edit a channel name

ID

- ① Begin
(red)
- ② Enter a channel name
enter the first character
- ③ Finish
select

■ When selecting a preset name from the "ID List"
① select
② set

■ When manually naming a channel
① enter
② next column
③ set

Insert a channel

INSERT

- ① Begin
- ② Select a "CH / CC"
- ③ Enter a number

● "CH/CC" List ⇨ (P. 32)

● Receives the broadcast signal.

Delete a channel

DELETE

- ① Delete

Register a new channel

MANUAL

- ① Begin
- ② Beginning channel search
From high frequencies (red) or From low frequencies
- ③ Set

● If necessary, press ▶ to change the broadcasting system.
⇨ "Receivable broadcast systems (Analogue channels)" (P. 33)

● Auto-search begins, and the nearest frequency is imported.
⇨ Repeat the previous steps until the desired channel is displayed


■ Adjust
● Picture fine tuning ⇨ [Up/Down]
● Sound fine tuning ⇨ [Left/Right]

select a system

Troubleshooting

■ Analogue channels

Severe noise or snow

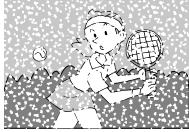

- Is the TV connected correctly to the aerial?
 - Change the direction of the aerial.
 - Is the aerial or its cable damaged?
- ⇒ Consult your retailer


Patterns, stripes or noise



- Is the aerial receiving interference from high-voltage power lines or wireless transmitters?
- ⇒ Consult your retailer
- Are connected devices too close to the TV?
- ⇒ Insert the minimum distance between the aerial and the cause of interference until no interference

Ghosting

(Doubling of images)

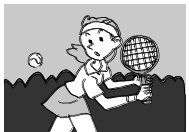


- Are you receiving interference from signals reflected off mountains or buildings?
- ⇒ Adjust the direction of your aerial, or change to a good-quality directional aerial

■ Digital channels ⇒ (P. 11)



I can't turn it on!

- Is the power cord connected to the AC outlet correctly?

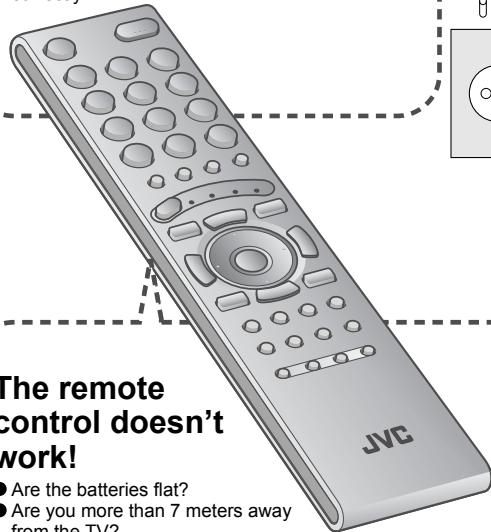

The remote control doesn't work!

- Are the batteries flat?
- Are you more than 7 meters away from the TV?
- Is the "MODE (TV, VCR/DVR, DVD, HC)" set to "TV"?
- When viewing teletext, the TV menu bar does not appear.
- Depending on the stability of the signal, there may be a time lag when changing channels.

	Problem	Actions	page
Basics	Not displayed (black screen)	<ul style="list-style-type: none"> ● Is the analogue channel reception poor, too? ⇒ Following the instructions in "Severe noise or snow" can solve this problem (see left). ● Digital channels are not displayed. ⇒ "When the TV cannot find the digital channels" ● There may be problems at the aerial, radio waves, or the area you live in, where reception is bad. ⇒ Consult your retailer. 	11
	Remote control stops working	<ul style="list-style-type: none"> ● Unplug TV, several minutes later plug it in again. 	-
	Digital channel screen is frozen	<ul style="list-style-type: none"> ● Hold down "TV/AV" and "MENU/OK" on the TV simultaneously for three or more seconds to restart. 	-
	Some functions do not work	<ul style="list-style-type: none"> ● It is not a malfunction. Some functions (dark background) in the menu do not work depending on the situation. 	-
	Front control buttons do not work	<ul style="list-style-type: none"> ● Switch "Child Lock" to "Off." 	20 22
Screen	Aspect ratio changes unintentionally	<ul style="list-style-type: none"> ● Press "ZOOM" to return to your settings. 	19
	PC screen alignment is off	<ul style="list-style-type: none"> ● Adjust the "PC Position". 	17
	The screen is dim	<ul style="list-style-type: none"> ● Adjust the "Iris" brighter. 	22
	Black or white dots appear on the screen	<ul style="list-style-type: none"> ● Although the HD-ILA element is manufactured with high-precision technology, please understand that some pixels may be lost or permanently displayed. 	-
Sound	Poor sound	<ul style="list-style-type: none"> ● Adjust the "Bass" and "Treble". ● If receiving a poor signal in "Stereo / I-II", switch to "Mono". 	22 22
	No sound from the audio component	<ul style="list-style-type: none"> ● Audio signals received from EXT-5 and EXT-6 cannot be sent to the "AUDIO OUT" terminal. 	-

Troubleshooting (continued)

	Problem	Actions	page
HDMI	Wrong screen size	● Switch "Size" in "HDMI Setting" to "1" or "2".	22
	No picture, no sound	● Use the cable marked with HDMI logo. HDMI	-
	No sound	● Check if the device is compliant with HDMI. ● Switch "Audio" in "HDMI Setting" to "Digital" or "Auto" for HDMI devices, or "Analogue" or "Auto" for DVI devices. (Not available for "EXT-6".)	22
	Green and distorted screen	● Wait a little for the signal to stabilize when switching the signal format for an "HDMI" device.	-
Error message	"Feature Not Available"	● Is the T-V LINK compatible device connected to EXT-2? ● Is the SCART cable "Fully Wired"? ● Is the T-V LINK compatible device turned on? After confirming all the conditions above, press "OK" button again.	33 - -
	"ACI Error"	● Press ◀ to start ACI again. If you still receive the "ACI Error" after numerous tries, press ▶ to cancel ACI.	-
	"No Recording"	● A problem occurs at the recorder.	-
	"No Recording Possible"	● The displayed video cannot be recorded.	-
	"No Recording Media Problem"	● The recorder is not ready for recording. Check the video tape or DVD disc.	-
	"No Recording Device Busy"	● The recorder is recording another programme, or is playing.	-

	Problem	Actions	page
Picture	Poor picture quality	● Unnatural colour >>> Adjust "Colour" and "Bright". Check your "Colour System". ● Noise >>> Set to the following functions. Picture Mode : Standard Super DigiPure : Max ● Dull picture >>> Set to the following functions. Picture Mode : Bright Super DigiPure : Min	22 24 22 24 22 24
	Strange picture when using an external device	● If you connected S-Video output device, check the "S-IN" setting. ● If the top of the image is distorted, check the video signal quality itself. ● If movement appears unnatural when receiving a signal from a DVD player, etc. with 625p (progressive scanning), change the output setting of the external device to 625i (interlaced scanning).	17 - -
	Blue screen appears on the screen	● Switch "Blue Back" to "Off."	22
Lamp	The LAMP indicator blinks rapidly	● Keep the TV off for a while and then turn the power on again. If the TV goes into warning mode, unplug the TV after the cooling has completed and consult your retailer. (It may be a malfunction of the internal electrical circuits.)	-
	The power lamp and LAMP indicator blink alternately	● Keep the TV off for a while and then turn the power on again. If the TV goes into warning mode, unplug the TV after the cooling has completed and consult your retailer. (The inside temperature rises abnormally or the fan may be blocked.)	-
	The power lamp and LAMP indicator blink rapidly simultaneously	● If this condition occurs soon after replacing the lamp, reinstall the new lamp unit. (The lamp unit may not be inserted into the lamp housing correctly.) Repeat the lamp installation steps, taking care to observe all warnings. - Make sure the lamp sits flat inside the housing area. - Make sure the lamp cover is reinstalled. ● If this condition occurs except for replacing the lamp, keep the TV off for a while and then turn the power on again. If the TV goes into warning mode, unplug the TV after the cooling has completed and consult your retailer. (It may be a lamp malfunction.)	4 -

Troubleshooting (continued)

ENGLISH

Functions

DTV

Some inputs cannot be selected in the sub-picture	<ul style="list-style-type: none"> ● "EXT-3", "EXT-5", "EXT-6" inputs and PC mode cannot be selected in the sub-picture. ● RGB input signal of "EXT-1" and "EXT-2" are not available in dual-picture mode. 	-
No picture, no sound	<ul style="list-style-type: none"> ● Some digital channels cannot be watched on this TV. 	33
"Dolby Digital selected! No analogue audio available"	<p>When "Dolby Digital" is selected in "Digital Audio Output", the sound of a programme containing "Dolby Digital" signals cannot be output from the TV or the audio system connected to the "AUDIO OUT" terminal.</p> <p>When the channel is changed, a message will be displayed for a few seconds.</p> <ul style="list-style-type: none"> ● To listen with the TV or audio system <ul style="list-style-type: none"> ⇒ Select a language without "Dolby" from "Audio Selection" ⇒ Switch "Digital Audio Output" to "PCM" 	33 19 26
Forgot my PIN code!	<ul style="list-style-type: none"> ● The default PIN code is "0000". If you forget the numbers that you used to change the default PIN code, first input "0081" in the "Enter PIN code" and then register a new PIN code. 	25
Locked channels can be watched without inputting PIN code	<ul style="list-style-type: none"> ● Once the PIN code is input, all the lock functions ("Lock" and "Maturity Rating") are released. If you want to use the lock function again, turn the TV off and then turn it on again. 	-
When JVC or the broadcasting station informs you of the software	<ul style="list-style-type: none"> ● Upgrade the tuner software by using the "Receiver Upgrade" function. 	26
When the clock is wrong	<ul style="list-style-type: none"> ● Set the time zone. ⇒ "Set the clock to the right time" 	33

"CH/CC" List

To use the INSERT function (P. 29), find the "CH/CC" number corresponding to the TV's Channel number from this table.

● When the Country setting is "France", select a three-digit CH/CC number.

CH	Channel	CH	Channel	CC	Channel	CC	Channel
CH 02/CH 202	E2, R1	CH 40/CH 240	E40, R40	CC 01/CC 201	S1	CC 31/CC 231	S31
CH 03/CH 203	E3, ITALY A	CH 41/CH 241	E41, R41	CC 02/CC 202	S2	CC 32/CC 232	S32
CH 04/CH 204	E4, ITALY B, R2	CH 42/CH 242	E42, R42	CC 03/CC 203	S3	CC 33/CC 233	S33
CH 05/CH 205	E5, ITALY D, R6	CH 43/CH 243	E43, R43	CC 04/CC 204	S4	CC 34/CC 234	S34
CH 06/CH 206	E6, ITALY E, R7	CH 44/CH 244	E44, R44	CC 05/CC 205	S5	CC 35/CC 235	S35
CH 07/CH 207	E7, ITALY F, R8	CH 45/CH 245	E45, R45	CC 06/CC 206	S6	CC 36/CC 236	S36
CH 08/CH 208	E8, R9	CH 46/CH 246	E46, R46	CC 07/CC 207	S7	CC 37/CC 237	S37
CH 09/CH 209	E9, ITALY G	CH 47/CH 247	E47, R47	CC 08/CC 208	S8	CC 38/CC 238	S38
CH 10/CH 210	E10, ITALY H, R10	CH 48/CH 248	E48, R48	CC 09/CC 209	S9	CC 39/CC 239	S39
CH 11/CH 211	E11, ITALY H+1, R11	CH 49/CH 249	E49, R49	CC 10/CC 210	S10	CC 40/CC 240	S40
CH 12/CH 212	E12, ITALY H+2, R12	CH 50/CH 250	E50, R50	CC 11/CC 211	S11	CC 41/CC 241	S41
CH 21/CH 221	E21, R21	CH 51/CH 251	E51, R51	CC 12/CC 212	S12	CC 75/CC 275	X
CH 22/CH 222	E22, R22	CH 52/CH 252	E52, R52	CC 13/CC 213	S13	CC 76/CC 276	Y, R3
CH 23/CH 223	E23, R23	CH 53/CH 253	E53, R53	CC 14/CC 214	S14	CC 77/CC 277	Z, ITALY C, R4
CH 24/CH 224	E24, R24	CH 54/CH 254	E54, R54	CC 15/CC 215	S15	CC 78/CC 278	Z+1, R5
CH 25/CH 225	E25, R25	CH 55/CH 255	E55, R55	CC 16/CC 216	S16	CC 79/CC 279	Z+2
CH 26/CH 226	E26, R26	CH 56/CH 256	E56, R56	CC 17/CC 217	S17		
CH 27/CH 227	E27, R27	CH 57/CH 257	E57, R57	CC 18/CC 218	S18		
CH 28/CH 228	E28, R28	CH 58/CH 258	E58, R58	CC 19/CC 219	S19		
CH 29/CH 229	E29, R29	CH 59/CH 259	E59, R59	CC 20/CC 220	S20		
CH 30/CH 230	E30, R30	CH 60/CH 260	E60, R60	CC 21/CC 221	S21		
CH 31/CH 231	E31, R31	CH 61/CH 261	E61, R61	CC 22/CC 222	S22		
CH 32/CH 232	E32, R32	CH 62/CH 262	E62, R62	CC 23/CC 223	S23		
CH 33/CH 233	E33, R33	CH 63/CH 263	E63, R63	CC 24/CC 224	S24		
CH 34/CH 234	E34, R34	CH 64/CH 264	E64, R64	CC 25/CC 225	S25		
CH 35/CH 235	E35, R35	CH 65/CH 265	E65, R65	CC 26/CC 226	S26		
CH 36/CH 236	E36, R36	CH 66/CH 266	E66, R66	CC 27/CC 227	S27		
CH 37/CH 237	E37, R37	CH 67/CH 267	E67, R67	CC 28/CC 228	S28		
CH 38/CH 238	E38, R38	CH 68/CH 268	E68, R68	CC 29/CC 229	S29		
CH 39/CH 239	E39, R39	CH 69/CH 269	E69, R69	CC 30/CC 230	S30		
CH 102	F2	CH 141	F41	CC 110	116-124	CC 152	391-399
CH 103	F3	CH 142	F42	CC 111	124-132	CC 153	399-407
CH 104	F4	CH 143	F43	CC 112	132-140	CC 154	407-415
CH 105	F5	CH 144	F44	CC 113	140-148	CC 155	415-423
CH 106	F6	CH 145	F45	CC 114	148-156	CC 156	423-431
CH 107	F7	CH 146	F46	CC 115	156-164	CC 157	431-439
CH 108	F8	CH 147	F47	CC 116	164-172	CC 158	439-447
CH 109	F9	CH 148	F48	CC 123	220-228	CC 159	447-455
CH 110	F10	CH 149	F49	CC 124	228-236	CC 160	455-463
CH 121	F21	CH 150	F50	CC 125	236-244	CC 161	463-469
CH 122	F22	CH 151	F51	CC 126	244-252		
CH 123	F23	CH 152	F52	CC 127	252-260		
CH 124	F24	CH 153	F53	CC 128	260-268		
CH 125	F25	CH 154	F54	CC 129	268-276		
CH 126	F26	CH 155	F55	CC 130	276-284		
CH 127	F27	CH 156	F56	CC 131	284-292		
CH 128	F28	CH 157	F57	CC 132	292-300		
CH 129	F29	CH 158	F58	CC 133	300-306		
CH 130	F30	CH 159	F59	CC 141	306-311		
CH 131	F31	CH 160	F60	CC 142	311-319		
CH 132	F32	CH 161	F61	CC 143	319-327		
CH 133	F33	CH 162	F62	CC 144	327-335		
CH 134	F34	CH 163	F63	CC 145	335-343		
CH 135	F35	CH 164	F64	CC 146	343-351		
CH 136	F36	CH 165	F65	CC 147	351-359		
CH 137	F37	CH 166	F66	CC 148	359-367		
CH 138	F38	CH 167	F67	CC 149	367-375		
CH 139	F39	CH 168	F68	CC 150	375-383		
CH 140	F40	CH 169	F69	CC 151	383-391		

Technical information

What is "T-V LINK"?

"T-V LINK" allows the TV to share information easily with a connected "T-V LINK" compatible device. By using T-V LINK :

- You can send the channel information programmed on the TV to the "T-V LINK" compatible device, so that both the TV and the external device have the same channel settings. When connecting a new external device, channel information is loaded into it, allowing channel setup to be completed very quickly. For more details, refer to the external device's manual.
- You can easily record the TV programme you are viewing on a "T-V LINK" compatible device by using the "DIRECT REC" feature. For more details, refer to the external device's manual.

What is "ACI" (Automatic Channel Installation)?

Some cable companies transmit a signal called "ACI" which contains information that allows TV channels to be registered automatically on your TV.

When an ACI signal is received, "ACI Start / ACI Skip" appears in the "Auto Program" screen.

Receivable broadcast systems (Analogue channels)

Depending on the country selected during "Auto Program", the receivable broadcast system differs.

- UNITED KINGDOM: Receive only PAL-I.
- FRANCE: Can receive SECAM-L.

To receive SECAM-L in countries other than France:

- 1) Change the "Country" to "France" in "Auto Program".
- 2) Press the "BACK" button to return to the menu and enter the channel using "INSERT" or "MANUAL".

PC Signals that can be displayed

- If the signal doesn't appear, check that the vertical frequency on the PC is set to "60Hz".

Resolution	640 x 480 (VGA)	1024 x 768 (XGA)
Vertical frequency (Hz)	60.0	60.0

Connect "DVI" devices

Connect a "DVI" device to "EXT-5 (HDMI)" using "DVI-HDMI" conversion cable. Connect analogue sound output of the DVI device to L and R terminals in AUDIO (ANALOGUE).

- Set "Audio" in "HDMI Setting" to "Analogue" or "Auto" ⇒ (P. 22)
- EXT-6 input does not support analogue sound.

Power supply for the indoor aerial

When using an indoor aerial which needs external power, set "Antenna power" to "On" during "Initial settings" (P. 10). The TV will supply DC 5V, 50mA (max) from the aerial socket through the cable to the aerial.

- Supplying power to outdoor and indoor aerials which does not need external power, may cause damage to the aerial. If you are uncertain whether the aerial needs external power, select "Off".
- Connect the aerial directly to the TV. When a recording device is connected between the aerial and the TV, power cannot be supplied to the aerial.
- Power is supplied to the aerial only when the TV is on.

■ To change the setting after "Initial settings" is complete ⇒ "Antenna power" (P. 26)

"Dolby Digital" output from the "DIGITAL AUDIO OUT" terminal

Some digital channels are broadcasted with "Dolby Digital" signals. In these cases, "Dolby Digital" signals can be output from the "DIGITAL AUDIO OUT" terminal.

1. Connect an audio system with a "Dolby Digital" decoder. (P. 9)
2. Change the "Digital Audio Output" setting from "PCM" to "Dolby Digital". (P. 26)
 - When changing the setting, the message "Dolby Digital selected! No analogue audio available." may be displayed for a few seconds.
 - Each time the channel is changed to a channel that is broadcast with "Dolby Digital" signals, the message "Dolby Digital selected! No analogue audio available." may be displayed for a few seconds.
 - Even if "Dolby Digital" is set, "linear PCM" signals will be output by a channel that is not broadcast with "Dolby Digital" signals. Set the audio system so that it is compatible with both "Dolby Digital" and "linear PCM". (For details, refer to the audio system instruction manual.)
 - When you want to temporarily change the setting from "Dolby Digital" to "PCM", change with the "Audio selection" menu (P. 19).

■ Set "Digital Audio Output" to "PCM" in the following cases.

The sound of a channel broadcast with "Dolby Digital" signals cannot be heard even when "Dolby Digital" is set.

- When listening with the TV speakers.
 - When listening with an audio system that does not have a "Dolby Digital" decoder.
 - When listening with an audio system that is connected to the "AUDIO OUT" terminal.
 - When recording a programme.
- If a language with "Dolby" is selected when "Dolby" is displayed in the "Audio selection" menu (P. 19), the "Digital Audio Output" setting can be temporarily changed from "PCM" to "Dolby Digital".
- A message recommending you to change the "Digital Audio Output" setting to "Dolby Digital" is displayed for a few seconds.
- If you want to record a "Dolby Digital" signal using timer-record (P. 18), change the "timer-record setting" from "PCM / Analogue" to "Dolby Digital". However, if the setting is changed to "Dolby Digital", you cannot record analogue sound with a recording device that is connected to the EXT-2 terminal.

■ "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Digital channels that cannot be watched on this TV

If a digital channel service uses new formats (such as DVB-H or MPEG4, etc.), or MHP, it cannot be watched even though the channel name appears.

If the channel is selected, the picture will not appear and audio cannot be heard.

- You can delete these channels by using the "Delete" in the "Edit PR" ⇒ "Editing digital channels" (P. 28)

Set the clock to the right time

Displayed clock time for digital channels is based on the information from the broadcast, and obtained by calculating the time difference between your time zone and Greenwich Mean Time (GMT) according to the "Country" setting in the "Configuration" menu. ("Time Zone" is set in "Auto")

If there is a time difference within the same country, or the time information is not correct, the clock on the screen is incorrect. To amend this, change the "Time Zone" setting.

- 1 Display "Configuration" menu (P. 25)
- 2 Select "Time Zone" and press the OK button
- 3 Select the nearest city or country from your resident and press the OK button
- 4 Press the MENU button

Auto in "Zoom"

When "Auto" is selected in Zoom, the aspect ratio will turn to the ratio obtained from the information the TV received.

- The aspect ratio will turn to the ratio obtained from WSS (Wide Screen Identification Signal), video signal, or control signal of the external devices. Without receiving the aspect information, it will be the setting in "4:3 Auto Aspect" (P. 24)
- Not available in PC mode.

Technical information (continued)

What is "HDMI CEC"?

HDMI CEC (Consumer Electronics Control) allows the TV to connect and control multiple HDMI CEC enabled devices with a single remote. CEC (Consumer Electronics Control) is an optional protocol used in HDMI.

- HDMI CEC on this TV is compliant with "High-Definition Multimedia Interface Specification Version 1.2a".
- The TV does not support HDMI CEC functions that are not listed below.
- The TV does not guarantee to support use of all HDMI CEC enabled devices.
- Devices that are not enabled to HDMI CEC cannot be controlled with this TV.

■ Control the TV using the HDMI CEC enabled device

- Turn the TV on and switch to the video source of the operating device.
- Switch to the video source of the operating device.
- Turn the TV off with the HDMI CEC enabled device you are viewing.

* For operating instructions of the device, refer to the device's manual.

■ Control the HDMI CEC enabled device using the TV

- Turn off the operating device by turning off the TV.
- * Some device may not support this function. For more details refer to the device's manual.

■ Send status of the TV to the HDMI CEC enabled device

- When switching the TV's external input or channel.
- When switching the TV's menu language.

* Information regarding behaviour of the device when status is received, refer to the external device's manual.

Turning On / Off HDMI CEC:

- Set HDMI CEC ⇨ "HDMI Setting" (P. 22)
- * Factory default setting is "On".

If "HDMI CEC" does not work correctly:

 
- When HDMI CEC enabled device is connected to EXT-1 or EXT-2 with SCART cable and EXT-5 or EXT-6 with HDMI cable, you may not be able to control TV's external input. To solve the problem set "HDMI CEC" to "Off".

Updating the PR list (Digital channel only)

The TV will run the reception test (for digital channel) at midnight (3 AM) on a daily basis.

If the TV detects channels that became receivable or if the TV was not able to receive a certain channel, a message about updating the PR list will be displayed when the TV is turned on.

- The reception test will only operate when the TV is on standby. It will not operate when the TV is turned on.
- If the TV does not detect any channels that needs to be updated, a message will not be displayed.



■ To update the PR list

- Select "Yes" and press the OK button.
 - "Service Scan" menu is displayed.
Run the service scan to update the PR list ⇨ "Service Scan" (P. 27)
- If "Reinstall" is set in "Mode" of "Service Scan" menu, all PR list setting will reset and all the reservations for "Record" and "Remind" will be canceled. If you want to leave those settings and just add channels, set the "Mode" of "Service Scan" menu to "Add." (P. 27)
 - If "Add" is set in "Mode" of "Service Scan" menu, channels which the TV could not receive will not be deleted from the PR list. To delete those channels manually ⇨ "Edit PR" (P. 28)
 - The service scan will take a few minutes.

■ To cancel the update

- Select "No" and press the OK button.
- If you want to update the PR list later, select "No" and press the OK button. Next time you turn on the TV, this message will not be displayed but you can also update the PR list using "Service Scan." (P. 27)

Specifications

Main unit

Model	HD-65DS80DDU	HD-58DS80DDU
Broadcasting systems	CCIR, B / G, D / K, I, L (See "Technical information", P. 33)	
Colour systems	TV broadcast : PAL, SECAM External input : PAL, SECAM, NTSC 3.58/4.43 MHz	
Channels and frequencies	<ul style="list-style-type: none"> ● Digital : Finland / Spain E21-E69 (Frequency : 474 MHz-858 MHz), Sweden / Germany E5-E12 / E21-E69 (Frequency : 177.5 MHz-858 MHz), France F5-F10 / F21-F69 (Frequency : 178.75 MHz-858 MHz) ● Analogue : E2-E12 / E21-E69, F2-F10 / F21-F69, IR A-IR J, ITALY A-H / H+1 / H+2, R1-R12 / R21-R69, S1-S41, X / Y / Z / Z+1 / Z+2, French cable channels (Frequency : 116-172 MHz / 220-469 MHz) 	
Sound-multiplex systems	NICAM (B / G, D / K, I, L), A2 (B / G, D / K)	
Teletext systems	Digital : EBU TEXT Analogue : FLOF (Fastext), TOP, WST (World Standard System).	
Power requirements	AC 220 V - 240 V, 50 Hz	
Audio output (Rated power output)	10 W + 10 W + 10 W	
Speakers	(1 cm x 9.5 cm) x 2, 2 cm round x 2, 10 cm round x 1	
Power consumption [standby]	204 W [0.68 W]	
Screen size (visible area size measured diagonally)	165 cm	147 cm
Dimensions (W x H x D: mm) [without pedestals]	1459 mm x 1055 mm x 369 mm [1459 mm x 1055 mm x 295 mm]	1305 mm x 961 mm x 346 mm [1305 mm x 961 mm x 272 mm]
Weights	66 kg	54 kg
Accessories	(See "Check accessories", P. 6)	

- A Conditional Access Module for watching pay-TV digital channels can be installed (P. 7)
- DC power can be supplied to the indoor aerial. (P. 33)

Terminals / Connectors

Terminal name	Terminal type	Signal type (IN)	Signal type (OUT)	Notes	
Input / Output terminals	EXT-1	Euroconnector x 1 (SCART connector)	Composite video, S-video, Analogue RGB AUDIO L / R	TV out	
	EXT-2	Euroconnector x 1 (SCART connector)	Composite video, S-video, Analogue RGB AUDIO L / R	Dubbing out	"T-V LINK" compatible
Input terminals	EXT-3	RCA connectors x 5	Analogue component (576i (625i) / 480i (525i), Progressive : 576p (625p) / 480p (525p), HD : 1080i (1125i), 720p (750p))		
	EXT-4	RCA connectors x 3, S-VIDEO connector x 1	Composite video, S-video AUDIO L / R		
	EXT-5 (HDMI-1)	HDMI connector x 1 RCA connectors x 2	HDMI (576i (625i) / 480i (525i) / 576p (625p) / 480p (525p), 1080i (1125i), 720p (750p), 1080p (1125p)) AUDIO L / R (EXT-5 only)		"HDMI CEC" compatible (left column)
	EXT-6 (HDMI-2)	HDMI connector x 1			
Output terminals	PC INPUT	D-SUB (15 pins) x 1	Analogue PC signal (P. 33)		
	AUDIO OUT	RCA connectors x 2		Audio L / R	
	DIGITAL AUDIO OUT	OPTICAL connector x1		Digital audio (48 kHz, 16 bit linear PCM / Dolby Digital)	
	Headphone	Stereo mini-jack x 1 (3.5 mm in diameter)		Headphone output	

- We may change the design and specifications without notice.

JVC