

Getting Started

1. Packing List

1. eBook Reader Main Unit
2. USB Cable
3. AC adaptor
4. Quick Start Guide
5. Warranty Card

2. Device Overview




- | | | |
|-----------|---------------------------|--|
| 1 | Rotation | Rotate the screen while reading or viewing picture |
| 2 | Zoom in/out | Enlarge/reduce font size while reading and picture size while viewing pictures |
| 3 | Direction buttons | Up /down/left/right directions buttons. |
| 4 | Menu | Pop up the menu and also OK function. |
| 5 | Back | Back to the previous page. Long press the button to go back main menu. |
| 6 | Pause | Pause while playing music or video. Delete while in file explorer. |
| 7 | Next | Go to the next file while in reading ebook, viewing picture, playing music or video. |
| 8 | Previous | Go to the previous file while in reading ebook, viewing picture, playing music or video. |
| 9 | Power button | Turn on/off the device |
| 10 | Reset | Reset the device by inserting a small pin into the hole |
| 11 | USB port | Connect to the USB cable |
| 12 | Earphone Jack | Connect to the earphones |
| 13 | Micro SD card slot | Insert micro SD storage card |

3. Power On/Off the Device

- Press and hold the **Power Button** to turn on the device. The start-up screen will be displayed before entering the main menu on the **Home** screen.
- Press and hold the **Power Button** to turn off the device.
- Press the **Power Button** to enter sleep mode. Press the **Power Button** again to exit the mode.

4. Charging

- Connect the device to AC adaptor or the PC/Notebook for charging. Normally it takes approximately 3~4 hours to fully charge the device.
- Recharge the device as soon as possible when the battery is in low-power level shown as .

5. Using a Micro SD Card

- The device supports Micro SD card up to 32GB.
- To insert a Micro SD card, place the connector towards the device and the card label towards the rear side of the device.
- To remove a Micro SD card, gently press the edge of the card to release the safety lock and pull the card out of the slot.

Reading BOOKs

a book," thought Alice, "without pictures or conversations?"

So she was considering in her own mind (as well as she could, for the day made her feel very sleepy and stupid), whether the pleasure of making a daisy-chain would be worth the trouble of getting up and picking the daisies, when suddenly a White Rabbit with pink eyes ran close by her.

There was nothing so very remarkable in that, nor did Alice think it so very much out of the way to hear the Rabbit say to itself, "Oh dear! Oh dear! I shall be too late!" But when the Rabbit actually took a watch out of its waistcoat-pocket and looked at her feet, for she had never before seen a watch to take out of its pocket, or a watch to look at her feet, or a watch to pop down a large rabbit-hole, she was much alarmed, when she noticed that it was precisely her own pocket which the Rabbit had taken out of its waistcoat-pocket, and had been looking at for some time. This was very curious, and she looked down into the hole to see what she was doing, when she found herself suddenly looking at the Rabbit's face, which was now within a few inches of her own.

The rabbit-hole went straight down like a well, and Alice started to fall, but she had never before seen a watch to take out of its pocket, or a watch to look at her feet, or a watch to pop down a large rabbit-hole, she was much alarmed, when she noticed that it was precisely her own pocket which the Rabbit had taken out of its waistcoat-pocket, and had been looking at for some time. This was very curious, and she looked down into the hole to see what she was doing, when she found herself suddenly looking at the Rabbit's face, which was now within a few inches of her own.

Either the well was very deep, or she fell very slowly, for she had plenty of time, as she went down, to look about her. First, she tried to make out what she was coming to, but it was too dark to see anything; then she looked at the sides of the well and noticed that they were filled with cupboards and book-shelves; here and there she saw maps and pictures hung upon pegs. She took down a jar from one of the shelves as she passed. It was labeled "ORANGE MARMALADE," but, to her great disappointment, it was empty; she did not like to

Choose the desired book to read.
Press M button to pop up the menu.

1. Page up

Input the page number and jump to the desired page.

2. SaveMark

Save the current page as a book mark.

3. LoadMark

Load all the bookmarks saved in the current book. Totally 5 bookmarks can be shown.

4. DelMark

Choose to delete the bookmark.

5. Browser Mode

Choose Auto or Manual mode to read the book. Manual mode is default.

6. Font set

Set the font of the file. Default/ Arial/ Times New Roman and DroidSansFallback are available.

Note: Different book format may have different menu. Please refer to User Manual in the reader.

How to Get eBooks


1. Installing Adobe Digital Edition (ADE)

1. Please download Adobe Digital Edition (ADE) online at the website:
<http://www.adobe.com/products/digitaleditions>.
2. Install Adobe Digital Edition (ADE) on you PC/Notebook.
3. If you do not have an Adobe ID, create it by following the on-screen instructions.

2. Download eBooks from an online E-Book store to your PC/Notebook.

1. Authorize your PC/Notebook to download eBooks from an e-Book store.
2. Authorize the device to transfer and read downloaded eBooks on the device.
3. Download eBooks in Adobe PDF or EPUB formats to your PC/Notebook and transfer them to the device.

3. Transfer Content to the device connected with your PC/Notebook.

1. Connect the device to your PC/Notebook using the USB cable.
2. Select the content you want to transfer from your PC/Notebook.
3. Drag the content from the PC/Notebook to the device.
4. Please do not disconnect the USB cable during loading. It may cause malfunction of the device and files.
5. Left click on  to disconnect the device and PC/Notebook safely.

NOTE:

Content can also be transferred to a micro SD card on the device.