



PRESTIGIO NOBILE

e-Book Reader PER3474B

Table of Contents

Disclaimer	3
Introduction	3
Package Content	4
Getting Started	5
Charging the Reader	7
Power On/Off, Reset Device, Insert MicroSD	8
Main Menu	9
Reading History	10
Ebook	11
Music	13
Video	16
Radio	18
Record	19
Photo	20
Explorer	21
Settings	22
Game	24
Product Specification	25
Technical Support and Warranty Information	25
Copyright and Trademark Notice	26

Disclaimer

All the information, design and specifications contained in this manual were at the time of publication. However, as the product is under development and upgrading, the final device may have a slightly different appearance or modifications in functionality than presented in this manual.

Introduction

Prestigio Nobile PER3474B is an e-book reader with full color TFT display screen 17.8 cm (7") diagonal and resolution of 800*480.

PER3474B supports e-books encrypted with FB2, HTML, etc.

Support of 22 languages including English, Russian, Greek, Polish, German, etc.

Includes audio and video playback and a photo viewer.


4GB built in flash memory.

Inbuilt speakers.

Package Content

1. E-book Reader
2. USB cable
3. AC adapter
4. DC cable
5. Quick Start Guide in multiple languages
6. International warranty card

Getting Started

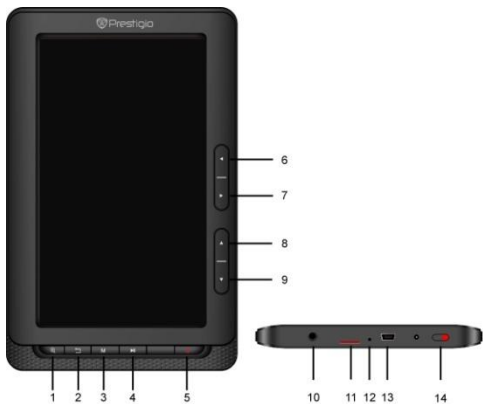

Getting Started



- | | | |
|-----------|---------------------------|---|
| 1 | Zoom in/out | Enlarge/reduce font size while reading and picture size while viewing pictures searching. |
| 2 | Back | Back to the previous page. Long press the button to go back main menu. |
| 3 | Menu | Pop up the menu and also OK function. |
| 4 | Play | Pause while playing music or video. explorer. |
| 5 | Power button | Turn on/off the device |
| 6 | Left | Same as UP button, but while reading PDF file, it only works to move to left if zoom in. |
| 7 | Right | Same as Down button, but while reading PDF file, it only works to move to right if zoom in. |
| 8 | Up | Go to the previous file while in reading ebook, viewing picture, playing music or video. |
| 9 | Down | Go to the next file while in reading ebook, viewing picture, playing music or video. |
| 10 | Earphone Jack | Connect to the earphones |
| 11 | Micro SD card slot | Insert micro SD storage card |
| 12 | MIC | For recording |
| 13 | USB port | Connect to the USB cable |
| 14 | ON/OFF | Main controller of power. Power button will only work when this button is ON. |

Getting Started

Charging the Reader

You need to charge the Reader prior to using it for the first time or when battery power is low.

Note: *It's recommended to charge the battery for 4 hours before the first time use. Normally it takes approximately 4–5 hours to fully charge the device.*

Recharge the device as soon as possible when the battery is in low-power level shown as .  icon appears once the battery is fully charged.

You can charge the Reader by:



- Inserting DC connector to the DC port on the device and connecting power adapter to wall socket for charging.
- Connecting the host PC USB port and the device with the included USB cable to start charging.

Note: *When charging through PC, you cannot operate the Reader. To operate the reader during charging, click the Safely Remove Hardware icon on your desktop with the Reader connected to PC. Click any button on the Reader to go from "USB Connection" screen.*


Do not play video while connecting to PC for charging. Power from USB port may not be enough to support charging.

Switch the Reader to stand-by mode to speed up the charging process.

Getting Started

Power Reader On and Off

- Slide switch ON and then press and hold the [Power] button for 3-5 seconds to turn on Reader - it will automatically enter the main menu on **Home** screen after the start-up screen.
- It may take a few moments for reader to turn on and load the content.
- If Reader does not turn on, charging is required.
- To turn off Reader, press and hold [Power] button for 3-4 seconds or slide switch OFF.

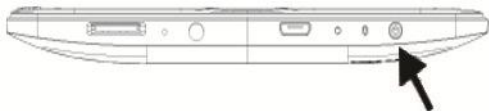

Restoring to Factory Default Settings

Reset the device by slide switch OFF when device fails to start up or function properly.

Using a micro SD Card (Not Included)



- Insert micro SD card into micro SD slot.

Main Menu

There are 3 sections on main menu. On the upper right there is time and date. On the upper left part there are **Reading History** and **Ebook**. On middle part there are 8 icons referring to different applications, including **Music**, **Video**, **Radio**, **Record**, **Photo**, **Explorer**, **Game** and **Settings**. Press the Direction buttons on the left to choose the desired application and then press M button to enter it.



Main Menu: Reading History



Reading History

Ebooks viewed in the past will be displayed on the screen.



- Press Up and Down buttons on the left to go to the previous or next book. Press Left and Right buttons on the left to go to the previous or next page of the list.
- Press M button to open a book and press M button again to get the submenu.
- 3/82 displayed under the ebook tile shows the total pages of this ebook are 82 and your last reading page is 3.
- 2012-6-7 displayed under the ebook tile shows your last reading time of this ebook.


Note: Files that were saved on the Micro SD card will not be displayed in **History** list if the Micro SD card is removed.

Main Menu: Ebook




Ebook

Nobile PER3474B supports most of popular e-book formats, including PDF, EPUB, FB2, PDB, TXT(ANSI/UNICODE code), HTML,RTF,WTXT and etc.

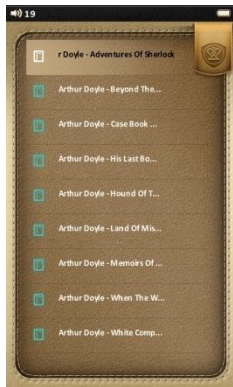

Press the Direction buttons on the left moving to Ebook. Then press M button to enter the ebook list. Press the Direction buttons on the left to get the previous or next page while reading.

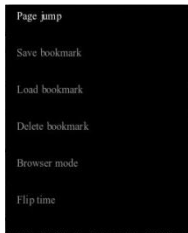

Main Menu: Ebook

Choose the desired book to start reading. Press M button to open the book and press again to popup the menu. Here below options in the menu.

Item	Description
Page jump	Press direction button left or right to move the place and press direction button up or down to change the numbers. Then press M button to jump to the desired page.
Save bookmark	Press M button to save the current page as a bookmark. Total 5 bookmarks can be saved.
Load bookmark	Press direction button up or down to choose the bookmark that saved. Then press M button to open the bookmark.
Delete bookmark	Press direction button up or down to choose the bookmark that saved. Then press M button to delete it.
Browser mode	Press direction button up or down to choose Auto flip or Manual flip . Then press M button to set it. When you press to choose Auto flip , press M button again to set flip time. Then it will automatically turning pages after the chosen time period if you already choose Auto flip mode to read.
Set Color	Press direction button up or down to choose the Color of characters displayed. There are Black, Blue, Green and Red available in settings.

Main Menu: Music



Music

Press the Direction buttons on the left moving to **Music** and then press M button to enter it. It supports MP3, WAV, FLAC, AAC, OGG, WMA (WMA lossless not supported) .



Note: *Music files saved on micro SD card are also displayed in the list.*

All music, Artist, Album, Genre, My favorites, Record, Directory List and Update media library are displayed.

Note: *If it is not the first time you open a music file, one more option Resume play will display on the first line. If now a music file is playing, the first play will be Current Play.*

Main Menu: Music

Item	Description
Resume play	Recover the last played music
All music	List of all tracks. Press Left and Right button to turn pages of the list. Press direction button Up and Down to move to the desired music.
Current Play	The current playing tracks.
Resume Play	The last played tracks.
Artist	The album list of artists.
Album	The track list of the album.
Genre	The artist list in the same genre.
My favorites	The favorite tracks list. On the all music list, press button Pause to add the desired music to favorites.
Record	The recorded files list. Play all recorded files from Record.
Directory list	Files list sorted by Flash and SD Card .
Updating media library	To update media library.

Main Menu: Music

Music Playback

Choose **All music** / **current music** / **Resume music**, **Artist**, **Album**, **Genre**, **My favorites**, or **Directory list** to play the music. Press **Record** to play the audio files recorded by PER3474B.

- Press Pause button to pause while playing and press it again to continue playing.



- Press direction button Left/Right to the previous/next music in the list.
- Press direction button Up/Down to increase/decrease volume.
- Press M button to popup sub menu. Repeat mode/ Play mode/ EQ sel/User EQ setup /Display are available.
- **Repeat mode**: Once, Repeat once, All once, All repeat, Intro are available.
- **Play mode** : In order, and Shuffle mode are available.
- **EQ sel** : Normal, Rock, POP, Classic, Bass, Jazz and User EQ are available.
- **User EQ setup** : To adjust the EQ and the set EQ can be chosen in the EQ sel section. Press direction button left/right to choose the setting options and press up/down button to adjust the

data.

- **Display** : choose to display the lyric or not.

Main Menu: Video



Video

Press the Direction buttons on the left moving to **Video** and then press M button to choose Video folder to enter the list. It supports 3GP, ASF, AVI, FLV, MOV, MP4, RM, RMVB(2mbps rmvb non -support real g2), VOB, WMV.



Main Menu: Video

On the playback screen, the following operations can be performed. The video orientation is set to **Horizontal** (left). (Default Settings)

1. Press Play button to pause while playing and press it again to continue playing.
2. Press direction button Up/Down to the previous/next video in the list.
3. Press direction button Left/Right to decrease /increase volume.
4. Press M button to popup sub menu. **Select time play**, **Full screen** and **Brightness** are available.
5. **Select time play** :Press direction button Up/Down to move the place and press direction button Left/Right to change the numbers. Then press M button to jump to the desired time. **HH** for hour, **MM** for minute.
6. **Full screen** : move to full screen and then press M button, there are three mode are available : Full screen, Normal and Original screen.
7. **Brightness** : Adjust the brightness and 5 levels are available.

Main Menu: Radio



Radio

FM radio is supported by PER3474B. Radio will work properly when plug in earphones. Press M button to enter submenu as below:



- **Search by hand:** Press Left/Right button to increase/ decrease 0.1MHz.
- **Auto search:** choose auto search and it will be 0.1MHz added each searching from 87.
- **Preset mode :** channels saved can be selected here. Choose preset mode and it will be saved Channel 1. Then press left/ right button turning to other channels in order.
- **Save channel :** 30 channels can be saved.
- **Delete channel:** delete the saved channel from the list.
- **Receive area:** China/ Japan/ USA/ Europe/ Campus Radio are available.
- **FM record:** record the FM program playing now.

Main Menu: Record



Record

Voice recorder is supported. Move to Recorder on HOME and press M button to enter it.



- **Play** : Press Play button to start, pause or stop recording.
- **Sub menu**: Press M button to get sub menu. You can set Quality and Volume of the recording you want. Low/High quality and 5 levels of volume are available.
Note: M button is not workable while recording, even if now is pause.
- **Save recording**: Press Play button to pause or stop while recording. Then press Back button. Message box will pop up to inform you whether to save the record. Choose Yes to save record file. You can find the this file in folder RECORD under Explorer.

Main Menu: Photo



Photo

The device supports only the following picture formats: JPEG, GIF, BMP and PNG. All other file formats will not be displayed.

- Press UP button to turn to the previous picture and press Down button to turn to the next picture.
- Press M button to open the picture to view.
- **Browser mode:** Press M button to popup the submenu. Press M button again to get Manual flip or times for Auto flip. 5 Sec, 10 Sec, 20 Sec can be set as auto flip time. All the pictures will be displayed automatically following the time you set.
- **Rotate** :Press Play button to rotate the picture to different directions.
- **Zoom** : Press **Zoom in/out**, to change the picture size. 3 levels are available.

Note: *Zoom in/out function only applies to .JPEG, .PNG and .BMP picture formats.*

Main Menu: Explorer



Explorer

Files in **Flash** or **micro SD Card** will be displayed under Explorer. Press M button to open all supported files from this directory.



Main Menu: Settings



Settings

In the **Settings** menu, you can configure the following settings.

Display Setting

- **Light time**

Set the backlight time by this section. There are choices 5seconds, 10seconds, 15seconds, 20seconds, 30seconds and Always on. Backlight will shut down after the time period you set. If always on is set, backlight will not shut down itself. Press any buttons to turn on the backlight. Default is 30 seconds.

- **Brightness**

Total 5 levels of brightness are available. Level one is the brightest and level seven is the darkest. Default is level 1.

System Setting

- **Restore default**

Restore the device to factory default settings. Reading history will also be deleted.

- **Erase activation record**

Erase activation record connecting to ADE.

- **Key Lock Time**

Set the key lock time and buttons shall not work unless short pressing the power button to unlock it. There are 10seconds, 30seconds, 5 minutes, 10 minutes and disable for choice. While key is locking, there is an icon of lock appearing next to battery icon on the upper right corner.

Main Menu: Settings

Language

Available options are English, Russian, Bulgarian, Czech, German, Estonian, Spanish, French, Greek, Croatian, Hungarian, Italian, Lithuanian, Latvian, Dutch, Polish, Romanian, Serbian, Swedish, Slovenian, Slovak, Ukrainian.

System Information

Display the technical information of the device.

Automatic shutdown time

Set the automatic shutdown time and device will shut down if no operation done during this period of time. 3 minutes, 5 minutes, 10 minutes, 15 minutes, 20 minutes and disable are available.

Date and time

Set the time of the device. Hour/Minute/Year/Month/Date are displayed as HH/MM/YY/MM/DD. Press direction buttons left or right to choose which to set, and press up or down to set increase or deduct one from current HH/MM/YY/MM/DD

Calendar

Display the calendar in year, month, date. Press Zoom in/out button to choose which to set, Year/Month or Date. If it is to set Year/Month, the icon before year will turn blue. Then press Left/Right button to decrease/increase one year, and press Up/Down button to decrease/increase one month. Press Zoom in/out button again to set date. Left/Right/Up/Down buttons are all workable now.

Calculator

Press the Direction buttons Left/Right/Up/Down to move to different options on the screen, and the square around the option turns yellow while moving to it. Press M button to choose it.

Font set

Choose the font of system characters. Default font, Arial, Times new roman and DroidSansFallback are available.

Main Menu: Game



Game

Tetris is preinstalled for you to have more fun. Press M button to start the game. When playing the game, press Left/Right button to move the squares; press M button to change the combination of the squares; press Down button to pull the squares dropping to the bottom rapidly. Press Play button to pause or recover while playing.

Specifications

Display	7" TFT
Resolution	800 x 480, 16:9
File Formats	Book: PDF, EPUB, FB2, TXT(ANSI/UNICODE Code), MOBI, HTML, PDB, RTF, WTXT
	Music: WMA, FLAC, AAC, OGG, WAV
	Video: WMV, RM, AVI, RMVB, 3GP, FLV, MP4, DAT, VOB, MPG, MPEG, MKV (2mbps rmvb non -support real g2.)
	Photo: JPEG, BMP, GIF
Storage Temperature	Humidity 5% ~ 95%, -20°C ~ 50°C
Operating Temperature	Humidity 5% ~ 95%, 0°C ~ 40°C
External Storage	micro SD card, up to 32GB
Power source	USB connected DC 5V
Battery	Built-in Lithium Battery, 2000 mAh
Dimensions	197.5 mm x 123 mm x 12.5mm (L x W x H)
Weight	286g

Technical Support and Warranty Information

Please refer to www.prestigio.com for technical support and included warranty card for warranty information.

Copyright and Trademark Notice

The content of this device, including logos, graphic, sounds, images, elements of design, software embodied in this product and documentation (manuals, illustrations, related documents, etc.) are the copyrighted works and could not be copied, modified or distributed in whole or in part without permission of the respective copyright holders.

The "Prestigio" trademark and "Prestigio" logos are owned by Prestigio Plaza Limited. Other trademarks are property of their lawful owners.

All pre-loaded software components and individual programs contained in the Product are licensed and not sold. They are licensed either under GNU General Public License or under the terms of the relevant software licence accompanying each particular software or component.

Those programs and software components that are distributed under the terms of GNU General Public License you could redistribute and modify them under the terms of the applicable GNU General Public License as published by the Free Software Foundation. For details of the license please see <http://www.gnu.org/licenses/>

Copyright © 2007 Free Software Foundation, Inc. <http://fsf.org/> 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA. The Source code for such programs will be provided by Prestigio Plaza Limited upon request.

This software is distributed in the hope that it will be useful, but PROVIDED ON "AS IS" BASIS, WITHOUT ANY WARRANTY, expressed or implied; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE, satisfactory quality (including errors-free or conformity to standards) or non-infringement of the third parties intellectual property rights. Neither Prestigio Plaza Limited nor any of the authors and distributors of the software and components included into this Product IS liable for any damages, including incidental or consequential damages, arising out of its use.