

Elenberg

МИНИ-ПЕЧЬ FT-8708

РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ

Полностью прочтите инструкцию


- Не прикасайтесь к горячим поверхностям, используйте ручки и кнопки.
- Во избежание удара током не допускайте попадания воды или других жидкостей на прибор или шнур питания.
- Будьте внимательны, когда прибор используется детьми или рядом с ними.
- Отключайте прибор от электросети, когда не используете его и перед чисткой. Дайте прибору остыть, перед тем как чистить его, класть или вынимать что-нибудь из него.
- Не используйте прибор с любой поломкой, обратитесь в сервисный центр для осуществления ремонта.
- Использование приспособлений, не одобренных производителем, может привести к ранениям.
- Не используйте вне помещения.
- Не позволяйте шнуру питания свисать со стола или прикасаться к горячим поверхностям.
- Не ставьте прибор рядом с источниками тепла (газовые, электрические плиты и т.п.).
- Будьте предельно осторожны, когда передвигаете прибор, содержащий горячее масло или другую жидкость.
- Не отключайте прибор от электросети, пока он работает.
- Чтобы включить прибор, вставьте штепсель в розетку, чтобы отключить прибор, не тяните за шнур питания, выньте штепсель из розетки.
- Используйте прибор только по прямому назначению.
- Не вставляйте в прибор посуду или пищу, превышающую его внутренние размеры. Это может привести к возгоранию или удару электрическим током.
- Возгорание может произойти, если прибор накрыт или прикасается к огнеопасному материалу (занавески, обои и т.п.). Расстояние между прибором и стенами должно превышать 2,5 см. Не оставляйте ни каких предметов сверху печи, когда она работает.
- Не позволяйте жиру скапливаться внутри прибора.
- При чистке прибора не используйте щетки с металлом – это может привести к удару электрическим током.
- Будьте очень осторожны, когда используя посуду не из металла или стека.
- Не храните ничего внутри печи.

- Не кладите фольгу на поднос или другие части духовки, это может привести к перегреву прибора.
- Не кладите следующие материалы в печь: бумага, картон или пластмасса.
- Не включайте прибор в помещении, в котором присутствуют взрывчатые или огнеопасные пары.
- Будьте очень осторожны, вынимая горячий поднос и избавляясь от горячего жира.
- Данный продукт не предназначен для коммерческого или индустриального использования.

ИСПОЛЬЗОВАНИЕ ПРИБОРА


Жарка

- Выберите время в соответствии с таблицей.
- Закройте дверцу и поверните ручку, чтобы установить нужное время.
- Печь автоматически отключится, когда истечет установленное время.

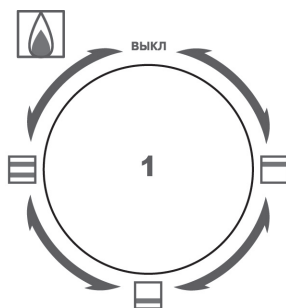

Выпекание

- Выберите время в соответствии с таблицей. При выпекании прогрейте печь в течение 5 минут. Затем положите в нее продукты и установите время, выбранное по таблице.
- Печь автоматически отключится, когда истечет установленное время.
- Когда таймер достигает завершения цикла, звучит колокольчик.
- Всегда используйте панель для выпекания.
- При приготовлении большого куска, Вы можете изменить положение подноса.

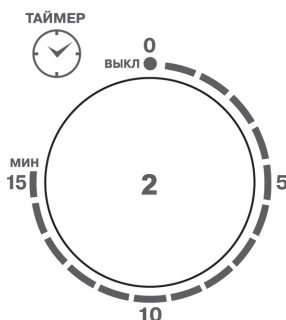

Чистка печи

- Перед чисткой убедитесь, что печь остыла и отключена от сети.
- Мыть можно только поддон, поднос и проволочную стойку.
- Не используйте чистящие средства, не одобренные этим руководством.
- Протирайте печь от крошек, брызг и лужиц после каждого использования и она будет

1. Ручка выбора мощности нагрева
2. Ручка таймера

все время чистая.

Предупреждение: Перед обработкой печи, всегда отключайте ее от электросети и давайте остыть.

- Протирайте смотровое окошко пенистой губкой. Перед началом использования печи протрите ее насухо. Не используйте спрей для чистки стекол.

КУЛИНАРНАЯ ТАБЛИЦА

Тосты, сдобы, рогалики	2.5~6 мин
Французский или чесночный хлеб	10~20 мин
Кусочки курицы	40~50 мин
Печеная картошка (до 4 шт.)	60~90 мин
Помидоры (до 6 половинок)	10~15 мин
Бекон	5~7 мин
Сосиски	15~20 мин
Гамбургеры	10~20 мин
Печень, говядина	15~20 мин

По истечении срока службы товара, необходимо обратиться в сервисный центр за консультацией по дальнейшей эксплуатации товара. В противном случае дальнейшая эксплуатация может повлечь невозможность нормального использования товара.

Срок службы данного изделия – 3 года с момента продажи



Изготовитель "ЭЛЕНБЕРГ ЛИМИТЕД", Великобритания
Адрес: 35 Бромптон Род, Кнайтсбридж Лондон СВ3 ИДЕ
Сделано в Китае. "ЭЛЕНБЕРГ ЭЛЕКТРИК КОМПАНИ ЛТД"
A08 P2-64 билдинг, Кеджинан 2 Род, С энд Т Индастри Парк,
Шензень, Гуандонг Провинс, Китай.

Elenberg

OVEN TOASTER FT-8708

INSTRUCTION MANUAL

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions

- Do not touch hot surfaces, always use handles and knobs.
- To protect against risk of electrical shock, do not immerse cord, plug or any non-removable parts of this oven in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on, cleaning or taking off parts.
- Do not operate any appliance with damaged in any manner, return the appliance to an authorized service facility for examination, repairs, electrical or any mechanical adjustment.
- The use of attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electrical burner or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Turn the unit off before inserting or removing plug from wall outlet.
- To use, plug cord into electrical outlet. To disconnect, grasp plug and remove from outlet. Do not pull by the cord.
- Do not use oven for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven. They may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls and the like when in operation. Keep this appliance at least one inch away from wall or rear of counter. Do not store any item on top of unit when in operation.
- Do not allow grease to build up inside this appliance.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts resulting in a risk of electric shock.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.
- Do not store any materials other than the manufacturer's recommended accessories in the oven when not in use.

- Do not cover crumb tray or any parts of the oven with metal foil. This will cause overheating of the oven.
- Do not place any of the following materials in the oven: paper, cardboard, or plastic.
- Do not operate in the presence of explosive and/or flammable fumes.
- Use extreme caution when removing tray or disposing of hot grease.
- This product is intended for household use only, not commercial or industrial use.

HOW TO USE

Toasting



- Select the time setting for toasting according to the chart.
- Close the door and set the timer. Turn the timer past 5 minutes and then set to the selected time in order to operate.
- The oven will automatically shut off when the timer cycle is completed.

Baking/Broiling

- Select the desired timer setting for baking or broiling according to the chart. When baking, preheat the oven for 5 minutes. Close the door and set the timer. Turn the timer past 5 minutes and then set to the selected time in order to operate.
- The oven will automatically shut off when the timer cycle is completed.
- A signal bell will ring when timer completes the cycle.
- Always use the baking/broiling pan when baking or broiling foods.
- When cooking large food, change position of tray to promote even cooking.

Cleaning your oven

- Before cleaning, be sure the oven is off, unplugged and cool.
- Only the wire rack, oven pan, and drip tray are dishwasher safe.
- Do not use any type of cleaning agent or

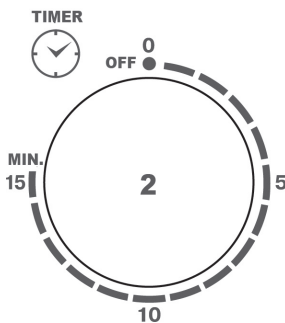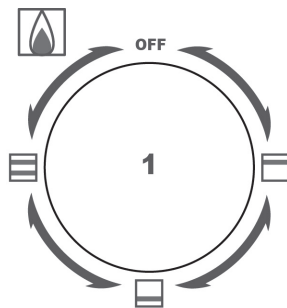

1. Heating power knob
2. Timer knob

cleaning pad unless recommended by this manual.

- The best way to keep your oven clean is to wipe away spills, splatters, and crumbs after each use.

Caution: before cleaning the inside or outside of your oven, always turn the oven off, unplug it, and let it cool.

- The glass door should be cleaned with a damp sudsy cloth. Dry thoroughly before using the oven. Do not use a spray glass cleaner.

COOKING GUIDE

Toast, muffins, bagels	2.5~6 min
French, garlic bread	10~20 min
Chicken pieces	40~50 min
Baked potato(1~4)	60~90 min
Tomatoes (1~6 halves)	10~15 min
Bacon	5~7 min
Frankfurters	15~20 min
Hamburgers	10~20 min
Liver, beef	15~20 min

Address to service center for consultation, when the service life of product has expired. Otherwise the further operation can entail impossibility of normal use of the product.

Service life of the given product – 3 years from the moment of sale

