



GOCLEVER
INFINITE INVENTION

GoClever TAB R73



USER'S MANUAL
INSTRUKCJA OBSŁUGI

www.goclever.com

Declaration of Conformity

Hereby GOCLEVER Technology declares that the product complies with the essential requirements and other provisions of Directive 199/5/WE.

Environmental Protection

The device is subject to the WEEE Directive 2002/96/EC. The symbol next to mean that the product must be disposed of separately and should be shipped to the appropriate collector. This allows you to limit pollution and the impact on human health.

Also like to inform that our company has the obligations under the Act on waste electronic equipment, including in his collection, treatment, recovery and recycling is supported by KARAT ELECTRO-RECYCLING Ltd. If you have any questions or concerns you can contact Karat call 056-623-80-91.

Responsibility

GOCLEVER Technology Company nor any of its licensors shall not be liable for any loss of data or profits, as well as for any other consequential or indirect damages resulting from the use of equipment brand, in any case and the maximum permitted by law. GOCLEVER Technology is not responsible for any problems related to the malfunctioning of the operating system and applications operating under its control.

Changes

GOCLEVER Technology reserves the right to revise this document and the specifications of the device, without notice to you. These features and images may vary depending on the services offered by the operator and software version of the device.

Before using

Remember that the battery is not charged. Opening or attempt to disassemble the outer casing of the device will void the warranty.

Google is a registered trademark, and Google Maps is a trademark of Google Inc.. in the United States and other countries. YouTube is a trademark of Google Inc..

GOCLEVER Technology Company is not liable for technical or editorial errors or for omissions contained herein is not responsible for incidental or consequential damages resulting from furnishing this material.

Information is presented in such a state in which you adopt them, and are not covered by any warranty. Subject to change without notice. GOCLEVER Technology Company reserves the right to change the contents of this document without prior notice. The manual describes basic functions of the device.

Security

Please refer to these guidelines. Failure to comply with them may cause danger to life or health or may be illegal. For further information, please read the entire podręcznikiem. Urządzenie was designed to operate from battery and mains supply with the charger. Using the device in a different way can be dangerous and will void the warranty.

Charging Battery

The unit should be connected only to a power source in accordance with the parameters set out in the specification. In case of doubt as to the type of power source required, consult an authorized service provider or local power company. If the product is powered from a battery or other sources, follow the instructions supplied with the product.

The impact of external factors and the electromagnetic field

The device is not waterproof. Make sure that it was always dry, protect from moisture. The device also must be protected against high and low temperatures, dust, sand, do not expose


it to shock, throw, as this may damage it or its components.

- Do not use the device in a damp and very high or low temperatures.
- Do not leave the device in the vehicle or in places where temperatures exceed 50 degrees Celsius.
- Do not use the equipment on board aircraft and in areas where it is not allowed to use equipment that may emit an electromagnetic field for example a hospital, petrol station, a warehouse of explosives violations of these rules may result in fire or explosion.
- Do not use the device while driving.
- Do not use the device near strong electromagnetic sources, such as microwave ovens, sound speakers, TV and radio.
- Use only original manufacturer-approved accessories, or accessories that do not contain metals.

Service and Repair

For repair use the authorized service and qualified staff, any attempt to repair yourself, or by unauthorized service will void the warranty.

Safety Precautions

- Do not subject the device to severe impact or drop it from heights.
- Do not use the device in extreme hot or cold, dusty or damp conditions. Do not expose it to direct sunlight.
- Avoid using the device near strong magnetic fields.
- Normal functioning of the product may be disturbed by ESD. If so, simply reset and restart the device following the instruction manual. During file transmission, please handle with care and operate in a static-free environment.
- Keep the device away from water and other liquids. In the event that water or other liquids enter the device, power off the product immediately and clean the device.
- Do not use chemicals to clean the device in order to avoid corrosion. Clean it with a dry cloth.
- Do not install this equipment in a confined space such as a book case or similar unit. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to environmental aspects of battery disposal.
- Use the apparatus in moderate climates.
- We are not responsible for damage or lost data caused by malfunction, misuse, modification of the device or battery replacement.
- Do not attempt to disassemble, repair or modify the product. This will invalidate the warranty.
- If the device will not be used for an extended period of time, please charge the battery at least once per month to maintain battery life.
- Charge the battery if:
 - a) The battery level icon displays  (An empty battery)
 - b) The device powers off automatically when restarted.
 - c) There is no response when pressing keys with keys unlocked and battery full.
- Do not interrupt the connection when the device is being formatted or transferring files. Otherwise, data may be corrupted or lost.
- When the device is used as a portable HD, please use only per the instructions. Otherwise, permanent data loss could occur.
- Please use and install data using the attachments/accessories provided and only according to the manufacturer's instruction.
- Please refer to the information on the bottom of the device for electrical and safety information before installing data or operating the device.
- To reduce the risk of fire or electric shock, do not expose this device to rain or moisture. The device should not be exposed to dripping or splashing. Never place objects filled with liquids, such as vases, on the device.
- There is danger of explosion if the battery is replaced incorrectly. Replace only


with the same or equivalent type.

- The battery (battery or batteries or battery pack) should not be exposed to excessive heat such as sunlight, fire or the like.
- Please follow responsible procedures for battery disposal.
- If the power adaptor disconnected from the device, the device will remain operable as long as the battery has sufficient charge.
- The power adaptor is a CLASS II apparatus with double insulation, and no external ground is provided.
- Safety symbol explanation:



- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- To reduce the risk of electric shock, do not remove the cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the device.



-  Correct Disposal of this product. This marking indicates that this product should not be disposed of with other household waste in the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To dispose of your used device, please use the return and collection systems available in your area or contact the retailer where the product was purchased. They can take this product for safe environmental recycling.
- This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.
- CE in which countries where the product may be used freely: Germany, UK, Italy , Spain, Belgium, Netherlands, Portugal, Greece, Ireland, Denmark, Luxembourg , Austria, Finland, Sweden, Norway and Iceland. In France, except the channel 10 through 13, law prohibits the use of other channels.

Listening Cautions

- This product respects the current regulations for limiting the output volume of consumer audio devices to a safe level. By listening to your device with headphones or earbuds at high volumes, you run the risk of permanent damage to your ears. Even if you get used to listening at high volumes and it seems normal to you, you still risk the possibility of damaging your hearing. Reduce the volume of your device to a reasonable level to avoid permanent hearing damage. If you hear ringing in your ears, reduce the volume or shut off your device. This device has been tested with the supplied earphones. In order to preserve your hearing, it is advised that you use only the following headphone models: the earphones supplied with your device, or any other headphones that respect the current regulations. Other types of headphones may produce higher volume levels. (At full power ,the prolonged listening of the walkman can damage the ear of the use)
- Maximum output voltage \leq 150mv
- Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.
- You should use extreme caution or temporarily discontinue use in potentially hazardous situations created by obstructed hearing.
- Even if your headphones or earphones are the open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.
- Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. What sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting the volume of your device at a safe level BEFORE your hearing adapts.
To establish a safe volume level:
 - a. Start your volume control at a low setting.
 - b. Slowly increase the sound until you can hear it comfortably and clearly, and without distortion. Once you have established a comfortable sound level, leave it there.

This manual may not reflect your actual device's operation. All information is subject to change without prior notification. Please follow your actual device's operational procedures.

Table of Content

Safety Precautions.....	4
Listening Cautions.....	6
Feature Summary.....	8
Accessories.....	8
Buttons & Ports.....	8
Charging Battery.....	9
Transferring Files.....	9
Turning On/Off.....	10
Home Screen.....	10
Unlocking the Screen.....	12
Touch Screen & Buttons Usage.....	12
Accessing Internet.....	13
Reading E-Books.....	15
Playing Music.....	17
Playing Video.....	19
Viewing Photos.....	20
Exploring Files.....	22
Sending/Receiving E-mails.....	25
Reading Office Document.....	27
Voice Recording.....	28
Camcorder/Camera.....	29
HDMI Output.....	29
Managing 3 rd Party Applications.....	29
Managing Tasks.....	30
System Settings.....	31
Troubleshooting.....	32
Specifications.....	32
FCC Statement.....	34

Feature Summary

Wi-Fi Connectivity

With the latest Wi-Fi technology, this device can connect you to the Internet wherever you are.

7.0" Touch Screen

Touch or slide your finger on the screen, the screen responds instantly.

Third-party Application Support

With the built-in Android™ OS, you can install a large number of third-party applications in this device.

Built-in G-sensor

The screen changes to landscape or portrait automatically when the device rotates.

Entertainment

You can enjoy music, movies, pictures and e-books with the Mobile Internet Tablet.


Office Document Reader

With the built-in OfficeSuite, you can read documents in Word, Excel, PPT etc.

Accessories

- USB Cable
- Power Adaptor
- Pouch

Buttons & Ports

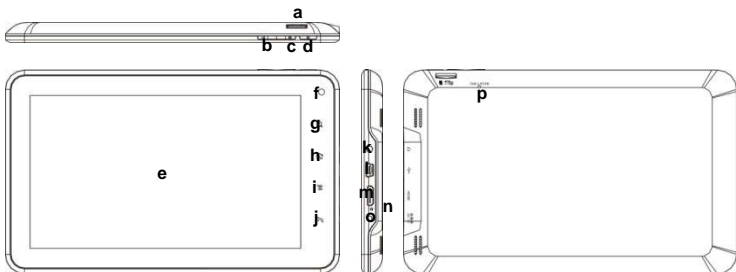

- a. Memory card slot**
- b. Volume down**
- c. Volume up**
- d. Power Button** – press and hold to turn on or off the device; briefly press to turn the screen on or off.
- e. Touch Screen**
- f. Camera Lens**
- g. Search** – Go to Google Search page
- h. Home** – Go to the Home Screen.
- i. Menu** – Display menu options.
- j. ESC** – Return
- k. Earphone Port** – connects to stereo earphones.
- l. USB Port** – connects to a computer through the USB cable.
- m. HDMI Interface**
- n. Charge indicator**
- o. DC-IN port** – connect to power adaptor
- p. Reset Pin hole/built-in microphone**

Charging Battery

The device has a built-in rechargeable battery. No extra battery installation is required. Just charge the device when it indicates low battery.

To charge the battery, connect the device to any standard wall outlet via the DC-IN port using the power adaptor. It takes about 5 hours to fully charge the battery. During charging, the indicator lights up in red. When the battery is fully charged, the charge indicator should light up in golden yellow.

Note:

- a. **You are strongly recommended to charge the battery immediately when the device indicates the battery is lower than 15%!**
- b. **Be sure to use the supplied power adaptor only!**
- c. You can operate the device even when it is being charged. But for extended battery life, it is suggested NOT to use the device when it is charging.
- d. It is recommended to charge the battery before you use the device for the first time.
- e. For maximum performance, lithium-ion batteries need to be used often. If you don't use the device often, be sure to recharge the battery at least once per month.

Transferring Files

Before reading or playing files, you need to transfer media files from a computer to the device.

- (1) Connect the device to a computer with the supplied USB cable.
- (2) Tap "Turn on USB storage" to connect the device to computer.
- (3) Once connected, two removable disk drives will show on your computer. One represents the internal memory of the device, and the other represents the memory card inserted into the device. Now you can copy files from or to these disk drives just as you would on your hard drive.
- (4) As you complete file transfer, choose "Turn off USB storage" to disconnect the device.
- (5) Remove the device from the computer safely.

Note:

- a. You can operate the device without removing the device from computer. During operation, you can drag from the top bar downwards to check the USB connection status, and then choose "USB Connected" to turn on the USB connection or choose "Turn off storage" to disconnect.



Drag downwards

- b. The pre-installed applications and Android OS occupy a considerable part of capacity – nearly more than 1GB, it is normal that you see huge difference between available memory space and total capacity.
-

Turning On/Off


To turn on the device, press and hold the **Power** button on the unit until you see the boot-up screen then release. It may take a few minutes to start up the system, please wait before you proceed.




To turn off the device, press and hold the **Power** button until you see the option "Power Off", tap on "Power Off" and then tap on "OK".

Tip: This device will sleep with the screen off if it stays inactive for a few seconds. You can briefly press the Power button to turn on the screen and wake it up.

Home Screen

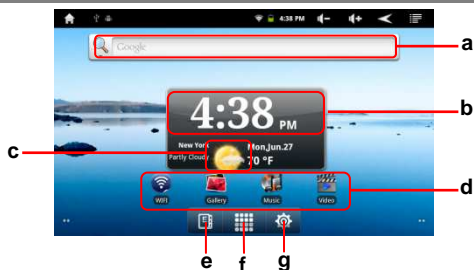


- Quick Internet Search** - You can input anything you wish you search on the searching bar (required WIFI connection)
- Current time
- Weather forecast – worldwide cities** (required Wi-Fi connection)
 - *You can change the city by tapping the weather forecast indicator.*
- Default shortcuts** - Tap on an icon to open the corresponding application. You can add or remove shortcuts, see "Customizing the Home Screen" on the next page.
- Shortcut to E-book Reader**
- Shortcut to Applications page**
- Shortcut to System Settings**

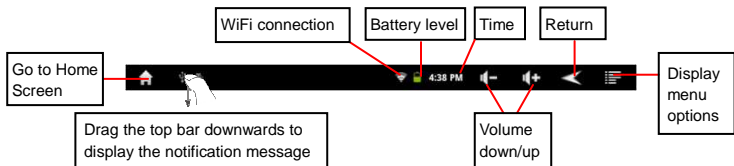



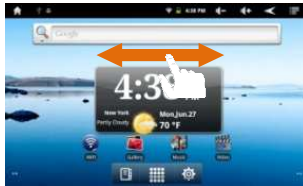


The extended Home Screen

Slide your finger horizontally on the screen to go to the left or right panel of the extended Home Screen.




Customizing the Home Screen

You can customize the Home Screen by adding/removing shortcuts and widgets, changing the wallpaper.


- To add a Home Screen item (shortcuts, widgets, folders etc.), tap on the Menu icon  and then select "Add" . You can also hold your finger on the screen and then choose an item from the list.
- You can add a folder onto the Home Screen by holding your finger on the screen and then choose Folders → New Folder. You can drag shortcuts or widgets to the folder.
To rename the folder, a) tap to open the folder, b) hold your finger on the title bar of the opened folder until the Rename window pops up, c) input folder name.
- To move a Home Screen item, hold your finger onto it until it is highlighted, then drag it to the desired location, and release it.
- To remove a Home Screen item, hold your finger onto it until it is highlighted, drag it to the recycle bin which turns from the **E-book Reader / Applications / Settings Tab**, and then release your finger.
- To change the wallpaper, from the Home Screen, tap on the Menu icon , a list of options appears. Tap on "Wallpaper" and then choose a picture as the desktop wallpaper.
- To change the System Settings, from the Home Screen, tap on the Menu icon , and then tap on "Settings" . Choose a category: "Wireless & Networks", "Sound & Display", "Date & Time", etc. For more information on the different settings, see the System Settings section.

Weather Forecast Setting

- You can choose a worldwide city you are interested in by tapping the weather forecast indicator. Locate the city by selecting the state where the city is and then selecting the city, or inputting the city name directly in the "Search City" field.
- You can change the default temperature unit by checking or unchecking the "Use Celsius" option.

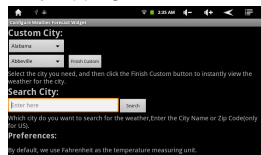


Applications Page

The device has many useful applications pre-installed. You can tap the Application Tab  to display them.




Tip: Holding your tap on an application icon can add a shortcut to the desktop (Home Screen).

Unlocking the Screen






The screen will lock itself after standing for a few seconds. You need to unlock the screen by dragging the lock icon  to the arrow direction before you continue to use the device.



Note: Dragging the  icon to the arrow direction will mute the sound.

Touch Screen & Buttons Usage

Main Touch Screen Actions

- In different applications, you can go back one level in the interface by tapping on the Back icon  (in the top right corner of the screen).
- Wherever you are in the interface, you can go back directly to the Home screen by tapping on the Home icon  (in the top left corner of the screen).
- In different applications, you can tap the **Menu** icon  to display menu options.
- While playing a video or song, you can pause/resume it by tapping on the Pause  / Play  icon.

Other Touch Screen Actions

- When watching a video or listening to music, you can tap on the progression bar to go directly to a different location in the video or song. You can also use your finger to drag the cursor in the progression bar to another location in the video or song.
- In different browsers (File, Music, Video, Photo, etc.), you can hold your finger on the screen and then drag up and down to scroll the file list up and down.
- In some browsers (File, Music, Video, Photo, Web etc.), you may hold your finger on an item to display options.



Accessing Internet

Your Internet Tablet features built-in Wi-Fi technology so that you can access the internet over Wi-Fi network.

First of all, you need to configure a Wi-Fi network. For the Wi-Fi configuration procedure to work, you need to be in a Wi-Fi zone that will allow you to connect to it. Every time your Internet Tablet is in range of a network that you have already configured once, it will attempt to make a connection.

Making WIFI Connection

- (1) In the Home screen, tap on the WiFi icon.
- (2) Tap on the "Wi-Fi" setting to turn on the Wi-Fi.
- (3) Tap the "Wi-Fi settings", your Internet Tablet will scan automatically for available WiFi networks and display them. The list of available networks shows all the wireless networks in range of your device.





Note:


- a) The available network list is constantly refreshed automatically.
 - b) When the Wi-Fi is enabled, your Internet Tablet will connect automatically to your configured networks when they are in range.
 - c) If your Internet Tablet finds a network that has never been configured, it will display a notification icon.
- (4) Tap on the network you want to connect to, enter the required network information (password) and then tap on "Connect". Your Internet Tablet will now attempt to establish a connection to that WiFi hot spot with the network parameters you entered. If the connection is successful, the message Connected to XXX will appear under the WIFI setting.


Advanced Connection

To manually scan for available Wi-Fi networks,

- In the "Wi-Fi settings" screen, tap the Menu icon , and then tap "Scan."
- If the Wi-Fi network you want to connect to does not appear in the list, scroll down the screen, then tap "Add a Wi-Fi network." Enter the required information, and then tap "Save."
- To set up IP address manually, tap the Menu icon , tap "Advanced" and then input all required network parameters ("Regulatory domain," "IP address," etc). You can obtain these parameters from the network administrator.

Launching the Web browser

Tap the Applications icon to display all applications, and then tap the Browser icon  to launch the Web browser.

If you are already connected to a network, the Web browser will simply open and you can start browsing the Web. To access a new website, tap the Menu icon  to display the menu, and then select "New Window" to input another address.

Note: Not all wireless networks offer access to the Internet. Some Wi-Fi networks only link several computers together, without any Internet connection.

Using the Virtual Keyboard

Tapping on any text input field can open the virtual board. With the virtual keyboard, you can enter a website address or any text required.


Indications



- Caps Lock
- Backspace
- Number and Characters /Letter Keyboard Switch
- Space
- Enter/Confirm

Selecting Input Method

If you have installed more than one input method in this device, you can select one by a) holding your tap in the text input field until the “Input method” box appear; b) choosing “Input Method” and then choosing your desired text input method.

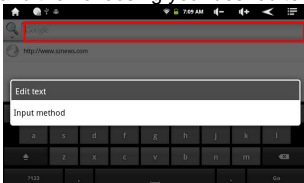





Inputting special characters

To input a special character like “à”, hold your finger on “a” to see a special character keyboard and then slide your finger to a character on the keyboard. Release your finger if you see two lines appear on the character.






Using the Web Browser

- You can scroll the screen up and down by tapping on the page and dragging it up or down (be careful not to tap a link until you are ready!).
- To open a link, simply tap it.
- You can open several web pages at a time, view them all at once on the screen by tapping  and then “Windows”, and then tap one of them to view it in full screen.

- To go back to the previous page that you browsed, tap the Back icon .
- To display the available menu items, tap the Menu icon .
- To go back directly to the Home screen, tap the Home icon .
- Depending on where you are in the web browser, holding down on an item will give you access to more options.
- To fill in a text field, tap in the field, then use the virtual keyboard to type in the required text.

Web Browser Menu Items

When you are viewing a page, you can tap the menu icon  to display the menu items.

New window	Allows you to open new windows.
Bookmarks	Will open the "Bookmarks" manager. You will see three tabs: "Bookmarks," "Most visited," and "History." "Bookmarks" shows you a list of bookmarks. Just tap one of them to open it in the current window. Holding down a bookmark will give you access to several options (you will be able to edit it, rename it, delete it, etc.). You can also use the Menu icon  which will allow you to bookmark the last-viewed page. "Most visited" and "History" allow you to access your "Most visited" sites and your visit history. In the "History" tab, the Menu icon  allows you to clear the history.
Refresh/ Stop	"Stop" will stop loading the web page, if it is currently loading. "Refresh" will refresh the current web page, if it has stopped loading.
Windows	When you have several windows currently opened, tap "Windows" to display them all at once on the screen. Just tap one of the small windows to view it in full screen, or tap the Close icon in the small window to close the window.
Forward	Will go to the next page that you browsed.
More	Will give you access to other options ("Find on page," "Select text," "Page info," "Downloads," "Settings" etc.).

Reading E-Books

Transfer E-books from Computer

Before reading, you need to transfer or download e-books to the device. You can copy e-books from your computer's local drive to the device by USB connection (see the "Transferring files" section mentioned before).

Note: Make sure your e-books are in format of PDF, EPUB, TXT, FB2, RTF or PDB supported by the device.

Start Reading

- (1) In the Home Screen, tap the E-book Reader shortcut to enter the e-book reader mode.
- (2) Slide your finger left and right on the “Book Shelf” to select an e-book.
- (3) Tap an e-book to start reading immediately.



History and My Library


You can tap “History” to view your reading history or tap “My Library” to enter the e-book library. “History” shows all of the e-books that you have read by date. “My Library” shows all of e-books stored in the device.




Note: E-book cover will show as defaulted cover by the device if the e-book has no cover data. That's why you see some e-book covers are the same.


Page Up/Down

When you are reading the e-book, you can slide your finger on the screen left and right to page up or down.

You can let the ebook page up and down automatically by: a) tapping the Men **Menu** icon  to display e-book settings; b) Tap “Auto Flip”; c) Selecting a flip interval time.

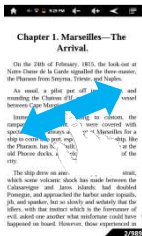


Increase Font Size

- (1) When you are reading, tap the **Menu** icon  to display e-book settings.
- (2) Tap “Font Size” to adjust the font size.
- (3) Tap a size that you want, and then tap “OK” to confirm.

Jump to a Page


You can directly go to a page that you have specified.

- (1) When you are reading, tap the **Menu** icon  to display e-book settings.

- (2) Tap "Go to".
- (3) Tap the page number input field to display the virtual keyboard.
- (4) Tap the numbers to input the page number.
- (5) Once you finish inputting the page number, tap "OK" to jump to the specified page.


Use Bookmarks

You can add, delete or load bookmarks on the page.

- (1) When you are reading, tap the **Menu** icon  to display e-book settings.
- (2) Tap "Bookmarks" to display a bookmark menu. Use the menu to add, delete or display bookmarks.

Show Outline of the e-book

You can view the outline of the e-book and then choose your desired chapter or section to read.


- (1) When you are reading, tap on the Menu icon  to display e-book settings.
- (2) Tap on "TOC" to display the outline of the e-book, and then tap the chapter that you want to read.

Playing Music



In the **Home Screen**, tap the Music icon to enter the music player mode. Optionally, you can tap the Applications shortcut to display all applications and then tap the Music icon to enter the music mode.



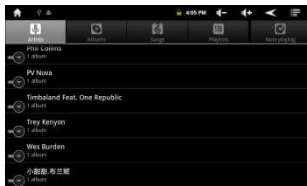


Music Library

You should enter the music library once you start the music player. The Music Library shows your music files sorted by categories (Artist, Album, etc.) if your music files contain these song information tags. If some of your music files do not contain information tags, they will be classified as (Unknown) in the Music Library.



When new music is copied to the device, the Music Library will be updated automatically.

- You can drag your finger up and down on the file list to scroll through the list.
- Tap a track to play a track.
- To return to the Home Screen, tap  / .

 Songs	List all music files.
 Artist	List music files by artist.
 Album	List music files by album.
 Playlist	List your favorite songs.
 Now Playing	Go to the Now Playing screen.

Music Library Menu


In the library, holding your finger on a track can display the following menu options.

Play – start playing the song


Add to playlist – add the song to playlist.

Delete – delete the song.

Search – search for information about the song.

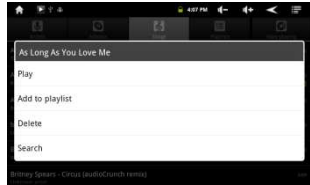

Shuffle Tracks











In the library, tap the Menu icon  to display options – Play all, Party shuffle and Shuffle all.


Play all – play tracks in normal order.

Party shuffle – is an automatically generated playlist. It will pick songs in a random order making sure that songs do not repeat too often.


Shuffle all – shuffle all tracks stored in the device.

Playback Screen

- To pause or resume the playback, tap on the Pause  / Play  icon.
- To play the previous/next song, tap on  / .
- You can tap on the progression bar to go directly to a different location in the song. You can also drag the cursor in the progression bar to another location in the song.
- Tap  to adjust the volume.
- To preview songs on the list, tap , and then tap a song for preview.
- To change the repeat mode, tap .
- To display menu options, tap .
- Tapping continuously on the track title can search for information about the track on the Internet.
- To go back directly to the Home screen, tap on the Home icon  or Return icon .

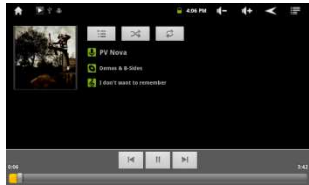


Playing Menu

When the track is playing, you can tap the Menu icon  to display the following menu options.

Library – go back to the music library.

Party shuffle – is an automatically generated playlist. It will pick songs in a random order making sure that songs do not repeat too often.

Add to playlist – add the track to the playlist.

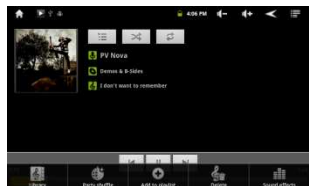

Delete – delete the song.

Sound effects – change equalizer mode.

Playlist

The playlist is a list of audio tracks that you have added manually.


To play the playlist,

(1) In the Music Library, tap the Playlist icon



to display all the playlist. All songs that you have added are listed.

(2) Tap a song to start playing.

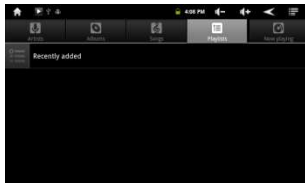



Playing Video

In the **Home Screen**, tap the Video Player icon to enter the video player mode.


Optionally, you can tap the Applications shortcut to display all applications and then tap the Video Player icon to enter the video mode.

Navigate through Video Files





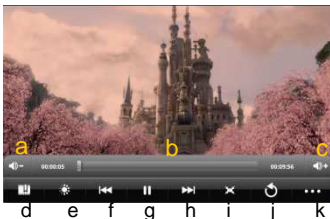

You should see the video list when you enter the video player.

- You can drag your finger up and down on the video list to scroll the video list up and down.
- Tap a video to start playing.
- You can go back directly to the Home screen by tapping on the Return icon  or Home icon .






Playback Screen



- a. VOL-
- b. Progression bar
- c. VOL+
- d. Bookmark
- e. Brightness
- f. Previous video/Rewind
- g. Play/Pause
- h. Next video / Fast forward
- i. View Mode
- j. Exit
- k. Video settings


- Tap on the  /  icon to pause/resume the video.
- Tap on  to display the menu items.
- Tap on the progression bar to go directly to a different location in the video. You can also use your finger to drag the cursor in the progression bar to another location in the video.
- Tap on  /  to adjust the volume.
- Tap on  to set a bookmark at the current spot in the video. Please note only one bookmark can be set for one video, and the new bookmark should cover the

old one. To resume playing a video from the bookmark, go to the Home Screen, enter the Video Player, and tap on the bookmarked video. You should be prompted to “Play from beginning” and “Play from bookmark”. Select “Play from bookmark”. In default, the video plays from beginning. To remove the bookmark, tap on “...” to display the menu, and then choose “Delete Bookmark”.

- Tap on  to adjust the brightness of screen.
- Tap on  /  to play the previous or next video.
- Tap on  to change the aspect ratio of screen.
- Tap on  to stop playing and return the video list.

Note: Some video files may not be played correctly with the device. Refer to the Technical Specifications at the end of the manual, and make sure the video resolution, encoding format or file type is supported.

Video Playback Settings

Tap on the  icon to display the video settings.

Delete Bookmark and Play from beginning	Delete bookmark and play from beginning.
Delete Bookmark	Delete the video bookmark.
Play Mode	Single – plays the current video and then stops after playing. Repeat One – Repeat the current video. Repeat All – Repeat all videos.
Help	Get instructions for playing video.
Return	Exit from the menu.




Viewing Photos


In the **Home Screen**, tap the **Gallery** icon to enter the photo viewer mode. Optionally, you can tap the Applications shortcut to display all applications and then tap the **Gallery** icon to enter the photo mode.

Viewing Photo

- (1) Folders containing photos should be listed once you enter the Gallery. Tap a folder to open it.



- (2) Photos in the open folder are listed in thumbnails. You can:
 - Slide your finger on the screen or tap   to view thumbnails.
 - Tap the Thumbnail/Group toggle button  to display photo thumbnails or group photos by date.


- Tap  to take picture into the gallery.
- (3) Tap a photo thumbnail to view the photo in full screen.




- (4) To display the previous/next picture, slide your finger on the screen horizontally.




- (5) To zoom in or out the picture, pinch your finger on the picture.

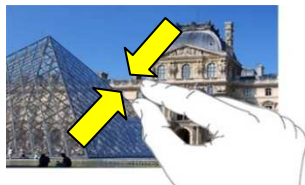


Using the Menu

When you are viewing the picture, you can tap on the screen or the Menu icon  to show a floating menu.

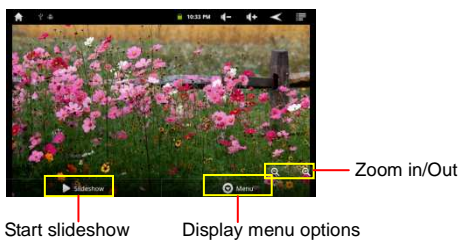

Tapping "Menu" can display other menu options.

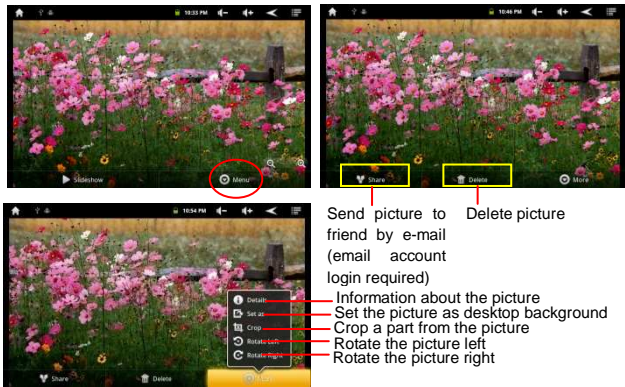

Slide Show

To start an automatic slideshow, tap on the screen to show a floating menu, and then tap the Slideshow menu on the toolbar. To stop the slideshow, tap the screen.




Exploring Files

You can explore files and folders with the Explorer and Astro application. In the Home Screen, tap the Applications shortcut to display all applications and then tap the Explorer icon or ASTRO to enter the file explorer mode.







Using the Explorer

Navigate through Files and Folders

- You can drag your finger up and down to scroll the file list up and down.
- To open a file or folder, tap the file/folder.
- Tap the menu icon , you can manage the applications (see details in the "Managing 3rd party Applications" section).
- You can go back or forward one level in the interface by tapping on the Back icon  or Next icon .



- You can go back one level in the directory by tapping on the LevelUp button .
- Wherever you are in the interface, you can go back directly to the Home screen by tapping on the Return icon  or Home icon .
- Tap the Home icon  to go to the root directory.

Using the Toolbar

You can use the toolbar to navigate through your device's internal memory/ memory card and delete or copy files.


Tapping on the grey area can hide/display the toolbar.



Sliding your finger on the toolbar can scroll through all tools.

Home	Go to the Home Screen.
LevelUp	Go back one level in the directory.
Multi	Select more than one file.
Editor	Copy, delete, move, paste or rename the file or folder.
Back	Go back one level in the interface.
Next	Go forward one level in the interface.

Copy/Move Files and Folders

- (1) In the file list, scroll up and down by sliding your finger to select the file/folder that you want to copy or move.
- (2) Hold the selected file/folder until a pop-up menu appears.
- (3) Select "Copy" or "Move" from the pop-up menu.
- (4) Navigate to the location where you wish to copy or move the file/folder to.
- (5) Select the Editor icon  from the toolbar and then choose "Paste."



Delete Files and Folders



- (1) In the file list, scroll up and down the list by sliding finger to select the file/folder that you want to delete.
- (2) Hold the selected file/folder until a pop-up menu appears.
- (3) Select "Delete" from the pop-up menu, then select "Delete" to confirm or "Cancel" to quit.

Rename Files and Folders

- (1) In the file list, scroll up and down the list by sliding finger to select the file/folder that you want to rename.
- (2) Hold the selected file/folder until a pop-up menu appears.
- (3) Select "Rename" from the pop-up menu.
- (4) Tap the input field to display the virtual keyboard, and then choose letters from the virtual keyboard to rename the file/folders.
- (5) Tap "OK" to confirm the new name.








Select Multiple Items


You can select more than one file or folder together.

- (1) In the top toolbar, tap the Multi icon .
- (2) Tap the files/folders you want to choose. The file/folder name turns red when selected. (To deselect the file/folder, tap it again.)
- (3) Once you finished selection, you can delete, copy or move the selected files by tapping on the Editor icon .

Using the ASTRO

Navigate through Files and Folders

- You can drag your finger up and down to scroll the file list up and down.
- To open a file or folder, tap the file/folder.
- Tap the menu icon , you can manage the applications (see details in the “Managing 3rd party Applications” section).
- You can go back or forward one level in the interface by tapping on the **Back** icon  or **Next** icon .
- You can go back one level in the directory by tapping on the LevelUp button .
- Wherever you are in the interface, you can go back directly to the Home screen by tapping on the Return icon  or Home icon .
- Tap the Home icon  to go to the root directory.

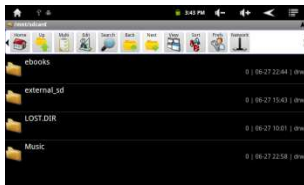

Using the Toolbar

You can use the toolbar to navigate through your device's internal memory/ memory card and delete or copy files.




Tapping on the grey area can hide/display the toolbar.





Sliding your finger on the toolbar can scroll through all tools.

Home	Go to the Home Screen.
Up	Go back one level in the directory.
Multi	Select more than one file.
Edit	Copy, delete, move, paste or rename the file or folder.
Search	Search for a specific file or folder
Back	Go back one level in the interface.
Next	Go forward one level in the interface.
View	Display files and folders in list or icons.
Sort	Sort files and folders by name, date, size or file type.
Prefs	Preferences for the ASTRO
Network	Enable the Wi-Fi network or Bluetooth (if available).



Copy/Move Files and Folders


- (1) Navigate through the file/folder and locate the file/folder you want.
- (2) Tap the Multi icon  and then tap the file(s) /folder(s) that you want. You can select multiple items by tapping. To deselect the item(s), tap the Cancel icon .
- (3) Select "Copy" or "Move" from the pop-up menu.
- (4) Navigate to the location where you wish to copy or move the file/folder to.
- (5) Select the Edit icon  from the toolbar and then choose "Paste."

Delete Files and Folders

- (1) Navigate through the file/folder and locate the file/folder you want.
- (2) Tap the Multi icon  and then tap the file(s) /folder(s) that you want. You can select multiple items by tapping. To deselect the item(s), tap the Cancel icon .
- (3) Select "Delete" from the pop-up menu and then select "Delete" to confirm.

Compress Files/Folder with Zip

- (1) Navigate through the file/folder and locate the file/folder you want.
- (2) Tap the Multi icon  and then tap the file(s) /folder(s) that you want. You can select multiple items by tapping. To deselect the item(s), tap the Cancel icon .
- (3) Select "Zip" from the pop-up menu.
- (4) Enter a name for the zip file and then tap "Create".

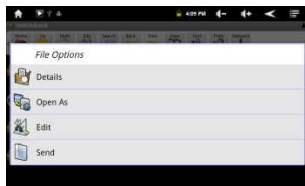

File Options

You can hold your finger on an item to display the following options:

Details – file information

Open As – open the file with another application.

Edit – copy, delete, move, zip the file

Send – send the file by e-mail (email account login required.)

Set As – set the file as desktop

Sending/Receiving E-mails

This device has an E-mail application pre-installed. You can send or receive e-mails from the Internet at any time with this device. Make sure you have an Internet connection before using the email service.

In the Home Screen, tap the Applications shortcut to display all applications and then tap the Email icon to launch the e-mail application.

Setup Email Account

First you need to setup an E-mail account for receiving or sending emails.

- (1) Start up the email application by tapping the **Email** application icon and you are prompted to setup an account.

- (2) Input your email address and login password. You can set the account as default by selecting the option “Send email from this account by default”.
- (3) Tap “Manual Setup” to set the email server information.
- (4) Choose the server type from POP3, IMAP or Exchange for incoming emails. To know what type of your email server is, you can consult the service provider, network administrator or search for information in the Internet.
- (5) Input required information (server, port etc.). You can obtain the information from the service provider, network administrator or the Internet.
- (6) Choose the server type for outgoing emails, and input required server information.
- (7) Click “Next” to continue. Your Internet Tablet will check the server settings. When it prompts you that “Your account is set up, and email is on its way”, your account is set up successfully.
- (8) Input your name and then tap on “Done” to finish.





Note: If you have more than one account, every time when you start up the email application, you enter the default email account.

Manage Accounts


You can setup more than one account and manage these accounts by checking information about the account, adding another account or deleting an account.

Add another Account


Following these steps to add another account if you want.

- (1) Launch the email application and then tap on the Menu icon  to display the menu item. Choose “Accounts” to display accounts.
- (2) Tap on the Menu icon  to display the menu item, and then choose “Add account”.
- (3) Follow the steps of setting up a Email Account to add an account.

Delete an Email Account

- (1) When you are in the email box, tap on the Menu icon  to display the menu items.
- (2) Tap on “Accounts” to display all email accounts.
- (3) Hold your tap on the account that you want to delete until a menu pop up.
- (4) Tap on “Remove Account” , and then tap on “OK” to confirm.

Check the Account Setting


- (1) When you are in the email box, tap on the Menu icon  to display the menu items.
- (2) Tap on “Accounts” to display all email accounts.
- (3) Hold your tap on the account that you want to check until a menu pop up.
- (4) Tap “Account settings” , and then you should see all setting information about the account. You can edit these settings as you want.

View Emails

You should enter your mailbox when you start up the email application.

- In the mailbox, you can slide your finger up and down to scroll through the email list.
- Tap on an email to open it.
- Holding your tap on the email can display a menu. With the menu, you can open, reply, forward or delete the email.

Email Menu Items

In the email list, tap on the Menu icon  to display the menu.

Refresh	Refresh the emails.
Compose	Compose a new email.
Folders	Go back to email box.
Accounts	View all email accounts.
Account Settings	Check your account settings.


Reading Office Document

The device provides support to Microsoft Office document with its built-in OfficeSuite application. You can read documents in Word, Excel or PPT etc.


- (1) Copy Office documents to the device by USB connection.
- (2) Launch the OfficeSuite application.




- (3) Locate an Office document by navigation. (The following illustrations show how to select a document from the internal memory.)

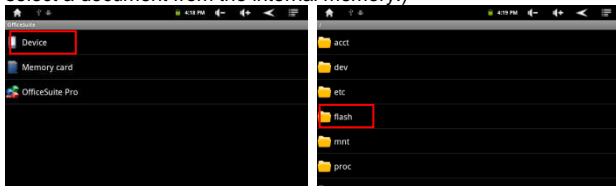

- (4) Tap the document to open it. On the opening page, you can slide your finger up and down to turn over the page.

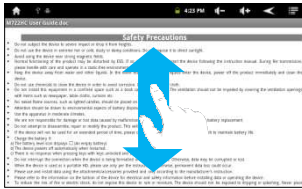

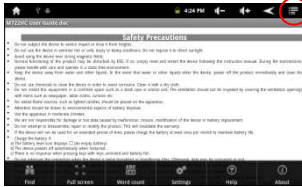


- (5) You can tap the Menu icon to display menu options. With these options, you can search for specific texts or count words in the document.



Voice Recording

● Record


- (1) In the Home Screen, tap on the Application Tap to reveal all applications.
- (2) Tap on the “Sound Recorder” icon to enter the recorder mode.
- (3) Tap on the “●” icon to start recording.
- (4) Tap on the “■” icon to stop recording.
- (5) Tap  to preview the recording if you want to.
- (6) Tap on “Use this recording” and then use the Audio Player to play the recording. To discard the recording, tap on “Discard”.
- (7) Tap on  to go back to the Home Screen.

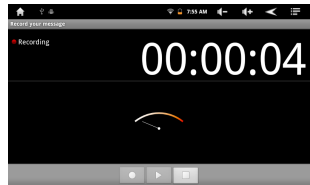

● Play Recording



- (1) Enter the music library by choosing “Music” application.
- (2) Tap “Playlist” to show My Recording list.
- (3) Tap “My Recording” to display all recording files.
- (4) Tap a recording to start playing.

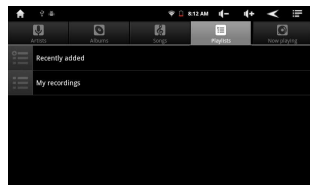
Optionally, you can locate the recording file with the explorer, and then tap it to start playing.



Camcorder/Camera


The device features built-in camera which allows you make video clips or take photos. Tap on the **Application Tab** to display applications, and then select “**Camcorder**”/“**Camera**” to enter the VCR/Photography mode.

- To start making video clips, tap on the Start/Stop button  to start video recording.
- Tap on the Start/Stop button  again to stop video recording or photographing.

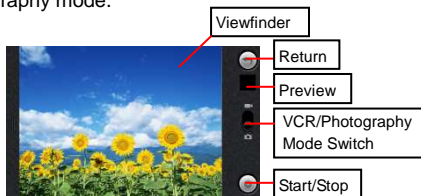

- The video clip / photo can be previewed in the Preview Window.
- To play the video clip that you have made, enter the Video Player, and then tap the video.
- To view the photo that you have taken, enter the Photo Viewer mode, and then tap the photo.

HDMI Output

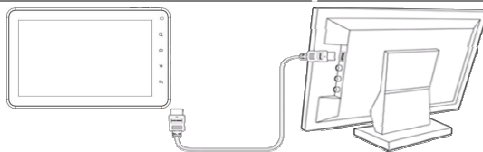

The device features a HDMI interface with which you can connect the device to digital audio devices, computer monitors or digital televisions. HDMI connection can deliver high-definition audio and video quality.


To use the HDMI function on digital televisions,

- (1) Make sure the visual device like digital television that the device connects has a HDMI interface also.
- (2) Turn on the digital television, and switch its mode to HDMI.
- (3) Connect the HDMI cable to the HDMI interface of the device and the digital television.
- (4) Turn on the Internet Tablet and enjoy the sharpest image quality on the wide screen of television.

Managing 3rd Party Applications

Your Internet Tablet provides support to many useful third-party applications. You can purchase the applications to add more functions to your device. They are available online at the Internet or directly on your product.



Pre-installed Applications

The device has pre-installed applications when it was manufactured. You can see them by tapping the Applications icon . They are video player, audio player, browser, alarm clock, calculator etc.

Install Applications

You can install applications manually following these steps:

- (1) Download the installation file directly from the built-in application library (e.g. SLIDEME) or Internet. Make sure the file is in format of .apk which is supported by your Internet Tablet system.
- (2) Copy the installation file to your Internet Tablet by USB connection.
- (3) Turn on your Internet Tablet and locate the installation file with the Explorer.
- (4) Tap the installation file and follow the on-screen instructions to install the application. If the installation was blocked by the following message, tap “Setting” and then check the “Unknown Source” so that the installation can proceed.

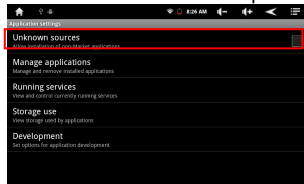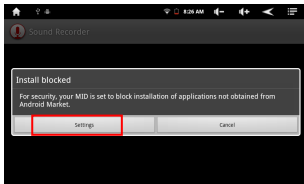

- (5) Once the application is installed successfully, you can find it in the application tab.

Uninstall Applications

- (1) Tap the **Settings** shortcut in the Home Screen to display all system settings.
- (2) Select “Applications”.
- (3) Select “Manage Applications”.
- (4) Tab on the application that you want to uninstall.
- (5) Tab on “Uninstall” to uninstall the application.


Note:

- You cannot uninstall the pre-installed applications.
- Some of the applications developed for Android mobile might not run properly in the Internet Tablet. Please consult the respective software developer for further information.

Managing Tasks

Your Internet Tablet can handle multiple tasks at the same time. For example, you can view photos while listening to music. Multitasking is helpful but inefficient if too many tasks are running. In order to save system memory and enhance system performance, you can end some tasks that you don't use at the moment.

(1) Tap “Advanced Task Killer” application.

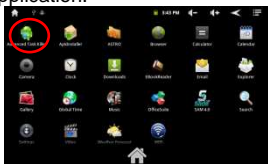



(2) Tap the task that you want to end.



(3) Tap “KILL selected apps” to end the task.

System Settings

In the Home screen, tap “Settings” and choose a category: “Wireless & Networks,” “Sound & Display,” “Date & Time,” etc.

- When a down arrow appears on the right of a parameter, this means that this setting includes sub-parameters. Tap it to display the list of sub-parameters.
- When a check box appears on the right of a parameter, tap it to enable or disable this option.
- When it is possible, you can use your finger to scroll the screen up and down to reveal settings that you don’t initially see.
- When you have finished adjusting your settings, tap the Back icon  to go back to the list of settings, or tap the Home icon  to go directly to the Home screen. Your settings are saved instantly.

Wireless & networks	Wi-Fi – tap on this line to enable or disable the Wi-Fi connection. Wi-Fi settings – allows you to set up and manage your Wi-Fi networks.
Sound	Silent Mode – mute sound except of media and alarm. Volume – volume level for notifications. Notification Ringtone – Set your default notification ringtone. Audible selection – enables/disables the touchscreen click sound. Screen lock sounds – enable/disable sound when locking or unlocking the screen.
Display	Brightness – allows you to adjust the brightness of the screen. Auto-rotate screen – switch the screen orientation automatically when the device rotates. Animation – enables/disables the display of animations when opening and closing applications. Screen timeout – allows you to adjust the delay before the screen automatically turns off and locks itself. To turn the screen back on, press the Power button once, and press it again to unlock the screen.
Location & Security	This screen gives you the possibility to allow certain Android™ applications to determine your current location. You can also define a screen unlock pattern and other security parameters.
Applications	This screen allows you to manage your Android™ applications. You can view information about all the applications installed on your device.
Privacy	This setting allows you back up or restore your system settings or data.

Storage	This setting allows you un-mount the SD card or check SD card and internal storage space.
Language & keyboard	Set your preferred language and region, and configure text settings for faster and more accurate text input.
Date & Time	This setting allows you set up the date, time, time zone and formats.
Update Media Library	Update the media library of your Internet Tablet manually.
About Device	Display information about your Internet Tablet system.

Troubleshooting

Reset this device

- In the event that the device freezes, you can force the device to shut down by holding the **Power** button for 15 seconds.
- If the **Power** button does not reset your device, use the “pinhole reset” button, located on the back the device.

Specifications

Item		Description
CPU		Based on Cortex-A8 Main CPU frequency: 1GHz
DDR		2X256MB
Built-in operating system		Android OS 2.3
Hardware		IBM PC or compatible PC, Note-book or Macintosh with USB port
Internal Memory		2GB, 4GB, 8GB, 16GB(optional)
Memory Card type		MicroSD card: 1GB, 2GB, 4GB (SDHC), 8GB(SDHC), 16GB(SDHC)
Operation System		Windows2000/XP/Vista/windows 7/Linux2.4/ MAC OS 10.6.7 above
Interface		USB2.0 High speed
		Micro SD card slot (compatible SDHC)
		3.5mm Earphone port
		HDMI Interface
Connection Agreement		WiFi (802.11 b/g/n)
G-sensor		Support 360 rotation
E-Book	File Format	PDF/EPUB/TXT/FB2/PDB/RTF
	Coding Format	PDF / EPUB Format: .Open. TXT / FB2/PDB/RTF Format: .Open
Photo Format		JPEG(Baseline) :96*32pixels to 8000*8000 pixels
		BMP
		GIF (Static)
		PNG
Audio	File Format	MP3/WAV/OGG/FLAC/APE/AAC
	Coding Format	MP3 (MPEG1/2/2.5 Audio Layer 1/2/3): 8~48KHZ/8~320Kbps,CBR and VBR WAV (MS-ADPCM, IMA-ADPCM, PCM): 8~48KHZ

		WAV (MS-ADPCM, IMA-ADPCM, PCM): 8 ~ 48KHZ	
		OGG (Q1- Q10): 8 ~ 48KHZ	
		FLAC(Compress Level 0~8): 8 ~ 48KHZ	
		APE (Version 3.95,3.97,3.98,3.99,normal and fast) : 8 ~ 48KHZ	
		AAC(ADIF, ATDS Header AAC-LC and AAC-HE): 8 ~ 48KHZ	
Video	File Format	AVI, 3GP, MP4, RM, RMVB, FLV, MKV, MOV, VOB, DAT, WMV	
	Coding Format	AVI(MPEG4,XVID,DIVX3/4/5/6, MS MPEG4 V3)	1920*1088pixels/30FPS/38.4Mbps (Max.) Audio Codec: MP2/MP3/AC3/AAC/PCM/DTS
		3GP/MP4(H.264,H.263, MPEG4,XVID,DIVX3/4/5/6, MS MPEG4 V3)	MPEG4,XVID,DIVX3/4/5/6: 1920*1088pixels/30FPS/38.4Mbps (Max.) H.264: 1920*1088pixels/30FPS/20Mbps(Max.) Audio Codec: MP2/MP3/AC3/AAC/PCM
		RM/RMVB(Real video 8/9)	1920*1088pixels/30FPS/38.4Mbps (Max.) Audio Codec: Cook/AAC
		FLV(Sorenson Spark)	1920*1088pixels/30FPS/38.4Mbps (Max.) Audio Codec: MP3
		MKV(H.264,MPEG4,XVID,DIVX3/4/5/6,MS MPEG4 V3)	Audio Codec: MP2/MP3/AC3/AAC/PCM MPEG4,XVID,DIVX3/4/5/6:1920*1088 pixels /30FPS(Max.) H.264: 1920*1088pixels/30FPS//57.2Mbps (Max.)
		MOV(H.264, H.263,MPEG4,XVID,DIVX3/4/5/6, MS MPEG4 V3)	MPEG4,XVID,DIVX3/4/5/6, MS MPEG4 V3: 1920*1088 pixels /30FPS/38.4Mbps (Max.) H.264: 1920*1088pixels/30FPS/20Mbps(Max.) Audio Codec: MP2/MP3/AC3/AAC/AMR
		MPG/DAT/VOB(MPEG1/2)	1920*1088pixels/30FPS/80Mbps (Max.) Audio Codec: MP2/MP3
		Read speed	8 ~ 10 MB/S (MLC flash)
	Write speed	3.0 ~ 4.0 MB/S (MLC flash)	
Battery Charge Time	About 5 Hours		
Battery Life	About 7 hours of music playback; About 6 hours of video playback; About 6 hours of web browsing.		
Display	7.0-inch TFT LCD, Touchpad (capacitive touch pad), 800X480 pixels.		
SNR	>=80dB		
Frequency Response Range	20Hz—20KHz		
Power Supply	Rechargeable lithium-ion polymer battery; AC Adapter: AC Input 100-240V ~ 50/60Hz, DC Output 5V/2A		
Storage Temp.	-20 ~ +65°C		
Ambient Temp.	0 ~ +50°C		

Operation Relative Humidity	20% ~ 90% (40°C)
Storage Relative Humidity	20% ~ 93% (40°C)

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void our authority to operate this equipment.

USA:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Canada:

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

FCC RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Deklaracja zgodności

Niniejszym GOCLEVER Technology oświadcza iż produkt jest zgodny z zasadniczymi wymogami oraz pozostałymi postanowieniami Dyrektywy 199/5/WE.

Ochrona środowiska

Urządzenie podlega dyrektywie WEEE 2002/96/EC. Symbol obok oznacza, że produkt musi być utylizowany oddzielnie i powinien być dostarczony do odpowiedniego punktu zbierającego odpady. Pozwala to ograniczać zanieczyszczenie środowiska i pozytywnie wpływa na ludzkie zdrowie.

Informujemy ponadto, iż nasza firma w zakresie obowiązków wynikających z ustawy o zużytych sprzęcie elektronicznym, w tym w zakresie jego zbierania, przetwarzania, odzysku i recyklingu jest obsługiwana przez KARAT ELEKTRO-RECYKLING Sp.z o.o. W razie jakichkolwiek pytań lub wątpliwości możecie się Państwo kontaktować z Karat pod numerem telefonu 056-623-80-91.

Odpowiedzialność

Firma GOCLEVER Technology ani żaden z jej licencjobiorców nie ponosi odpowiedzialności za jakkolwiek utratę danych lub zysków, jak również za żadne inne wtórne i pośrednie szkody powstały w wyniku użytkowania urządzeń marki, w żadnym wypadku i maksymalnym dopuszczalnym przez prawo zakresie. GOCLEVER Technology nie odpowiada za problemy związane z nieprawidłowym działaniem systemu operacyjnego i aplikacji działających pod jego kontrolą.

Zmiany

GOCLEVER Technology zastrzega sobie prawo do dokonywania zmian w niniejszym dokumencie jak i specyfikacji urządzenia, bez konieczności informowania o tym użytkownika. Opisane funkcje oraz obrazki mogą się różnić w zależności od usług oferowanych przez operatora jak i wersji oprogramowania danego urządzenia.

Przed użyciem

Pamiętaj, że akumulator nie jest naładowany. Otwarcie lub próba rozebrania zewnętrznej obudowy urządzenia powoduje utratę gwarancji.

Google jest zastrzeżonym znakiem towarowym, a Google Maps jest znakiem handlowym firmy Google, Inc. w Stanach Zjednoczonych i innych krajach. YouTube jest znakiem towarowym firmy Google, Inc.

Firma GOCLEVER Technology nie ponosi odpowiedzialności za błędy techniczne lub redakcyjne ani za pominięcia w niniejszym tekście; nie ponosi również odpowiedzialności za szkody przypadkowe lub następcze spowodowane korzystaniem z niniejszego materiału. Informacje są przedstawione w takim stanie, w jakim przyjmuje je użytkownik, i nie są objęte żadną gwarancją. Mogą ulec zmianie bez powiadomienia. Firma GOCLEVER Technology zastrzega również prawo do zmiany zawartości niniejszego dokumentu bez uprzedniego powiadomienia. W podręczniku zostały opisane tylko podstawowe funkcje urządzenia.

Bezpieczeństwo

Należy zapoznać się z tymi wytycznymi. Niezastosowanie się do nich może spowodować

powstanie zagrożenia życia lub zdrowia albo może być niezgodne z prawem. Aby uzyskać dalsze informacje, należy zapoznać się z całym podręcznikiem. Urządzenie zostało stworzone do pracy przy zasilaniu akumulatorowym jak i podłączeniu do sieci elektrycznej za pomocą ładowarki. Korzystając z urządzenia w inny sposób może być niebezpieczne i spowoduje utratę gwarancji.

Ładowanie

Urządzenie należy podłączać tylko do źródeł zasilania zgodnych z parametrami określonymi w specyfikacji. W przypadku wątpliwości co do typu wymaganego źródła zasilania należy skonsultować się z autoryzowanym punktem usługowym lub lokalnym dostawcą energii elektrycznej. Jeśli produkt zasilany jest z akumulatora lub innych źródeł, należy przestrzegać instrukcji dołączonej do produktu.

Oddziaływanie czynników zewnętrznych oraz pola elektromagnetycznego

Urządzenie nie jest wodoodporne. Należy dopilnować, aby zawsze było suche, chronić przed wilgocią. Urządzenie należy chronić również przed wysokimi oraz niskimi temperaturami, zapyleniem, piaskiem, nie należy narażać go na wstrząsy, rzucać nim, gdyż może to spowodować jego uszkodzenie, bądź jego elementów.

Nie korzystaj z urządzenia w pomieszczeniach wilgotnych i w bardzo wysokich lub niskich temperaturach.

Nie pozostawiaj urządzenia w pojazdach ani miejscach, w których temperatura może przekroczyć 50 stopni Celsjusza.

Nie korzystaj urządzenia na pokładzie samolotu oraz w miejscach gdzie nie jest dozwolone korzystanie z urządzeń mogących emitować pole elektromagnetyczne Np. szpital, stacja benzynowa, magazyn materiałów wybuchowych; nieprzestrzeganie tych zasad może spowodować pożar lub wybuch.

Nie korzystaj z urządzenia podczas prowadzenia samochodu.

Nie korzystaj z urządzenia w pobliżu źródeł silnego promieniowania elektromagnetycznego, takich jak kuchenki mikrofalowe, głośniki, telewizory a nawet radia.

Stosować tylko oryginalne akcesoria zalecane przez producenta albo akcesoria, które nie zawierają metali.

Serwis i naprawy

Do napraw korzystaj z autoryzowanego serwisu i wykwalifikowanego personelu, wszelkie próby naprawy samodzielnej, bądź też przez nieautoryzowany serwis będzie skutkować utratą gwarancji.

Bezpieczeństwo

- Nie upuść urządzenia z dużej wysokości.
- Unikaj używania urządzenia w kurzu, dużej wilgoci oraz nie wystawiaj urządzenia na bezpośrednie słońce.
- Unikaj silnego pola elektromagnetycznego w pobliżu urządzenia.
- Działanie urządzenia może być zakłócone ładunkami elektrostatycznymi, w przypadku braku reakcji urządzenia użyj przycisku reset.

- Unikaj kontaktu urządzenia z wodą. Jeśli urządzenie wymaga czyszczenia najpierw je wyłącz.
- Nie używaj silnych środków czyszczących do usuwania zabrudzeń ani ostrych przedmiotów, użyj czystej suchej ściereki.
- Nie zasłaniaj otworów wentylacyjnych urządzenia gdyż grozi to przegrzaniem urządzenia.
- Unikaj kontaktu urządzenia z ogniem, grozi wybuchem urządzenia.
- Utylizacja baterii powinna być wykonana zgodnie z normami odnośnie szkodliwych odpadów.
- Używaj urządzenia w klimacie umiarkowanym.
- Nie odpowiadamy za uszkodzenia i utratę danych oraz używanie niewłaściwych baterii.
- Nie otwieraj urządzenia, nie wykonuj napraw oraz modyfikacji, wiąże się to z utratą gwarancji.
- Jeśli urządzenie nie będzie długo używane pamiętaj aby co najmniej raz w miesiącu podładować baterię.
- Naładuj baterię gdy:
 - a) Ikona baterii wygląda tak (pusta bateria)
 - b) Kiedy urządzenie po restarcie automatycznie się wyłącza.
 - c) Kiedy urządzenie nie reaguje na włącznik.
- Nie wyłączaj urządzenia podczas kopiowania plików może to uszkodzić pliki urządzenia.
- Podczas używania urządzenia jako przenośny stosuj się do poleceń na ekranie urządzenia, nie odłączaj urządzenia przed zakończeniem kopiowania plików.
- Aby zredukować możliwość porażenia prądem elektrycznym unikaj kontaktu urządzenia z płynami nie stawiaj na urządzeniu naczyń z wodą.
- Istnieje ryzyko wybuchu baterii jeśli wymieniona bateria jest innego typu niż fabryczna.
- Bateria nie powinna być wystawiona na działanie wysokich temperatur, światło słoneczne czy bezpośredni kontakt z ogniem
- Po odłączeniu ładowarki urządzenie będzie działać na baterii aż do rozładowania baterii.
- Zasilacz posiada podwójną izolację brak uziemienia.
- Symbol bezpieczeństwa:



- Uwaga urządzenie posiada nie izolowane elementy płyty głównej na których występuje zagrożenie porażenia prądem.
- Nie otwierać urządzenia samodzielnie, należy to zlecić serwisowi.



- **■** Prawidłowa utylizacja tego produktu. Znak ten oznacza, że produktu nie należy wyrzucać wraz z innymi odpadami w UE. Aby uniknąć szkodliwego wpływu na środowisko i zdrowie ludzi wskutek niekontrolowanego usuwania odpadów, odpowiedzialny recykling w celu promowania ponownego użycia zasobów materialnych. Aby pozbyć się zużytych urządzeń, należy skorzystać z systemów zwrotu i zbiórki dostępnych w danym kraju lub skontaktować się ze sprzedawcą w którym produkt został zakupiony.
- Urządzenie powinno być używane w odległości 20cm od ciała.

Ostrzeżenia

- Ten produkt jest zgodny z aktualnymi przepisami ograniczającymi głośność wyjściową urządzeń audio do bezpiecznego poziomu. Słuchając urządzenia ze słuchawkami przy dużej głośności, grozi trwałym uszkodzeniem słuchu. Nawet jeśli użytkownik jest przyzwyczajony do bardzo głośnej muzyki i wydaje się to normalne, nadal istnieje możliwość uszkodzenia słuchu. Zmniejszyć głośność urządzenia do rozsądnego poziomu, aby uniknąć trwałego uszkodzenia słuchu. Jeśli słyszysz dzwonienie w uszach, zmniejsz głośność lub wyłącz urządzenie. To urządzenie zostało przetestowane z dołączonymi słuchawkami (opcja). W celu zachowania słuchu, zaleca się stosowanie wyłącznie następujących modeli słuchawek: słuchawki dołączone do urządzenia, lub inne słuchawki, że obowiązujące normy prawne. Inne typy słuchawek mogą charakteryzować się wyższym poziomem głośności.
- Maksymalne napięcie wyjściowe $\leq 150\text{mv}$
- Nie korzystaj z urządzenia podczas prowadzenia pojazdów, grozi wypadkiem.
- Podczas korzystania z słuchawek unikaj sytuacji kiedy nie słyszysz dźwięków otoczenia, grozi wypadkiem.
- W celu ustalenia bezpiecznego poziomu głośności:
 - Ustaw głośność na niskim poziomie.
 - Zwiększaj do poziomu kiedy będzie wyraźny i bez zniekształceń. Pozostaw na tym poziomie nie zwiększaj jeśli nie ma takiej potrzeby.

Spis treści

Bezpieczeństwo.....	36
Ostrzeżenia	38
Podstawowe funkcje.....	40
Aksesoria	40
Przyciski i porty.....	40
Ładowanie baterii	41
Kopiowanie plików	41
Włączenie/Wyłączenie.....	42
Ekran główny (HOME)	42
Odblowywanie ekranu	44
Ekran dotykowy/ przyciski.....	44
Dostęp do internetu	44
Czytanie E-Booków	47
Odtwarzanie muzyki	48
Odtwarzanie filmów	19
Przeglądanie zdjęć	50
Przeglądanie plików.....	22
Wysyłanie odbieranie poczty.....	25
Czytanie dokumentów pakietu Office	57
Nagrywanie głosu	28
Aparat/Kamera	58
Wyjście HDMI.....	29
Zarządzanie aplikacjami	29
Zarządzanie zadaniami.....	30
Ustawienia.....	60
Rozwiązywanie problemów.....	61
Specyfikacja	32

Podstawowe funkcje

Wi-Fi Połączenie

Dzięki karcie Wi-Fi urządzenie ma dostęp do Internet gdziekolwiek jesteś.

7.0" Ekran dotykowy

Dotknij ekranu urządzenia by zmienić opcje uruchamiać aplikacje.

Możliwość instalacji aplikacji

Wbudowany Android™ OS, pozwala instalować niezliczoną ilość aplikacji.

Wbudowany G-sensor

Urządzenie automatycznie zmienia orientację ekranu poziomo lub pionowo.

Rozrywka

Możesz odtwarzać filmy zdjęcia pliki audio oraz czytać eBook.


Dokumenty pakietu Office

Wbudowana aplikacja OfficeSuite, możesz odwierać dokumenty Word, Excel, PPT etc.

Akcesoria

- USB kabel
- Ładowarka
- Etui

Przyciski & gniazda

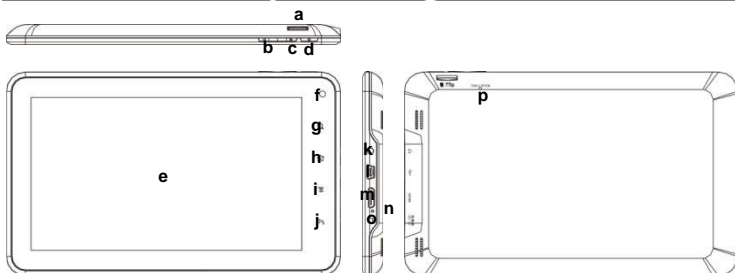

a Gniazdo kart micro SD

b Ciszej poziom głośności

c Głośniej poziom głośności

d Włącznik – wciśnij i przytrzymaj aby włączyć lub wyłączyć urządzenie; wciśnij aby wygasić ekran.

e Ekran dotykowy

f Kamera

g Wyszukaj

h Home

i Menu – wyświetla opcje.

j ESC – Cofnij

k Wyjście audio – gniazdo dla słuchawek.

l USB gniazdo – port komunikacji z komputerem.

m HDMI wyjście

n Dioda ładowania

o Gniazdo ładowania – podłącz ładowarkę

p Reset / mikrofon

Ładowanie baterii

Urządzenie posiada wbudowaną baterię, nie jest konieczne podłączanie dodatkowej, jeśli się rozładuje po prostu ją naładuj.

Aby naładować urządzenie, podłącz ładowarkę dostarczoną w zestawie. Do naładowania baterii do pełna potrzeba około 5 godzin. Podczas ładowania kontrolka baterii jest czerwona. Po naładowaniu baterii kontrolka zmienia kolor na jasny zielony.

Uwaga:

- f. **Zalecamy podłączyć ładowarkę w przypadku gdy stan baterii jest poniżej 15%!**
- g. **Używaj tylko ładowarki załączonej w zestawie !**
- h. Możesz podczas ładowania baterii korzystać z urządzenia jednak wydłuży to czas ładowania baterii oraz obniży żywotność baterii.
- i. Zalecamy naładować baterię urządzenia przed pierwszym użyciem.
- j. Dla uzyskania optymalnej wydajności ogniw litowo-jonowych zalecanie jest częste ładowanie, unikaj przechowywania urządzenia w stanie pełnego rozładowania oraz pełnego naładowania.

Kopiowanie plików

Zanim będziesz mógł dotwarzać filmy i piosenki musisz je wgrać do urządzenia.

- (1) Podłącz urządzenie z komputerem przy pomocy kabla USB z zestawu.
- (2) Dotknij "Włącz pamięć USB" aby udostępnić pamięć urządzenia.
- (3) Po podłączeniu, dwa wymienne dyski twarde pojawią się na komputerze. Jeden reprezentuje wewnętrzną pamięć urządzenia, a drugi przedstawia kartę pamięci włożoną do urządzenia. Teraz można kopiować pliki z lub do tych dysków tak jak na dysku twardym.
- (4) Po wgraniu plików wybierz "Wyłącz pamięć USB" aby móc odłączyć urządzenie.
- (5) Możesz odłączyć urządzenie od komputera.

Uwaga:

- a) można obsługiwać urządzenia bez odłączania urządzenia od komputera. Podczas pracy można przeciągnąć od góry do dołu bar, aby sprawdzić stan połączenia USB, a następnie wybierz "USB Connected", aby włączyć port USB lub wybierz opcję "Wyłącz nośnik" aby się rozłączyć.



Pasek stanu przeciągnij na dół

- b) System Android OS oraz zainstalowane aplikacje zajmują część pamięci około 1GB jest to normalne zjawisko. Dlatego ilość dostępnego miejsca jest mniejsza niż wielkość zainstalowanej pamięci NAND.

Włączanie/Wyłączanie


Włączanie urządzenia, wciśnij i przytrzymaj **Włącznik** do pojawienia się obrazu na ekranie następnie zwolnij przycisk. Uruchomienie systemu może trwać kilka minut, poczekaj.




Wyłączanie urządzenia, wciśnij i przytrzymaj **Włącznik** na ekranie wyświetli się lista wybierz "Wyłącz", potwierdź dotykając "OK".

Wskazówka: Urządzenie jeśli nie będzie używane wygasi ekran, aby przywrócić wciśnij **Włącznik**.

Ekran Główny (HOME)

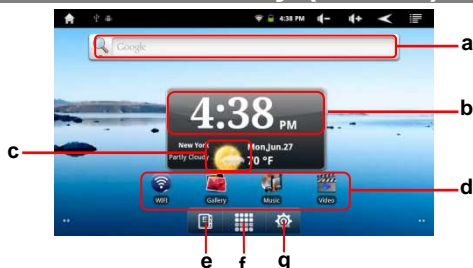


- Wyszukanie Google** – wpisz zapytanie lub adres strony (wymaga połączenia WiFi)
- Godzina
- Prognoza pogody** (wymaga połączenia WiFi)
 - Aby wybrać miasto dotknij na oknie pogody.
- Domyślne skróty** – dotknij ikony aby uruchomić aplikację.
- Skrót do czytnika eBook**
- Skrót do listy zainstalowanych aplikacji**
- Skrót do Ustawień**

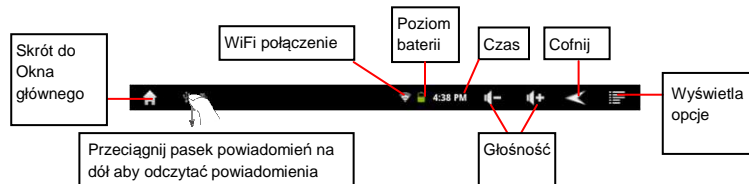






Rozszerzony ekran główny

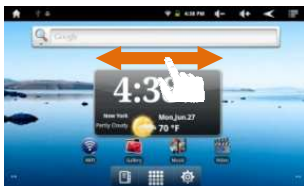Dotknij i przeciągnij palcem po ekranie aby wyświetlić poboczne pulpity, łącznie jest 5 pulpitów.




Dostosowanie ekranu głównego

Możesz dodawać lub usuwać skróty, widżety oraz zmieniać tapetę.


- Aby dodać na ekranie głównym (skróty, widżety, foldery itd.), dotknij ikony opcji  wybierz „Dodaj” . Możesz też dotknąć ekranu i przytrzymać aby wyświetlić listę.
- Możesz dodać folder na ekran główny aby to zrobić wybierz Foldery → Nowy Folder. Możesz zebrać skróty w tym folderze oraz widżety. Aby zmienić nazwę, a) otwórz folder, b) dotknij i przytrzymaj na pasku tyłu folderu aż pojawi się okno „Zmień nazwę folderu”, c) wprowadź nazwę.
- Aby przesunąć element na ekranie głównym dotknij i przytrzymaj ikonę którą chcesz przesunąć zostanie podświetlona, następnie ustaw ją w żądanym miejscu.
- Aby usunąć element z ekranu głównego dotknij i przytrzymaj ikonę i przesunij na ikonę kosza w dolnej części ekranu.
- Aby zmienić tapetę okna głównego wybierz , następnie „Dodaj” -> „Tapety” wybierz z dostępnych tapet lub galerii.
- Aby zmienić ustawienia wybierz ikonę , następnie „Ustawienia” . Wybierz kategorię: „Sieci zwykłe i bezprzewodowe”, „Dźwięk”, „Wyświetlacz”, „Data i godzina”, itd.

Ustawienia prognozy pogody

- Wprowadź w polu „Search City” którego prognoza pogody ma zostać wyświetlona, dostępne tylko duże miasta.
- Zaznacz opcje „Use Celsius” aby temperatura była podawana w Celsjuszach inaczej będzie wyświetlana temperatura a Fahrenheit.

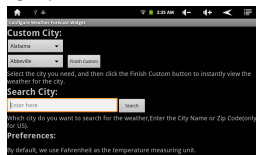


Strona aplikacji

Urządzenie fabrycznie ma wbudowane wiele przydatnych aplikacji. Dotknij ikony aplikacji  aby je wyświetlić.



Wskazówka: Dotknij i przytrzymaj na ikonie aplikacji aby dodać skrót do okna głównego.

Odblokowanie ekranu






Ekran automatycznie blokuje się jeśli urządzenie jest nie używane. Aby odblokować ekran przeciągnij ikonę  do środka ekranu zgodnie z strzałką nad ikoną.



Wskazówka: Przeciągając ikonę  uruchomisz tryb wycisz.

Ekran dotykowy oraz przyciski

Główne przyciski ekranu głównego

- Aby cofnąć o jedno okno wybierz ikonę „Cofnij”  (prawy róg ekranu).
- Niezależnie od miejsc a którym jesteśmy ikona „Home”  wyświetli zawsze okno główne (lewy górny róg ekranu).
- Większość aplikacji posiada dodatkowe opcje aby je wyświetlić dotknij **Menu** ikony .
- Kiedy odtwarzasz audio w tle na pasku pojawi się ikona Pauzy  / a po wybraniu Pauzy ikona Play .

Pozostałe możliwości ekranu dotykowego

- Podczas oglądania filmów czy słuchania muzyki możesz przesunąć pasek postępu.
- W różnych przeglądarkach (Plików, Muzyki, Filmów, Zdjęć, itp.), dotknij i przytrzymaj na ekranie aby przesunąć listy góra dół.
- W niektórych przeglądarkach (Plików, Muzyki, Filmów, Zdjęć, itp.), dotknij i przytrzymaj na pliku aby wyświetlić opcje.



Dostęp do Internetu

Tablet posiada wbudowaną kartę Wi-Fi dzięki niej po połączeniu z dowolną siecią Wi-Fi uzyskasz dostęp do Internetu .

Po pierwsze musisz skonfigurować połączenie Wi-Fi. Aby wykonać procedurę konfiguracji sieci Wi-Fi musisz być w zasięgu tego typu sieci. Raz skonfigurowane połączenie będzie działać jeśli znajdziesz się w tej samej lokalizacji.

Konfiguracja połączenia Wi-Fi

- (1) Na ekranie głównym wybierz ikonę Wi-Fi.
- (2) Dotknij na "Wi-Fi" aby włączyć Wi-Fi.
- (3) Dotknij na "Ustawienia Wi-Fi" aby wyświetlić listę dostępnych sieci.





Wskazówka:

- Lista dostępnych sieci jest odświeżana automatycznie.
- Po włączeniu Wi-Fi urządzenie automatycznie połączy się z siecią dla której została zapamiętana konfiguracja
- Na pasku powiadomień zostanie wyświetlona informacja jeśli znajdziesz się w zasięgu sieci bez zabezpieczenia.


- (4) Dotknij na liście nazwę sieci z którą chcesz się połączyć w przypadku sieci zabezpieczonych wprowadź hasło dostępu następnie wybierz „Połącz”. Po prawidłowym połączeniu na pasku pojawi się ikona sieci „Wi-Fi”.


Konfiguracja zaawansowana

Aby wyszukać ręcznie dostępne sieci,

- W opcji "Ustawienia Wi-Fi" dotknij na ikonę menu , dotknij "Skanuj"
- Jeśli sieć nie jest widoczna na liście aby połączyć z tą siecią wybierz „Dodaj sieć Wi-Fi” wprowadź nazwę sieci SSID oraz klucz następnie wybierz „Zapisz”
- Aby ustawić adres IP ręcznie wybierz ikonę , dotknij "Zaawansowane" następnie „Statyczny adres IP” wprowadź parametry sieci.

Uruchamianie przeglądarki

Dotknij ikony aplikacji aby wyświetlić wszystkie aplikacje wybierz ikonę „Internet”  aby uruchomić przeglądarkę internetową.

Jeśli masz dostęp do Internetu po włączeniu przeglądarka zacznie wyświetlać strony internetowe. Aby wyświetlić nowe okno wybierz ikonę  następnie "Nowe Okno" aby wprowadzić adres strony.

Wskazówka: Nie wszystkie sieci Wi-Fi udostępniają Internet, może się zdarzyć że to tylko sieć wymiany danych .

Używanie klawiatury ekranowej

Dotykając pola tekstowe automatycznie uruchomi się klawiatura ekranowa dzięki której możesz wprowadzać tekst, adresy stron.

Wskazania




- a Caps Lock (duże litery)
- b Backspace (kasuj)
- c zmiana klawiatury z testowej na numeryczną
- d Spacja
- e Enter/Go (zatwierdź)

Metoda wprowadzania


Jeśli zainstalowałeś dodatkowe klawiatury ekranowe możesz ją wybrać poprzez,

dotknij i przytrzymaj w polu tekstowym do pojawienia się „Edytuj tekst” wybierz „Metoda wprowadzania” następnie z listy zainstalowanych wybierz metodę wprowadzania.

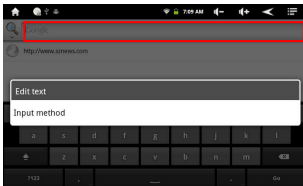



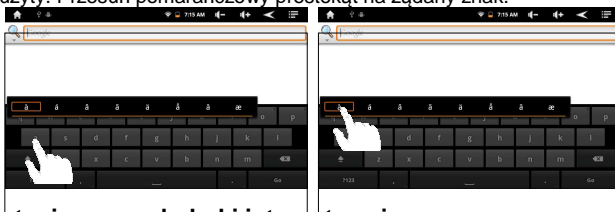

Wprowadzanie znaków specjalnych

Aby wprowadzić znak „ą”, przytrzymaj na literze „a” wybierz znak specjalny który ma zostać użyty. Przesuń pomarańczowy prostokąt na żądany znak.




Korzystanie z przeglądarki internetowej

- Wczytaną stronę możesz przesuwać przy użyciu ekranu dotykowego.
- Aby otworzyć link dotknij na nim.
- Możesz na raz przeglądać kilka stron aby je wyświetlić wybierz  następnie „Okna”, wybierz która ma zostać wyświetlona na pełnym ekranie.
- Aby cofnąć do poprzedniej strony wybierz .
- Aby wyświetlić dostępne opcje danego okna wybierz .
- Aby wyświetlić okno główne wybierz .
- Przytrzymując element w przeglądarce wyświetli się okno dodatkowych opcji.
- Aby wprowadzić tekst w polu tekstowym dotknij pola następnie wprowadź tekst przy użyciu klawiatury ekranowej.

Elementy przeglądarki internetowej

Po włączeniu przeglądarki wybierz  aby wyświetlić opcje.

Nowe okno	Otwiera nowe okna.
Zakładki	Otwiera okno „Zakładki” dostępne są tam „Zakładki”, „Popularne” oraz „Historia”. Wybierz  aby wyświetlić dodatkowe opcje okna „Zakładki”, „Popularne” oraz „Historia”
Odśwież	Możesz zatrzymać ładowanie strony oraz odświeżyć wczytaną stronę.
Okna	Lista wszystkich otwartych okien, możliwość zamknięcia okna oraz wyświetlenia wybranego na pełnym ekranie.

Dalej	Przełącza między oknami.
Więcej	Dostępne są tutaj opcje „Dodaj zakładkę”, „Znajdź na stronie”, „Zaznacz tekst”, „Informacje o stronie”, „Pobrane”, „Ustawienia”.

Czytanie eBook

Kopiowanie książek z komputera

Przed przeczytaniem, należy przesłać lub pobrać e-booki do urządzenia. Można skopiować e-booki z komputera lokalnego dysku do urządzenia przez złącze USB (patrz "Kopiowanie plików" sekcji wymienionych wcześniej).

Wskazówka: Upewnij się że pliki są w formacie PDF, EPUB, TXT, FB2, RTF or PDB tylko te są otwierane przez wbudowaną aplikację.

Czytanie

- (1) W oknie głównym dotknij skrót czytnik eBook.
- (2) Przesuń po ekranie w lewo lub prawo w celu odszukania książki.
- (3) Dotknij wybranej otwórz się natychmiast.



History and My Library

Dotknij "History" aby wyświetlić listę przeczytanych książek "My Library" aby wyświetlić listę wszystkich eBook. "History" wyświetla listę wszystkich przeczytanych książek po datach. "My Library" wyświetla listę wszystkich eBook znajdujących się w urządzeniu.




Wskazówka: Dla książek nie posiadających ikony okładki ostatnie wyświetlona domyślna ikona taka sama dla wszystkich bez okładek.

Strona Góra/Dół


Kiedy czytasz przesuń palcem po ekranie w prawo lub lewo aby przewracać kolejne strony.

Istnieje możliwość automatycznego przewracania stron. Dotknij




 aby wyświetlić menu. Wybierz "Auto Flip" wybierz co jaki okres czasu ma być zmiana strony dostosuj czas do swoich preferencji.

Powiększenie Czcionki

- (1) Kiedy czytasz książkę dotknij **Menu** ikony  aby wyświetlić opcje.
- (2) Dotknij "Font Size" dostosuj rozmiar czcionki do potrzeb.
- (3) Aby zatwierdzić zmianę wybierz "OK".


Przejdź do strony

Możesz wybrać stronę która ma zostać wyświetlona:

- (1) Kiedy czytasz książkę dotknij **Menu** ikony  aby wyświetlić opcje.
- (2) Dotknij "Go to".
- (3) Wpisz numer strony.
- (4) Po wybraniu wybierz "OK" aby przejść do strony.

Use Bookmarks

Możesz dodawać oraz kasować zakładki na danej stronie.



- (1) Kiedy czytasz książkę dotknij **Menu** ikony  aby wyświetlić opcje.
- (2) Dotknij "Bookmarks" aby wyświetlić menu zakładek.


Odtworzenie muzyki






Na Ekranie głównym uruchom ikoną „Muzyka” aplikację do odtwarzania muzyki. Możesz też w oknie aplikacji odszukać „Muzyka”

Biblioteka muzyki

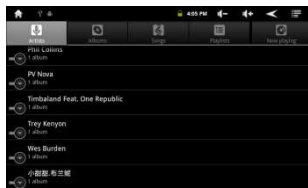Pliki zostaną automatycznie posortowane w zależności od wybranej zakładki „Wykonawcy”, „Albumy”, „Utworky”

- Przesuń palcem po liście aby odszukać utwór.
- Dotknij na wybranej piosence aby ją odtworzyć.
- Aby cofnąć wybierz  /aby powrócić do okna głównego .



 Utworky	Lista wszystkich plików.
 Wykonawcy	Pliki posortowane po artystach.
 Albumy	Pliki posortowane po albumach.
 Playlisty	Playlisty stworzone przez użytkownika.
 Teraz odtwarzane	Okno odtwarzanego pliku.

Biblioteka Muzyki Menu


Jeśli dotkniesz i przytrzymasz na pliku wyświetlą się opcje.

Play – odtwórz


Add to playlist – dodaj plik do playlisty.

Delete – skasuj plik.

Search – wyszukaj informacje o pliku.

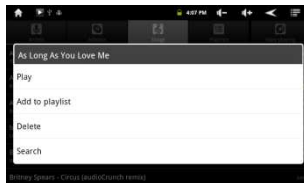

Wymieszaj Utwory













W bibliotece wybierz Menu  aby wyświetlić opcje – Odtwórz wszystkie, Losowo – tryb imprezy oraz Wszystkie losowo.


Odtwórz wszystkie – Odtwarza pliki po kolei.

Losowo – tryb imprezy – z losowo wybranych plików generuje play listę, która jest następnie odtwarzana w celu uniknięcia powtórzenia tych samych plików.

Wszystki losowo – losowo odtwarza wszystkie pliki audio.

Treraz odtwarzane

- Aby zatrzymać odtwarzanie wybierz  / aby wznowić odtwarzanie wyierz .
- Aby odtworzyć następny poprzedni plik użyj tych ikon  .
- Możesz przesuwając pasek postępu odtwarzanego pliku jeśli chcesz pominąć jakiś fragment.
- Dotknij   aby dostosować głośność.
- Aby wyświetlić listę dotknij .
- Aby zmienić tryb powtarzania wyierz .
- Aby wyświetlić więcej opcji wybierz .
- Dotkając dwa razy na pliku możesz wyszukać informacje o nim w Internecie.
- Dotknij ikony   aby powrócić do okna głównego albo cofnij .

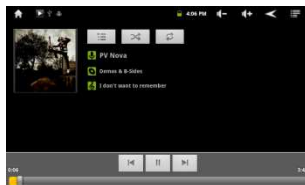



Odtwarzanie filmów


Na Ekranie głównym uruchom ikoną „Video” aplikacje do odtwarzania filmów. Możesz też w oknie aplikacji odszukać „Video”

Przegląd filmów

Po włączeniu aplikacji powinna wyświetlić się lista filmów znajdujących się w urządzeniu

- Możesz przeglądać listę w górę i w dół.
- Dotknij na wybranym filmie aby go odtworzyć.
- Możesz Cofnąć  albo powrócić do ekranu głównego wybierając inonę ekranu głównego .

Ekran odtwarzania

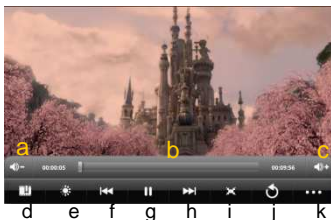

- a. Ciszej
- b. Pasek postępu
- c. Głośniej
- d. Zakładki
- e. Jasność/Podświetlenie
- f. Poprzedni plik/Cofnij
- g. Play/Pauza
- h. Następny plik/Przesuń
- i. Dopasowanie do ekranu
- j. Wyjście
- k. Video ustawienia

- Dotknij / pauza/odtwórz film.
- Dotknij aby wyświetlić opcje.
- Pasek postępu możesz przesuwając cofać odtwarzany film.
- Dotknij / aby ustawić głośność.
- Dotknij aby ustawić zakładkę na danej scenie. Przy ponownej próbie odtworzenia tego samego pliku aplikacja zapyta czy odtworzyć od zakładki czy od początku. Na jeden film jedna zakładka. Aby usunąć zakładkę dotknij aby wyświetlić menu i wybrać "Usuń zakładkę".
- Dotknij aby ustawić jasność ekranu.
- Dotknij / aby odtworzyć następny lub poprzedni plik.
- Dotknij aby dopasować rozmiar filmu do ekranu.
- Dotknij aby powrócić do listy filmów.

Wskazówka: Nie wszystkie pliki video mogą zostać odtworzone zaponaj się z tabelą odnośnie typów kodeków i rozdzielczości obsługiwanych przez urządzenie.

Przeglądanie zdjęć


Na Ekranie głównym uruchom ikoną „Galeria” aplikację do przeglądania zdjęć. Możesz też w oknie aplikacji odszukać „Galeria”.

Wyświetlanie zdjęć

- (1) Foldery zawierające zdjęcia powinny być wymienione po uruchomieniu w Galerii. Wybierz folder, aby go otworzyć.



- (2) Pliki z folderu wyświetlone są jako miniatury:
 - Przesuń palcem po ekranie lub dotknij aby przeglądać miniatury.
 - Dotknij przełącznika aby wybrać grupy bądź miniatury .


- Dotknij  aby wykonać zdjęcie do Galerii.
- (3) Dotknij miniatury aby wyświetlić na pełnym ekranie.




- (4) Przesuń palcem po ekranie poziomo aby przeglądać zdjęcia.




- (5) Zbliżając i rozszerzając dwa palce może pomniejszać i powiększać zdjęcia.

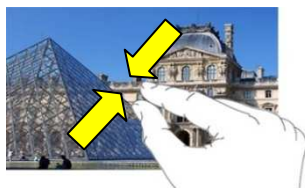

Korzystnie z menu

Kiedy wyświetlasz zdjęcie na pełnym ekranie wciśnij przycisk menu  aby wyświetlić opcje.

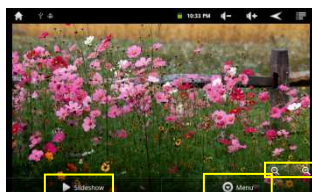

Pokaz slajdów

Wyświetla menu opcji

Powiększ/Pomniejsz

Dotknij "Menu" aby wyświetlić opcje menu.




Pokaz slajdów

Dotknij na ekranie „Pokaz slajdów” aby uruchomić autoamtyczne wyświetlanie zdjęć.





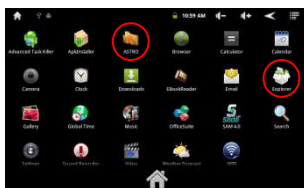


Przeglądanie plików

Do przeglądanie plików są dmyślnie zainstalowane dwie aplikacje ASTRO oraz Explorer



Korzystnie z Explorer

Po włączeniu powinna wyświetlić się lista plików i folderów

- Listę możesz przesuwać góra dół.
- Dotknij na pliku/folderze aby otworzyć
- Dotknij , aby mieć dostęp do zarządzania aplikacjami.
- Możesz cofnąć  lub przejść dlaej .
- Dotknij aby powrócić do poprzedniego katalogu .
- Dotknij aby wyjść  lub  aby powrócić do ekranu głównego.
- Dotknij ikony  aby wyświetlić listę pamięci.



Korzystanie z paska narzędzi

Używaj paska do poruszania się po pamięciach oraz kopiowania plików.


Dotknij tutaj aby ukryć/pokazać pasek.



Przesuń palcem po pasku aby wyświetlić wszystkie opcje.

Home	Okno startowe aplikacji.
LevelUp	Cofnij o jeden katalog.
Multi	Możesz zaznaczyć więcej plików.
Editor	Kopiuje, usuwa, przenosi, wkleja lub zmienia nazwę pliku lub folderu.
Back	Cofnij jedno okno.
Next	Do przodu jedno okno.

Kopiowanie/Przenoszenie plików oraz folderów

- (1) Wybierz plik z listy który chcesz kopiować lub przenieść.
- (2) Przytrzymaj na wybranym pliku do pojawienia się menu.
- (3) Wybierz "Copy" lub "Move" z menu.
- (4) Wybierz lokalizację gdzie ma zostać kopiowany/przenoszony plik
- (5) Wybierz ikonę z paska  następnie "Paste."



Kasowanie plików oraz folderów.



- (1) Wybierz plik lub katalog który chcesz skasować.
- (2) Przytrzymaj na wybranym pliku do pojawienia się menu.
- (3) Wybierz "Delete" z okna, następnie wybierz "Delete" lub "Cancel" aby anulować.

Zmiana nazwy pliku oraz folderu

- (1) Wybierz plik lub katalog który chcesz skasować.
- (2) Przytrzymaj na wybranym pliku do pojawienia się menu.
- (3) Wybierz "Rename" z menu.
- (4) Dotknij w polu tekstowym, pojawi się klawiatura ekranowa wprowadź nową nazwę .
- (5) Dotknij "OK" aby potwierdzić zmianę nazwy.








Zaznaczanie wielu plików


Możesz zaznaczyć więcej niż jeden plik folder.

- (1) Na pasku narzędzi, wybierz Multi ikonę .
- (2) Dotknij pliki i foldery które chcesz zaznaczyć . Zaznaczone pliki i foldery zostaną podświetlone na czerwono. (Aby odznaczyć dotknij pliku jeszcze raz.)
- (3) Po wybraniu plików możesz je skasować, kopiować, wyciąć wybierając Editor ikonę .

Używanie ASTRO

Po uruchomieniu aplikacja wyświetla pliki i foldery

- Możesz przeglądać listę góra dół.
- Aby otworzyć plik folder, dotknij go.
- Dotknij , aby zarządzać aplikacjami.
- Dotknij **Back** ikony  cofnąć oraz **Next** ikony  aby przejść dalej.
- Możesz cofnąć o jeden folder wybierając ikonę .
- Niezależnie gdzie jesteś możesz wyjść z aplikacji wybierz cofnij  lub Home ikone aby powrócić na ekran główny .
- Dotknij ikony  aby powrócić do domyślnego widoku programu.

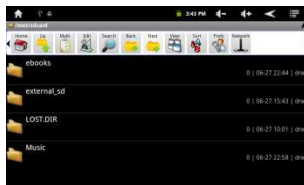

Korzystnie z paska narzędzi

Używaj paska do poruszania się po pamięciach oraz kopiowania plików.




Dotknij tutaj aby ukryć/pokazać pasek.





Przesuń palcem po pasku aby wyświetlić wszystkie opcje.

Home	Widok domyślny aplikacji.
Up	Cofnij o jeden folder wcześniej.
Multi	Zazacz kilka plików.
Edit	Kopiuj, kasuj, wytnij, wklej oraz zmień nazwę pliku.
Search	Wyszukaj plik lub folder
Back	Cofnij jeden poziom interfejsu.
Next	Idź do przodu jeden poziom w interfejsie.
View	Wyświetla pliki oraz foldery jako lista lub ikony.
Sort	Sortuje pliki oraz foldery po nazwie, dacie, rozmiarze lub typie.
Prefs	Ustawienia ASTRO
Network	Włącza sieć Wi-Fi lub Bluetooth (jeśli dostępne).

Kopiuj/Przenieś pliki foldery



- (1) Oszukaj plik lub folder który chcesz kopiować/przenieść.
- (2) Dotknij Multi ikonę  następnie pliki oraz foldery, które chcesz zaznaczyć. Możesz zaznaczyć kilkanaście plików. Aby odznaczyć wybierz Cancel ikonę .
- (3) Wybierz "Copy" lub "Move" z menu.
- (4) Oszukaj lokalizację gdzie mają zostać kopiowane/przeniesione pliki oraz foldery.
- (5) Wybierz Edit ikonę  z paska narzędzi następnie wybierz "Paste."

Kasowanie plików oraz folderów

- (1) Odszukaj pliki lub foldery które chcesz skasować.
- (2) Dotknij Multi ikony  następnie zaznacz pliki oraz foldery które chcesz usunąć. Aby odznaczyć dotknij Cancel ikony .
- (3) Wybierz "Delete" z menu następnie potwierdź "Delete" aby zatwierdzić.


Tworzenie archiwum zip z plików/folderów

Oszukaj pliki/foldery z których ma powstać archiwum

Dotknij Multi ikony  zaznacz wybrane pliki/foldery. Aby odznaczyć pliki wybierz Cancel ikonę .

Wybierz "Zip" z menu.

Wprowadź nawet archiwum zip oraz wybierz "Create".

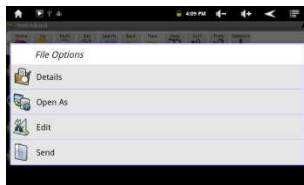

File Options

Przytrzymaj na dowolnym pliku aby wyświetlić menu:

Details – informacje na temat pliku/folderu

Open As – otwórz plik w innej aplikacji.

Edit – kopiuje, usuwa, przenosi, zip archiwum

Send – wyślij plik pocztą (wymaga skonfigurowanego konta pocztowego)

Set As – ustaw tapetę

Wysyłanie/Obieranie poczty

Urządzenie fabrycznie posiada zainstalowaną aplikację do obsługi poczty. Możesz przysyłać oraz odbierać wiadomości z Internetu a każdej chwili. Upewnij się, że masz dostęp do Internetu przed konfiguracją poczty.

Dotknij ikony okna wszystkich aplikacji, oszukaj na liście „Poczta”.

Konfiguracja poczty

Aby odbierać wiadomości musisz dodać konto pocztowe w aplikacji.

- (1) Dotknij ikony „Poczta” aby uruchomić klienta poczty.
- (2) Wprowadź adres skrzynki oraz hasło. Ustaw to konto jako domyślne wybierając opcje "Domyślnie wysyłaj wiadomości e-mail z tego konta".
- (3) Dotknij "Konfiguracja ręczna" aby ustawić parametry skrzynki w przypadku problemów z trybem automatycznym. Skontaktuj się z administratorem serwera w celu ustalenia parametrów serwera.
- (4) Dotknij "Dalej" aby kontynuować. Aplikacja przetestuje serwer poczty przychodzącej oraz wychodzącej, w przypadku poprawnej konfiguracji aplikacja pobierze wiadomości.



(5) Wprowadź nazwę konta oraz użytkownika następnie "Zakończ".



Wskazówka: Za każdym razem po uruchomieniu aplikacji będzie otwierana zawartość domyślnej skrzynki pocztowej.

Zarządzanie kontami


Możesz dodać wiele kont, skasować je oraz dodać nowe. Sprawdzasz informacje oraz pobierasz wiadomości.

Dodawanie kolejnego konta


W celu dodania kolejnego konta należy.

- (1) Uruchom aplikację „Poczta” dotknij Menu ikonę  oraz wybierz “Konta” aby wyświetlić listę kont.
- (2) Dotknij Menu ikony  oraz wybierz “Dodaj konto”.
- (3) Dodaj konto pocztowe, wprowadź adres oraz hasło.

Kasowanie konta

- (1) Po uruchomieniu aplikacji „Poczta” wybierz Menu ikonę .
- (2) Dotknij “Konta” aby wyświetlić wszystkie oddane konta.
- (3) Przytrzymaj na koncie które chcesz skasować, pojawi się okno.
- (4) Dotknij “usuń konto” , dotknij “OK” aby potwierdzić.

Sprawdzanie ustawień konta

- (1) Po uruchomieniu aplikacji „Poczta” wybierz Menu ikonę .
- (2) Dotknij “Konta” aby wyświetlić wszystkie oddane konta.
- (3) Przytrzymaj na koncie które chcesz edytować, pojawi się okno.
- (4) Dotknij “ustawienia konta” aby wyświetlić informacje na temat konta lub zmienić ustawienia.

Przeglądanie wiadomości

Domyślnym widokiem aplikacji „Poczta” jest skrzynka odbiorcza.

- Możesz przesuwając listę wiadomości góra/dół.
- Dotknij na wybranej wiadomości aby ją otworzyć.
- Przytrzymaj palcem na wiadomości aby wyświetlić menu. W menu możesz Otworzyć, Usunąć, Przekazać dalej, Odpowiedz wszystkim, Odpowiedz.

Menu aplikacji Poczta


W skrzynce odbiorczej dotknij Menu ikonę  aby wyświetlić menu.

Odśwież	Odśwież wiadomości.
Utwórz	Tworzenie wiadomości.
Foldery	Lista folderów wysłane/odebrane/kosz.
Konta	Wyświetla listę kont.
Ustawienia konta	Możliwość zmiany parametrów konta.

Czytanie dokumentów pakietu Office

Urządzenie otwiera dokumenty Microsoft Office dzięki wbudowanej aplikacji OfficeSuite. Aplikacja otwiera pliki Word, Excel or PPT etc.


- (1) Wgraj do urządzenia pliki poprzez kabel USB.
- (2) Uruchom aplikację OfficeSuite.

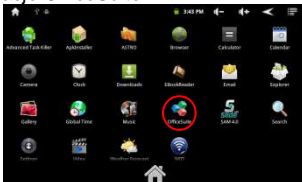

- (3) Odszukaj pliki wgrane do urządzenia. (Na ilustracjach pokazano jak odszukać pliki nagrane na wbudowaną pamięć.)



- (4) Dotknij na dokumencie aby go otworzyć. Przesuwanie na kolejną stronę dół/góra ekranu.

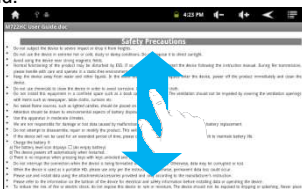






- (5) Dotknij ikony Menu aby wyświetlić więcej opcji. Użyj opcji „Find”, aby wyszukać słowo w tekście.



Nagrywanie głosu


● Nagrywanie

- (1) W oknie aplikacji odszukaj i uruchom „Rejestrator dźwięku”.
- (2) Dotknij  aby zacząć nagrywać.
- (3) Dotknij  aby zakończyć nagrywać.
- (4) Dotknij  aby odsłuchać nagranie.
- (5) Dotknij „Użyj tego nagrania” aby zapisać. Wybierz „Odrzuć” jeśli nie chcesz zapisać.
- (6) Dotknij  by powrócić do okna głównego.

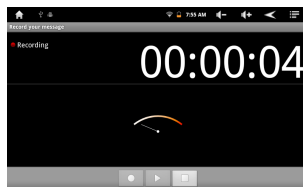


● Odtwarzanie nagrania

- (1) Uruchom aplikację „Muzyka”
- (2) Dotknij „Playlisty” aby wyświetlić Moje nagrania.
- (3) Dotknij „Moje nagrania” by wyświetlić wszystkie nagrane pliki.
- (4) Dotknij plik aby odtworzyć.

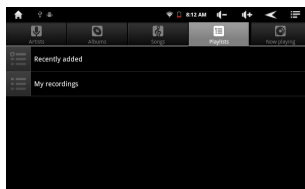


Aparat/Kamera

Wbudowany aparat pozwala na wykonywanie zdjęć i filmów. W oknie aplikacji odszukaj aplikację **“Aparat”** by wykonywać zdjęcia i nagrywać filmy.

- Do nagrania filmu służy przycisk start/stop  dotknij start by rozpocząć nagrywanie.
- Dotknij Start/Stop przycisk  ponownie aby zatrzymać nagrywanie.
- Zdjęcie/Film po nagraniu występuje w podglądzie.
- W celu odtworzenia filmu uruchom aplikację „Video” odszukaj plik na liście.
- W celu przegladania zdjęć uruchom „Galeria”.



Wyjście HDMI

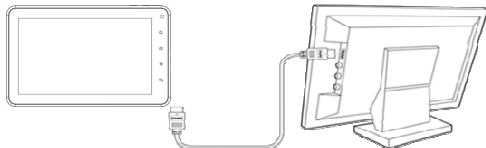

Urządzenie posiada interfejs HDMI, do którego można podłączyć urządzenie do cyfrowych urządzeń audio, monitorów komputerowych i telewizorów cyfrowych. Złącze HDMI może dostarczyć wysokiej rozdzielczości jakości obraz i dźwięk.


Aby korzystać z HDMI należy:

- (1) Sprawdź czy urządzenie do którego chcesz podłączyć tablet ma gniazdo HDMI.
- (2) Włącz urządzenie odbiorcze np. cyfrowy telewizor i upewnij się że moduł HDMI jest włączony.
- (3) Połącz urządzenie odbiorcze z tabletem.
- (4) Włącz tablet a obraz zostanie wyświetlony na urządzeniu odbiorczym.

Zarządzanie aplikacjami

Tablet współpracuje z aplikacjami stworzonymi pod system Android. Dzięki aplikacjom możesz rozszerzyć możliwości swojego urządzenia wzbogacić o nowe funkcje.



Fabrycznie zainstalowane aplikacje

Urządzenie posiada fabrycznie wbudowane aplikacje dostępne w oknie aplikacji . Są to np. odtwarzacz video, muzyka, Internet, zegar, kalkulator.

Instalowanie aplikacji

Aby zainstalować aplikacje ręcznie należy:

- (1) Pobierz aplikacje korzystając z wbudowanego marketu np. SLIDEME lub pobrać z Internetu. Upewnij się że aplikacja ma formę pliku .apk.
- (2) Wgraj plik .apk do urządzenia przy pomocy kabla USB.
- (3) Włącz tablet i odszukaj wgrany plik .apk aplikacją Explorer.
- (4) Dotknij ikony aplikacji .apk i postępuj zgodnie z komunikatami na ekranie. Jeśli instalacja aplikacji nie jest możliwa, dotknij "Ustawienia" następnie „Aplikacje” zaznacz “Nieznane źródła” po tej zmianie instalacja aplikacji będzie możliwa.

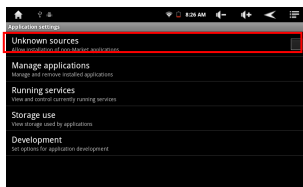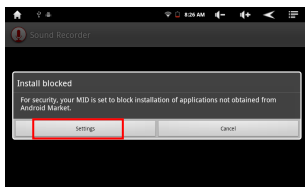

- (5) Po instalacji aplikacji będzie ona dostępna w oknie zainstalowanych aplikacji.

Odinstalowanie aplikacji

- (1) Dotknij **Ustawienia** aby wyświetlić opcje systemu.
- (2) Wybierz "Aplikacje".
- (3) Wybierz "Zarządzaj aplikacjami".
- (4) Oszukaj na liście aplikację która ma zostać usunięta.
- (5) Dotknij na wybranej aplikacji i wybierz "Odinstaluj" następnie „OK.”.


Wskazówka:

- Nie jest możliwe odinstalowanie fabrycznych aplikacji.
- Nie wszystkie aplikacje będą działały prawidłowo z urządzeniem w razie problemów skontaktuj się z programistą aplikacji.

Zarządzanie zadaniami

Tablet może obsługiwać wiele zadań jednocześnie. Na przykład, możesz przeglądać zdjęcia podczas słuchania muzyki. Wielozadaniowość jest pomocna, ale nieefektywna, jeśli zbyt wiele zadań jest uruchomionych. W celu zaoszczędzenia pamięci i zwiększenia wydajności systemu, można zakończyć niektóre zadania, które nie są używane w danej chwili.

- (1) Dotknij i uruchom "Advanced Task Killer".
- (2) Wybierz zadanie które chcesz zakończyć.

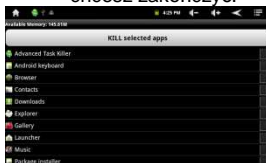



- (3) Dotknij "KILL selected apps" aby zakończyć wybrane zadania.

Ustawienia

Na ekranie głównym dotknij "**Ustawienia**" oraz wybierz kategorię: "**Sieć i Internet**" "**Dźwięk & Wyświetlacz**," "**Data i godzina**."

- Gdy obok opcji menu głównego znajduje się strzałka w dół oznacza to, że dana opcja posiada dodatkowe okno ustawień.

- Kiedy obok opcji znajduje się kwadrat oznacza to, że daną funkcję można włączyć lub wyłączyć.
- Listę opcji można przewijać w dół i górę, ustaw listę tak, aby wyświetlić żadaną opcję.
- Kiedy ustawisz funkcje poboczne aby powrócić do okna głównego ustawień użyj cofnij , użyj ikony Home  aby powrócić do okna głównego. Ustawienia zapisywane są automatycznie.

Sieci zwykłe i przewodowe	Wi-Fi – dotknij aby włączyć lub wyłączyć sieć WiFi. Ustawienia Wi-Fi – zarządzanie listą sieci.
Dźwięk	Tryb cichy – wycisz wszystkie dźwięki z wyjątkiem multimediiów i alarmów. Głośność – Ustaw poziom głośności. Powiadomienia – Ustaw dźwięk powiadomienia. Dotyk ekranu – włącza/wyłącza dźwięk dotyku ekranu. Dźwięki blokady ekranu – włącza/wyłącza dźwięk blokady ekranu.
Wyświetlacz	Janość ekranu – dostosuj jasność ekranu. Autoobracanie ekranu – włącz/wyłącz G-sensor. Animacje – włącza/wyłącza animacje okien aplikacji. Wygaszanie ekranu – dostosuj opóźnienie automatycznego wyłączenia ekranu. By przywrócić obraz, przyciśnij Włącznik raz, oraz użyj klawisza odblokowania ekranu.
Lokalizacja i zabezpieczenia	Określi moją lokalizację w aplikacjach (takich jak Mapy), korzystając z sieci bezprzewodowych. Zablokuj ekran za pomocą wzroku, PINu lub hasła.
Aplikacje	Zarządzaj swoimi aplikacjami, odinstaluj.
Prywatność	Utwórz na serwerach Google kopię zapasową danych aplikacji, hasel Wi-Fi oraz innych ustawień. Ustawienia fabryczne
Pamięć	Możesz sprawdzić ilość wolnego miejsca na pamięciach oraz bezpiecznie usuwać pamięci.
Język i klawiatura	Ustaw swój region oraz preferencje ustawień klawiatury ekranowej.
Data i godzina	Ustaw swoją strefę czasową.
Update Media Library	Urządzenie sanuje pamięci w celu zindeksowania plików multimedialnych.
Informacje	Wyświetla informacje o zainstalowanym systemie.

Rozwiązywanie problemów

Restart urządzenia

- Jeśli urządzenie się zawiesi przytrzymaj **Włącznik** 15 sekund w celu restartu urządzenia.
- Jeśli **Włącznik** nie uruchomi ponownie urządzenia, użyj “reset” przycisku, znajdującego się na tyle urządzenia.

Specyfikacja

Item		Description	
CPU		Based on Cortex-A8 Main CPU frequency: 1GHz	
DDR		2X256MB	
Built-in operating system		Android OS 2.3	
Hardware		IBM PC or compatible PC, Note-book or Macintosh with USB port	
Internal Memory		2GB, 4GB, 8GB, 16GB(optional)	
Memory Card type		MicroSD card: 1GB, 2GB, 4GB (SDHC), 8GB(SDHC), 16GB(SDHC)	
Operation System		Windows2000/XP/Vista/windows 7/Linux2.4/ MAC OS 10.6.7 above	
Interface		USB2.0 High Speer	
		Micro SD card slot (compatible SDHC)	
		3.5mm Earphone port	
		HDMI Interface	
Connection Agreement		WiFi (802.11 b/g/n)	
G-sensor		Support 360 rotation	
E-Book	File Format	PDF/EPUB/TXT/FB2/PDB/RTF	
	Coding Format	PDF / EPUB Format: .Open.	
		TXT / FB2/PDB/RTF Format: .Open	
Photo Format		JPEG(Baseline) :96*32pixels to 8000*8000 pixels	
		BMP	
		GIF (Static)	
		PNG	
Audio	File Format	MP3/WAV/OGG/FLAC/APE/AAC	
	Coding Format	MP3 (MPEG1/2/2.5 Audio Layer 1/2/3) : 8~48KHZ/8~320Kbps,CBR and VBR	
		WAV (MS-ADPCM, IMA-ADPCM, PCM) : 8~48KHZ	
		WAV (MS-ADPCM, IMA-ADPCM, PCM) : 8 ~ 48KHZ	
		OGG (Q1- Q10) : 8~48KHZ	
		FLAC(Compress Level 0~8) : 8~48KHZ	
		APE (Version 3.95,3.97,3.98,3.99,normal and fast) : 8~48KHZ	
AAC(ADIF, ATDS Header AAC-LC and AAC-HE) : 8~48KHZ			
Video	File Format	AVI, 3GP, MP4, RM, RMVB, FLV, MKV, MOV, VOB, DAT, WMV	
	Coding Format	AVI(MPEG4,XVID,DIVX3/4/5/6, MS MPEG4 V3)	1920*1088pixels/30FPS/38.4Mbps (Max.) Audio Codec: MP2/MP3/AC3/AAC/PCM/DTS
		3GP/MP4(H.264,H.263, MPEG4,XVID,DIVX3/4/5/6, MS MPEG4 V3)	MPEG4,XVID,DIVX3/4/5/6: 1920*1088pixels/30FPS/38.4Mbps (Max.) H.264: 1920*1088pixels/30FPS/20Mbps(Max.) Audio Codec: MP2/MP3/AC3/AAC/PCM
		RM/RMVB(Real video 8/9)	1920*1088pixels/30FPS/38.4Mbps (Max.)

		Audio Codec: Cook/AAC
	FLV(Sorenson Spark)	1920*1088pixels/30FPS/38.4Mbps (Max.)
		Audio Codec: MP3
	MKV(H.264,MPEG4,XVID,DIVX3/4/5/6,MS MPEG4 V3)	Audio Codec: MP2/MP3/AC3/AAC/PCM
		MPEG4,XVID,DIVX3/4/5/6:1920*1088 pixels /30FPS(Max.)
		H.264: 1920*1088pixels/30FPS//57.2Mbps (Max.)
	MOV(H.264, H.263,MPEG4,XVID,DIVX3/4/5/6, MS MPEG4 V3)	MPEG4,XVID,DIVX3/4/5/6, MS MPEG4 V3: 1920*1088 pixels /30FPS/38.4Mbps (Max.)
		H.264: 1920*1088pixels/30FPS/20Mbps(Max.)
		Audio Codec: MP2/MP3/AC3/AAC/AMR
	MPG/DAT/VOB(MPEG1/2)	1920*1088pixels/30FPS/80Mbps (Max.)
		Audio Codec: MP2/MP3
Read speed	8 –10 MB/S (MLC flash)	
Write speed	3.0 – 4.0 MB/S (MLC flash)	
Battery Charge Time	About 5 Hours	
Battery Life	About 7 hours of music playback; About 6 hours of video playback; About 6 hours of web browsing.	
Display	7.0-inch TFT LCD, Touchpad (capacitive touch pad), 800X480 pixels.	
SNR	>=80dB	
Frequency Response Range	20Hz—20KHz	
Power Supply	Rechargeable lithium-ion polymer battery; AC Adapter: AC Input 100-240V~50/60Hz, DC Output 5V/2A	
Storage Temp.	-20 ~ +65℃	
Ambient Temp.	0 ~ +50℃	
Operation Relative Humidity	20% ~ 90% (40℃)	
Storage Relative Humidity	20% ~ 93% (40℃)	