

irit[®]


IR-3303

ИНСТРУКЦИЯ
по эксплуатации
Manual Instrucion



irit[®]

www.irit.com.ru

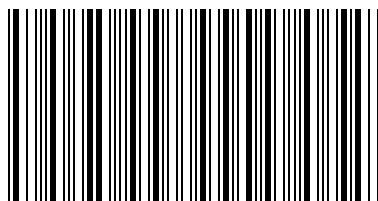


TIA01042014

**Триммер для волос
электрический**
Electrical Hair Trimmer
IR-3303

Description

- 1. Blades
- 2. Battery slot
- 3. Adjusting hair length
- 4. Button OFF/ON
- 5. Attachments

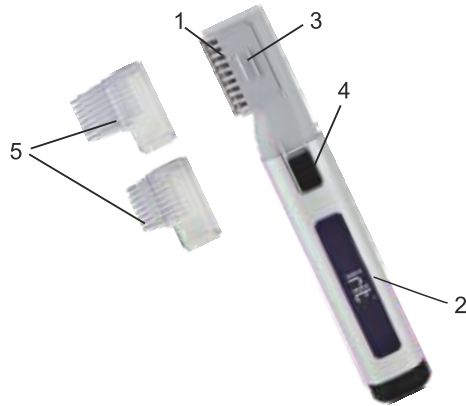

Attention!

The appliance is not intended for professional use.

IMPORTANT SAFEGUARDS

Before commissioning this device please read the instruction manual carefully.

- Under no circumstances must the device be placed in water or other liquid, or come into contact with such.
- To avoid injuries, do not use the device having any damages
- If the device is not working properly, contact to qualified service center
- Keep the device in the reach of children
- If the trimmer is not used for a long time, remove the batteries
- Do not leave the appliance unattended
- Do not use appliance for animal grooming.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Attention!

To maintain your clippers in optimum condition, the blades should be oiled every few haircuts.

Directions for Use:

Note: Prior to first use, test the trimmer on a small area. If any sensitively or allergic reactions occur, discontinue use immediately. Do not use your trimmer on sensitive or irritated skin.

Before trimmer your hair:

- 1. Ensure that the hair is dry
- 2. Comb the hair as it is normally styled

Trimming your hair:

- 1. After you have selected and attached the trimming guide turn the trimmer on
- 2. Hold the trimmer parallel to your head and run the trimmer through your hair similar to a combing motion
- 3. Repeat the same steps for each side of your head. Make sure the length of the hair is trimmed to the same length on both sides of the head
- 4. Trim from front to back
- 5. Trimming the hair on the back of your head. Hold the trimmer with attachment horizontally and comb in an upward and out motion.

Cleaning Trimmer

- 1. Turn the trimmer off and remove the batteries
- 2. With the back of the unit facing you, place your index finger under the blades and pull towards you
- 3. Carefully take the trimming head off
- 4. Using the enclosed brush gently wipe away any hair or dust
- 5. Carefully insert the new trimming head onto the head at a 90 degree angle, once in place use your thumb to click into place
- 6. Replace batteries

Attention: Do not use the trimmer in a damp room or near water.

The importer retains his right to make changes in appearance and completeness of the item without preliminary notification to the customer. For household usage only.


Rating Parameters

2xAAA battery (not included)

Working life 2 years

Описание

1. Бреющее лезвие
2. Отсек для батареек
3. Регулировка длины стрижки
4. Кнопка ВКЛ/ВЫКЛ
5. Насадки

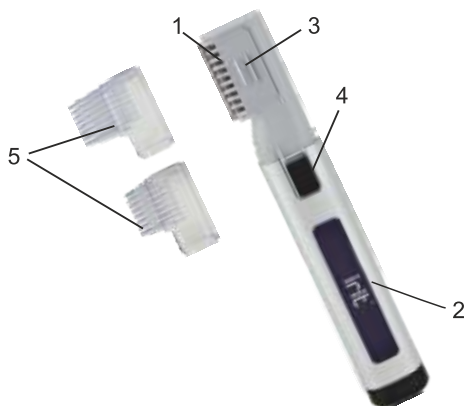**Внимание!**

Прибор не предназначен для профессионального использования

Меры безопасности

- Прочитайте всю инструкцию перед эксплуатацией прибора.
- Во избежание травм не пользуйтесь прибором, имеющим какие-либо повреждения.
- Если прибор не работает должным образом, обратитесь к производителю или в специализированный сервисный центр.
- Не допускайте попадания прибора в воду и другие жидкости.
- Храните триммер в недоступном для детей месте.
- Не оставляйте без присмотра включенный триммер.
- После использования обязательно выключите триммер и наденьте защитный колпачок.
- Если триммер длительное время не используется, выньте из него батарейки.
- Не позволяйте пользоваться прибором лицам с ограниченными физическими или умственными возможностями или людям с отсутствием опыта и знаний, если они не были проинструктированы об использовании прибора лицом, отвечающим за его безопасность.
- Не оставлять без присмотра!

Инструкция по применению:

Примечание: Перед первым использованием, проверьте триммер на небольшом участке. Если есть аллергические реакции, немедленно прекратите использование. Не используйте триммер на чувствительной или раздраженной кожи.

Перед стрижкой волос

1. Убедитесь, что волосы сухие
2. Расчешите волосы, как это Вы делаете обычно

Использование триммера:

1. Придерживая за верхнюю часть прибора, сдвиньте вниз отсек для батареек, вставьте батарейки, закройте отсек.
2. Приведите кнопку (4) в положение ON, чтобы триммер начал работу.
3. Держа триммер под углом около 45 градусов, водите его по участку тела, который хотите избавить от лишних волос, направляя его в сторону, противоположную росту волос.

Уход и чистка

1. Выключите триммер и выньте батарейки, если не планируете его использовать в ближайшее время.
2. Аккуратно снимите головку триммера (3).
3. Пользуясь специальной щеточкой, очистите лезвие триммера от волосков, которые могли застрять в нем во время применения.

Внимание: Не используйте прибор во влажной комнате или вблизи воды!

**Поставщик оставляет за собой право менять внешний вид и комплектность товара без уведомления покупателя.
Прибор предназначен только для бытовых целей.**

Технические характеристики

2xAAA батарейки (не входят в комплект)

Срок службы прибора – 2 года

