


# viconte

## Automatic Hair Curlier Instruction Manual

Щипцы для автоматической завивки волос  
Руководство по эксплуатации


VC-6730

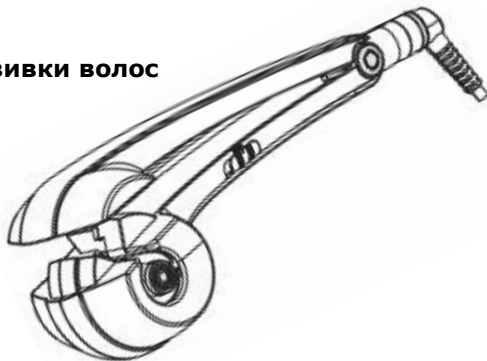

Благодарим Вас за покупку продукции «Viconte».

## DESCRIPTION

---

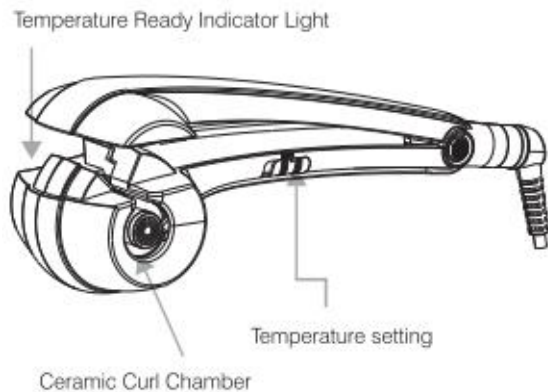

## IMPORTANT SAFETY INSTRUCTIONS

---

- Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of

experience and knowledge can give cause to hazard. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance. We do not accept responsibility for damage to the product, persons or other items, caused by misuse, abuse or non-compliance with these instructions.


- Do not put the appliance in liquid, do not use it near water in a bath-tub, basin or other vessel
- Do not use it outdoors.
- Keep the hot styling barrel away from the skin.
- Do not leave the appliance unattended while plugged in.
- Only set the appliance down on a heat-proof surface.
- Do not use attachments other than those we supply.
- Do not twist or kink the cable, or wrap it round the appliance.
- Do not use the appliance if it is damaged or malfunctions.
- If the cable is damaged, it must be replaced by the manufacture, its service center.
- This appliance is not intended for commercial or salon use.
- Let the appliance cool down before cleaning and storing away.

### **INSTRUCTIONS FOR USE**

---

- Before use, ensure the hair is clean, dry and well combed.


- Plug the styler into grounded socket.
- Slide the temperature switch to the required heat setting 170°C, 190°C or 210°C.
- The styler is ready for use when the ON indicator has stopped flashing.

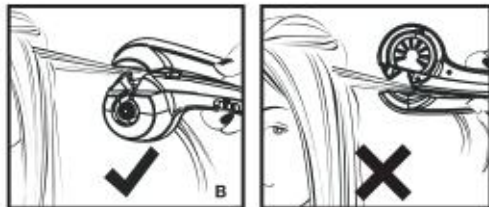

- Separated a section of hair that is no bigger than 3cm (pic. A).
- Please note that the styler must be positioned into the hair with the open part of the curl

chamber facing towards the head ( pic. B)

- Position the styler where You want the curl to start. The hair section must be straight. Placed neatly though the center of the styler (pic. C, D).

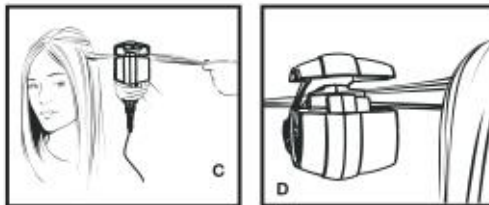

- Once the hair is in place, let go the hair section and close the handle to allow the hair to be automatically taken into the curl chamber (pic. E).



- Note: if You continue to hold the hair section after closing the handle, then Auto Hair Curlier will stop and beep to indicate, that You must release the tension on the hair. If You have taken too much hair or hair isn't neatly going through the center of the appliances, Auto Hair Curlier will again stop and beep to indicate a problem. This safety features ensures

that the will be no tangles.

- The hair is automatically drawn into the ceramic curl chamber, where it is softly heated to form the curl.
- Hold the handles shut until You hear 4 quick beeps, indicating that time is up.
- It is very important You release the handles fully, and then gently pull the styler away from the head to free the hair and reveal the curl (pic. F).



- Note: always release the handles first to let the curl free. If You pull away before You open the handles, the curl will be straightened out.
- To allow the curl to set, do not comb or brush the hair until it cools.

- Repeat around the head until You have the desired amount of curls.

## **SPECIAL FUNCTIONS**

---

- **Shut off**

Auto Hair Curlier has an automatic shut off feature for extra safety. If the appliances is switched on for more than 60 minutes continuously, it will automatically switch off. If You wish to continue using the appliance after this time, simply slide the switch to the Off position and then slide to the desired temperature setting turn the power on.

- **Sleep mode**

The appliance also supports a sleep mode for energy saving: when unused after 20 minutes, temperature will decrease to about 150°C. To return it to its former operating status, simply close then release the handles and it will return to the temperature setting You were using and temperature will be ready within a minute.

## **CLEANING AND MAINTTENANCE**

---

- Unplug the appliance and let it cool.

- Wipe all surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.

### **SPECIFICATION**

---

Power	30W
Voltage	220-240V 50Hz

### **SERVICE AND WARRANTY**

---

This product has been checked and is free of defects. We warrant this product against any defects that are due to faulty material or workmanship for the warranty period from the original date of consumer purchase. If the product should become defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period. Also warranty does not include damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required. This warranty shall not apply if the product has been dismantled or repaired by a person not authorized by us.

More detailed information about warranty conditions and the list of authorized service centers please find in warranty card.


**In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.**

**RUS**

Внимательно прочтите настоящее руководство по эксплуатации перед первым использованием прибора.

## **ОПИСАНИЕ ИЗДЕЛИЯ**

---

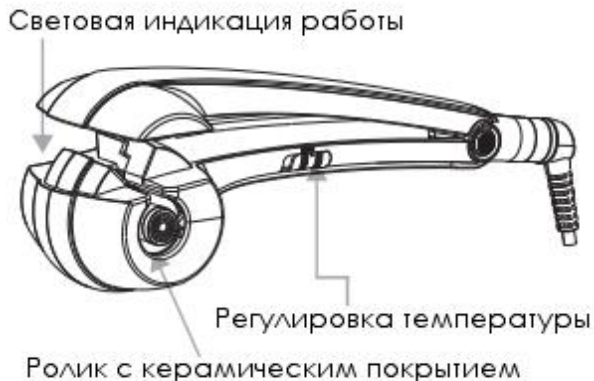

## **ВАЖНЫЕ ПРАВИЛА ТЕХНИКИ БЕЗОПАСНОСТИ**

---

- Данный прибор не предназначен для использования людьми (включая детей), у которых есть физические, нервные или психические отклонения или недостаток опыта и знаний за исключением случаев, когда за ними осуществляется надзор или проводится инструктаж лицом, отвечающим за их безопасность. Необходимо осуществлять надзор за детьми с целью недопущения их игр с прибором!
- Не погружайте прибор в жидкость, не используйте его рядом с водой в ванной, бассейне.
- Не используйте прибор вне помещений.
- Во избежание ожогов, не касайтесь нагретыми щипцами кожи.
- Не оставляйте без присмотра включенный прибор.
- Устройство следует класть только на термостойкую поверхность.
- Используйте только насадки и аксессуары, входящие в комплект.
- Не перекручивайте и не перегибайте шнур, не закручивайте его вокруг прибора.
- Не используйте прибор, если он поврежден или работает с перебоями.
- Данное устройство не предназначено для коммерческого использования или применения в салонах.

- В случае, если шнур поврежден, он должен быть заменен производителем, в авторизированных сервисных центрах.
- Перед чисткой или хранением устройства его необходимо остудить.

## ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ


---

- Перед эксплуатацией устройства убедитесь, что волосы сухие, чистые и не спутанные.
- Включите щипцы в розетку.
- Переведите кнопку регулировки температуры, установив необходимое значение в 170°C, 190°C или 210°C.




- Щипцы готовы к работе, когда световой индикатор работы перестанет моргать.
- Отделите прядь волос шириной не более 3 см (рис. А).

**ВНИМАНИЕ:** Щипцы должны быть расположены так, чтобы

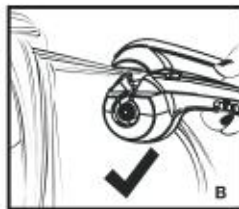

прядь волос проходила сверху ролика, а узкая крышка щипцов располагалась сверху (рис. В).

- Установите щипцы на том уровне пряди, где должен начаться локон. Волосы должны быть прямыми. Удерживая прядь за конец, опустите середину внутрь щипцов (рис. С, D).

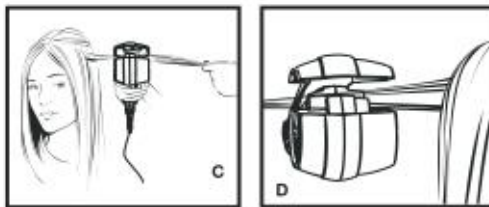

- Отпустите конец пряди и закройте щипцы. Стайлер автоматически закрутит волосы вокруг ролика (рис. E).



**ВНИМАНИЕ:** Если Вы не отпустите конец пряди, устройство остановится и издаст звуковой сигнал, означающий, что Вам необходимо ослабить натяжение волос. Если Ваша прядь слишком объемная или волосы не могут быть закручены,

щипцы вновь остановятся и издадут звуковой сигнал, означающий наличие проблемы. Данные меры безопасности позволят избежать спутывания волос.

- Волосы автоматически закрутятся на ролик, который имеет керамическое покрытие, что позволит бережно сформировать локон.
- Удерживайте щипцы закрытыми, пока не прозвучат 4 коротких звуковых сигнала.
- Полностью откройте щипцы и аккуратно отведите их в сторону.

**ВНИМАНИЕ:** Всегда сначала открывайте щипцы полностью, прежде чем извлечь локон. В противном случае прядь волос выпрямится, как после использования утюжка (рис. F).

- Не расчесывайте прядь, пока она не остыла.
- Повторите процедуру для остальных прядей, в зависимости от количества локонов, которые Вы хотите получить.
- Дайте волосам остыть.



## СПЕЦИАЛЬНЫЕ ВОЗМОЖНОСТИ

---

### • Автоотключение

Для дополнительной безопасности при использовании щипцы для автоматической завивки волос имеют специальную функцию автоотключения, если устройство не используется в течение 60 минут. В

случае если Вы хотите продолжить работу, переведите кнопку регулировки температуры сначала в позицию OFF, а затем на необходимое значение температуры.

- **Спящий режим**

Для экономии электроэнергии, щипцы для автоматической завивки волос поддерживают функцию спящего режима. В случае, если устройство не используется в течение 20 минут, температура автоматически снизится до 150°C. Если Вы хотите продолжить работу, закройте и откройте щипцы, устройство вновь нагреется до выбранной температуры.

## **ЧИСТКА И УХОД**

---

- Отключите устройство от сети и дайте ему остыть.
- Протрите поверхность влажной тряпочкой.
- Не используйте абразивные моющие средства или растворители.

## **ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ**

---

Мощность	30Вт
Напряжение	220-240В 50Гц

## ГАРАНТИЯ

---

Гарантийный срок на продукцию фирмы «Viconte» – 12 месяцев со дня продажи. В течение этого времени все дефекты, возникшие в результате производственного брака или применения некачественных материалов, будут устранены бесплатно. Гарантия не распространяется на дефекты, возникшие из-за несоблюдения инструкции по эксплуатации, грубого обращения с прибором, использования не по назначению. Также гарантия не распространяется на аксессуары. Гарантия аннулируется, если устройство ремонтировалось не в авторизованных пунктах сервисного обслуживания. Подробнее об условиях гарантии сказано в гарантийном талоне.

**Производитель имеет право на внесение изменений в дизайн, комплектацию, а также в технические характеристики изделия в ходе совершенствования своей продукции без дополнительного уведомления об этих изменениях.**