

INVOLIGHT



DMX LED silent knight PAR64,no fan



SUPERSPOT200

USER MANUAL

DMX LED silent knight PAR64,no fan Manual

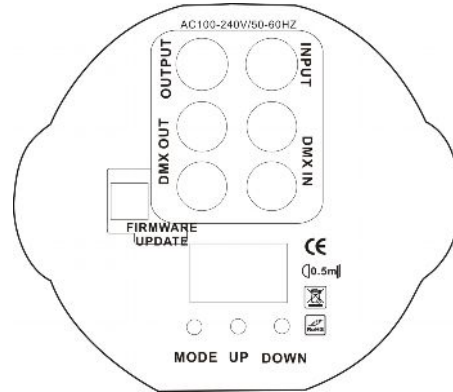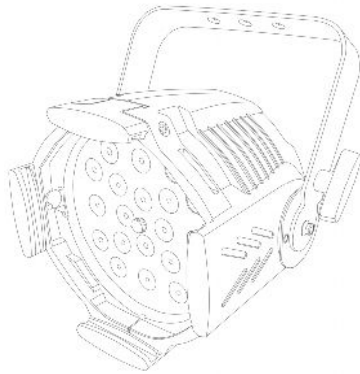

Size:225*300*310mm

Weight:4.7kg

Power input:AC 120V/240,47HZ/63HZ

Wattage:75W

LEDS: 20*Tri-3W

Beam angle: 30degrees

Housing: die-cast, black(white optional)

Built-in programs, sound active, M/S mode, DMX mode, static colors

LCD display for easier operation

3Pin and 5Pin XLR sockets available

Programs can be updated by the socket

No fan cooling, no noise at all

Suitable for studios, conferences...

Two brackets, color frame, barndoors available upon request

inner box: 35.5*36.5*28cm

master carton:37.5*38.5*59cm

2 pcs/ctn

There are many effects ,totally 12 modes .

1. Auto run mode

Press MODE ,enter auto run mode “PROGRAM” 。

Press UP or DOWN ,slect the effect program 001~008。

2. Built in programs

Press MODE ,enter setup program run mode “SPEED”。

Press UP or DOWN ,setup speed value 000~031。

3. Sound mode

Press MODE ,enter the sound mode “SOUND”。

Press UP or DOWN ,setup sound mode sensitivity value SENS 000~031

4. Dimming mode

Press MODE ,enter the dimming mode “SETUPDIM”。

Press UP or DOWN ,dimming mode value setup as 000%-100%。

5. Red color mode
Press MODE ,enter red color mode “COLORSET XXX% RED”。
Press UP or DOWN ,red color diming value as 000%-100%。
6. Green dimming mode
Press MODE ,enter the red color mode “COLORSET XXX% GRE”。
Press UO or DOWN ,red color dimming value as 000%-100%。
7. Blue dimming mode
Press MODE ,enter the red dimming mode “COLORSET XXX% BLU”。
Press UP or DOWN ,red dimming value as 000%-100%。
8. Dimming setup mode
Press MODE ,enter the dimming setup mode “RESET HOLD +/-”。
Press UP or DOWN more than 3 seconds,dimming value recover as 100%
9. LED display screen in poor light setup and the temperature display mode
Press MODE ,enter the LED display screen in poor light setup and the temperature display mode “SETUP XXXX XXXX”。
Press DOWN ,when on the LED display screen in poor light trun on “DISP ON”、 LED display screen in poor light trun off .temperature display mode “TEMP XXX”、 these will be cut over
(When on the LED display screen in poor light “DISP OFF” mode ,after 20 seconds it will be turn off .you canthrough the touch mode to open it.)
10. Slave mode
Press MODE ,enter slave mode “DMX SLAVE”。
The effect of the master light run the the master light ,always the same with the slave light
11. DMX address setup mode
Press MODE,enter DMX address setup mode “DMX ADD”。
Press UP or DOWN ,setup DMX address value A001~A512。
12. DMX controller mode
Press MODE ,enter setup DMX mode DMX MODE X。
Press UP or DOWN ,setup DMX mode MODE 1、 MODE 2、 MODE 3、 MODE 4、 MODE 5、 MODE 6。

Channels: 1、 2、 3、 5、 6、 7

DMX model: 1ch

CHANNEL	VALUE	FUNCTION
CH1	0-255	0=OFF 1-255 = different color (36)

DMX mode2: 2ch

CHANNEL	VALUE	FUNCTION
CH1	0-255	0=OFF 1-255 = different color (36)
CH2	0-255	MASTER DIMMER

DMX mode 3: 3ch

CHANNEL	VALUE	FUNCTION
CH1	0-255	RED
CH2	0-255	GREEN
CH3	0-255	BLUE

DMX mode 4: 5ch

CHANNEL	VALUE	FUNCTION
CH1	0-255	RED
CH2	0-255	GREEN
CH3	0-255	BLUE
CH4	0-255	0-15 = NO FUNCTION 16-255 = STROBE
CH5	0-255	MASTER DIMMER

DMX mode5: 6ch

CHANNEL	VALUE	FUNCTION
CH1	0-255	RED
CH2	0-255	GREEN
CH3	0-255	BLUE
CH4	0-255	0-15 = NO FUNCTION 16-255 = STROBE
CH5	0-255	MASTER DIMMER
CH6	0-31	Inactiv
	32-63	AutomaticDimming (upwards)
	64-95	AutomaticDimming (downwards)
	96-127	AutomaticDimming 3 color (upwards and downwards)
	128-159	AutomaticDimming 7 color (upwards and downwards)
	160-191	3 color chase
	192-223	7 color chase
	224-255	Sound mode

DMX mode6: 7ch

CHANNEL	VALUE	FUNCTION
CH1	0-255	RED
CH2	0-255	GREEN
CH3	0-255	BLUE
CH4	0-255	0=OFF 1-255 = different color (36)
CH5	0-255	0-15 = NO FUNCTION 16-255 = STROBE

CH6	0-31	Inactiv
	32-63	AutomaticDimming(upwards)
	64-95	AutomaticDimming(downwards)
	96-127	AutomaticDimming 3 color (upwards and downwards)
	128-159	AutomaticDimming 7 color (upwards and downwards)
	160-191	3 color chase
	192-223	7 color chase
	224-255	Sound mode
CH7	0-255	MASTER DIMMER

INVOLIGHT